FR SERIES

PARTS LIST

VERSION
July, 1999

PARTS LIST I

INDEX II

[ATTENTION]

★ If you want to orders spare parts, please make sure of what is the spare parts you want referring to Parts List, and never fail to inform us the number, name and quantity of the spare parts you want referring to Index.

★ It should be agreed that some parts will be modified or added without prior information.

★ The parts composing of an unit are marked ' * ' before their names and arranged just below the name of the unit.

In case the parts marked with ' * ' is also an assembly, its components are marked ' ** ' before their names.

★ As the not-numbered parts in Parts List can't be ordered, please order the unit including the not-numbered parts if you want them.

★ The actual parts to be shipped may differ in parts number in the last three digits from those on this parts list, but they are compatible.

I. PARTS LIST

Fig. 1 MAIN BODY AREA I-2
Fig. 2 ELEVATOR – SCRAPER AREA I-6
Fig. 3 PAPER-FEED TRAY (FR2950) I-8
Fig. 4 PAPER-FEED TRAY (FR3950) I-10
Fig. 5 DRIVE MECHANISM AREA (FR2950) I-12
Fig. 6 DRIVE MECHANISM AREA (FR3950) I-16
Fig. 7 ROLLER SYSTEM AREA (FR2950) I-20
Fig. 8 ROLLER SYSTEM AREA (FR3950) I-22
Fig. 9 SQUEEGEE-INK PUMP UNIT AREA (Black) I-24
Fig. 10 SQUEEGEE-INK PUMP UNIT AREA (Color) I-28
Fig. 11 DRUM-SCREEN AREA (FR2950) I-32
Fig. 12 DRUM-SCREEN AREA (FR3950) I-34
Fig. 13 LOCK LEVER AREA I-36
Fig. 14 CLAMP-PRESSURE CONTROL AREA I-38
Fig. 15 SEPARATOR AREA (FR2950) I-40
Fig. 16 SEPARATOR AREA (FR3950) I-42
Fig. 17 SUCTION UNIT I-44
Fig. 18 PRECISION STACKING TRAY I-46
Fig. 19 ADF AREA (1) I-48
Fig. 20 ADF AREA (2) I-50
Fig. 21 SCANNER AREA (1) I-54
Fig. 22 SCANNER AREA (2) I-56
Fig. 23 MASTER-MAKING AREA (1) (FR2950) I-58
Fig. 24 MASTER-MAKING AREA (2) (FR2950) I-60
Fig. 25 MASTER-MAKING AREA (1) (FR3950) I-62
Fig. 26 MASTER-MAKING AREA (2) (FR3950) I-64
Fig. 27 CUTTER UNIT I-66
Fig. 28 MASTER REMOVAL UNIT (FR2950) I-68
Fig. 29 MASTER REMOVAL UNIT (FR3950) I-70
Fig. 30 MASTER DISPOSAL BOX I-72
Fig. 31 ELECTRICAL COMPONENT AREA (1) I-74
Fig. 32 ELECTRICAL COMPONENT AREA (2) I-76
Fig. 33 ELECTRICAL COMPONENT AREA (3) I-78
Fig. 34 EXTERIOR COVER AREA I-80
Fig. 35 STAGE COVER I-82
Fig. 36 DIGITIZER I-84
Fig. 37 SC UNIT I-86

Fig. 1 MAIN BODY AREA

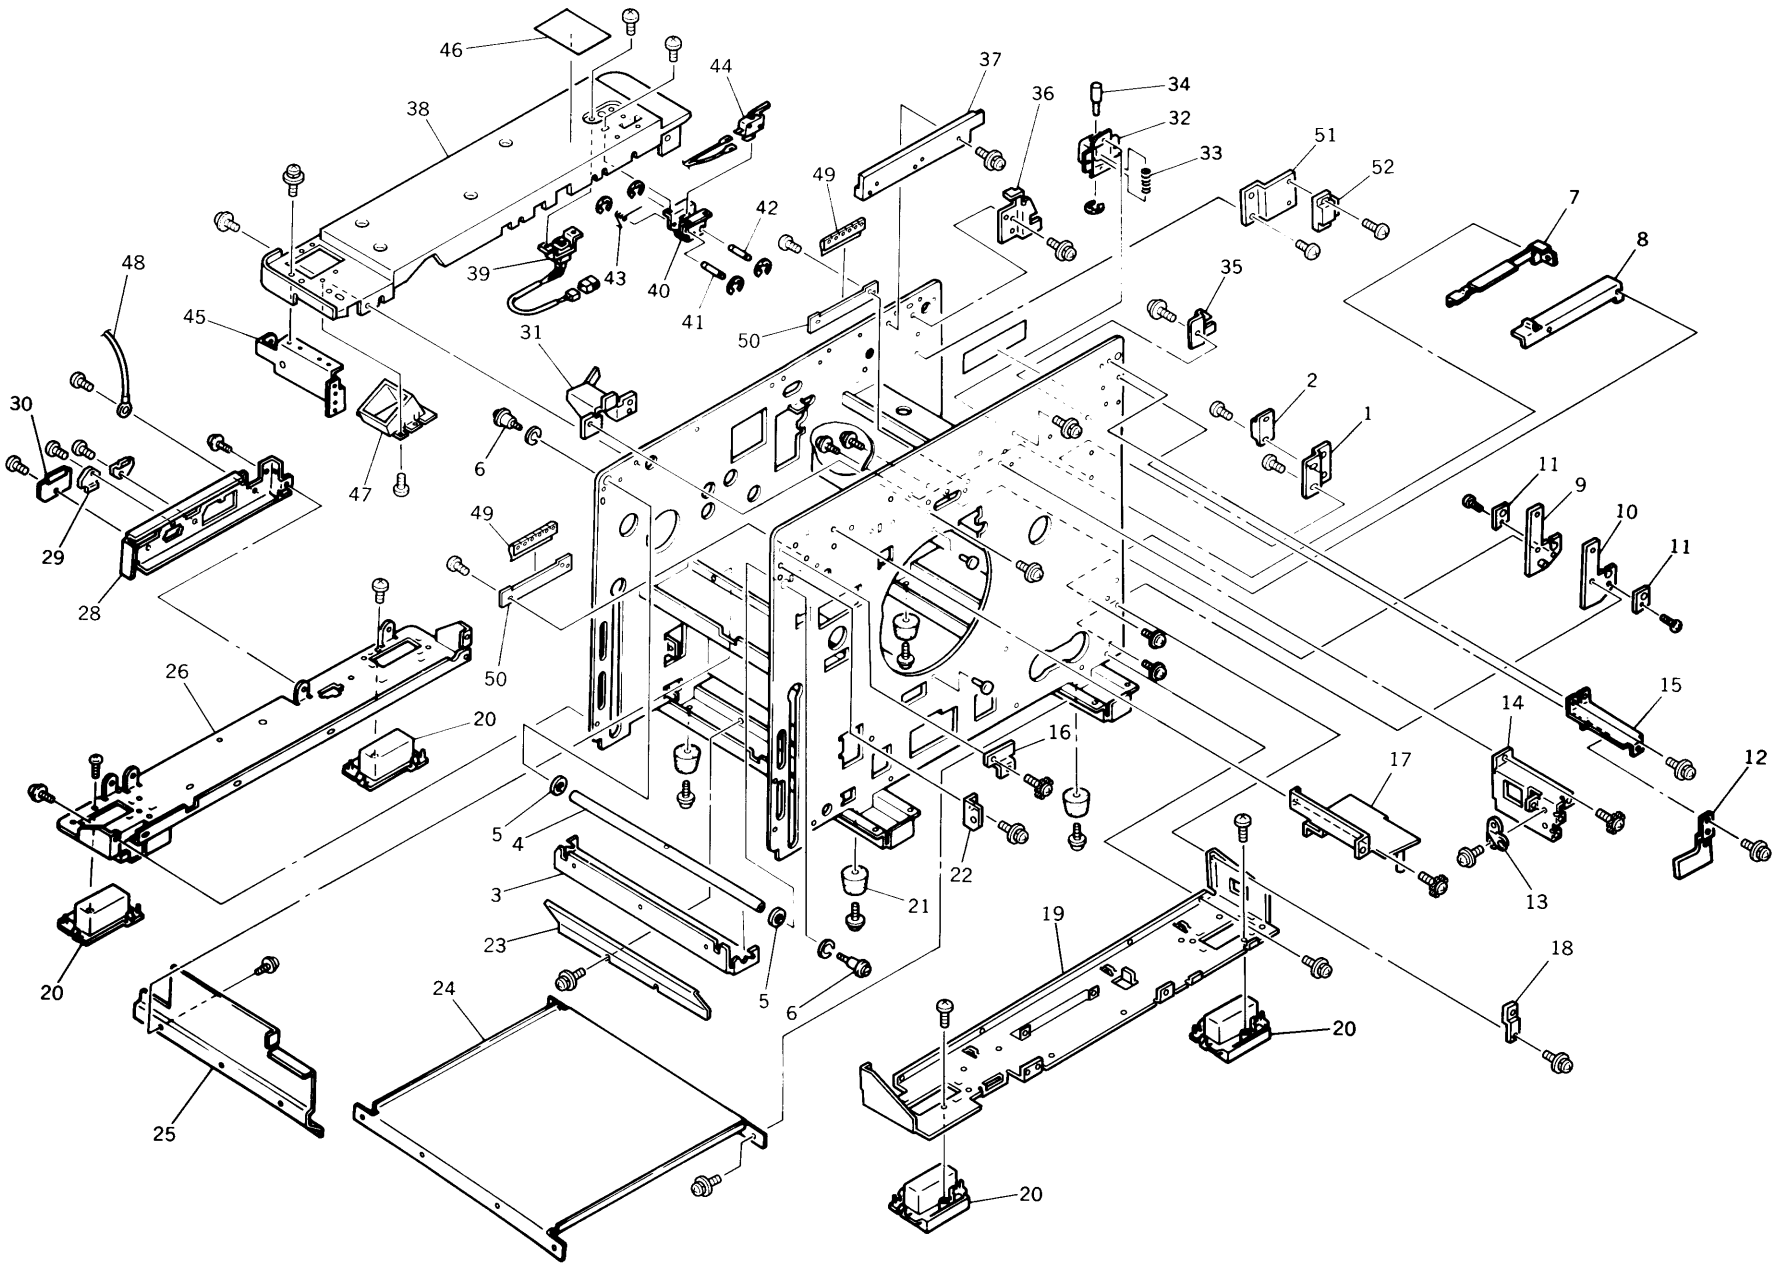

Fig. 1 Main Body Area

No.	Part No.	Part Name	Q'ty	Remark
	011-93110-017	Magnet Catch Ass'y; P. -Rcv.-T.		
1	011-13122-109	*Bracket; Magnet Catch; P. -Rcv.-T.	1	
2	660-05000-018	*Magnet Catch SM50P	1	
3	019-46205-008	Fulcrum Support Plate; FB; CE	1	A3
3	018-36207-005	Fulcrum Support Plate; FB; CE	1	B4, A4, L
4	019-26201-006	Fulcrum Shaft; FB	1	A3
4	018-16201-000	Fulcrum Shaft; FB	1	B4, A4, L
5	607-09001-003	Metal; S14 x 18 x 4.5	2	
6	018-16202-007	Stepped Screw; M6 x 10	2	
7	019-23205-108	Bracket R; Suction; A3	1	A3
7	017-23202-104	Bracket RII; Suction	1	B4, A4, L
8	019-23204-004	Bracket F; Suction; A3	1	A3
8	017-23201-000	Bracket FII; Suction	1	B4, A4, L
9	019-43102-003	Set Plate R; P. -Rcv.-T.; A3	1	A3
9	018-33121-002	Set Plate R; P. -Rcv. -T.	1	B4, A4, L
10	019-43101-007	Set Plate F; P. -Rcv.-T.; A3	1	A3
10	018-33120-006	Set Plate F; P. -Rcv. -T.	1	B4, A4, L
11	019-13119-009	Lock Plate; P. -Rcv.-T.	2	
12	011-17231-000	Set Plate Upper; Front Right Cover	1	
	018-97220-004	Keyboard Bracket D Ass'y		
13	002-17017-203	*Cover Catch B; Front	1	
14	018-37113-004	*Bracket D; Keyboard	1	
15	011-17206-005	Bracket E; Keyboard	1	
16	018-37114-000	Bracket C; Keyboard	1	
17	018-37110-005	Upper Hinge	1	
18	011-17209-012	Set Plate; Front Right Cover	1	
19	018-37106-008	Bottom Plate (Front)	1	
20	017-17220-109	Carrying Grasp	4	
21	660-01000-200	Rubber Foot K-45	4	
22	018-37128-001	Bracket; Left Cover	1	
23	018-31615-008	Cover R; Stripper	1	
24	014-11114-100	Bottom Cover; A3; CE	1	A3
24	011-11113-315	Bottom Cover; CE	1	B4, A4, L
25	014-14119-405	Front Cover; M.-Rmv.; A3; CE	1	A3
25	011-14120-304	Front Cover; M. -Rmv.; CE	1	B4, A4, L

No.	Part No.	Part Name	Q'ty	Remark
26	017-17217-400	Bottom Plate (Left); CE	1	
	018-97240-005	Mount Conncector Ass'y		*1
	017-97240-008	Mount Conncector Ass'y		
28	018-37201-108	*Mount II; Connector	1	*1
28	017-17221-105	*Mount; Connector	1	
29	017-17222-101	*Blind Plate C; Connector	2	
30	017-17223-108	*Blind Plate D; Connector	1	
31	019-25006-307	Bracket; Wire Harness; CE	1	A3
31	017-15113-305	Bracket; Wire Harness	1	B4, A4, L
32	018-16241-100	Bracket; Damper Stopper; CE	1	
33	018-16242-009	Spring; Damper Stopper	1	
34	018-16243-102	Cap; Damper Stopper	1	
35	018-16229-100	Hook Plate (F); FB; CE	1	
36	019-17252-307	Hook Plate (R); FB; CE	1	
37	019-17251-203	Lock Plate; Support Shaft	1	
	019-96110-113	Unit/Upper Rear Frame; FB; CE		A3
	018-96120-103	Unit/Upper Rear Frame; FB; CE		B4, A4, L
38	019-26218-200	*Upper Rear Frame; FB; CE	1	A3
38	018-26213-007	*Upper Rear Frame; FB; CE	1	B4, A4, L
39	019-60014-100	*Switch A; CE	1	
40	017-16121-000	*Bracket; Upper Cover Set SW	1	
41	017-16122-006	*Shaft A; Upper Cover Set SW	1	
42	017-16123-002	*Shaft B; Upper Cover Set SW	1	
43	017-16124-106	*Spring; Upper Cover Set SW	1	
44	443-02004-002	*Micro-SW; AM50039C331F1SW	1	
45	019-26217-000	Bracket; Back Cover; CE	1	A3
45	018-26216-006	Bracket; Back Cover; CE	1	B4, A4, L
46	550-21305-005	Seal; Master Cut	1	B4, A4, L
46	550-21300-003	Seal; Master Cut; Pic.	1	A3
46	550-21306-109	Seal; Master Cut; Pic.	1	B4, A4, L
47	019-16067-000	Cap 2; CE	1	
48	488-90021-002	Ground Wire; U3-1000-R4	1	

Fig. 1 Main Body Area

No.	Part No.	Part Name	Q'ty	Remark
49	481-30007-000	Ground Finger	2	
50	019-11501-305	Bracket; Ground Finger	2	
	017-93110-100	Magnet Catch Ass'y D; P. -Rcv.-T.; CE		
51	017-23405-307	*Bracket D; Magnet Catch; P. -Rcv.-T.; CE	1	
52	660-05000-018	*Magnet Catch SM50P	1	
*1	All FR3950-α models only			

No.	Part No.	Part Name	Q'ty	Remark

MEMO

Fig. 2 ELEVATOR – SCRAPER AREA

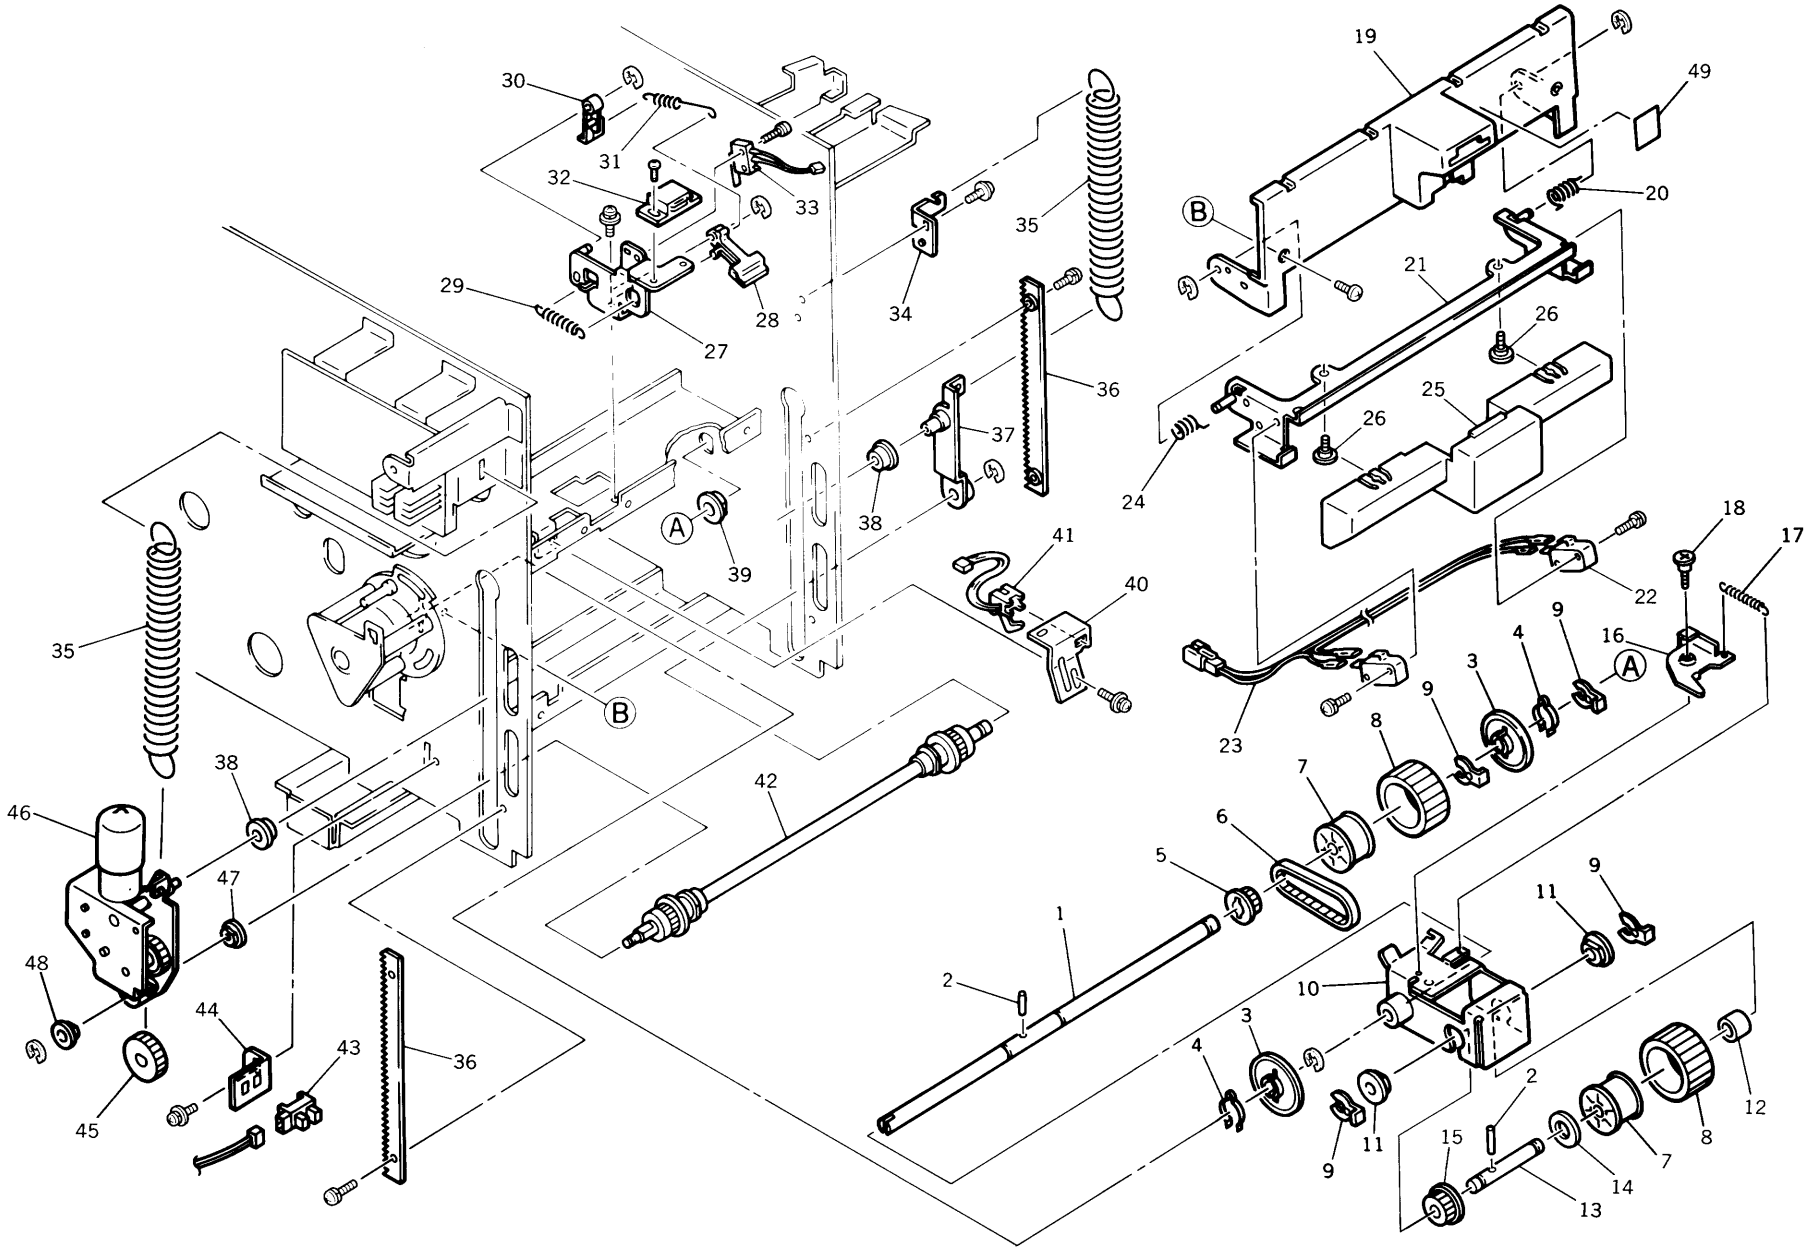

Fig. 2 Elevator - Scraper Area

No.	Part No.	Part Name	Q'ty	Remark
	019-91811-458	Scraper Ass'y; CE		A3
	017-91813-405	Scraper Ass'y; CE		B4, A4, L
1	019-21805-205	*Shaft; Pickup Roller	1	A3
1	017-11811-300	*Shaft; Pickup Roller	1	B4, A4, L
2		*Pin; ϕ2 x 14	2	Ref.Pg.II-36
3	011-11522-002	*Paper Guide Roller	2	
4	000-06123-007	*Stopper; Paper Guide Roller	2	
5	611-42100-001	*Pulley; P21-3M060 (HTD)	1	
6	620-31776-002	*Belt; 177-3M-6	1	
	019-11810-103	*Pickup Roller Ass'y	2	
7	006-11332-009	**Core; Pickup Roller	1	
8	019-11806-106	**Rubber Roller; Pickup	1	
9	019-11812-106	*Lock Ring	3	
10	019-11801-104	*Holder Plate; Scraper; CE	1	
11	607-16000-802	*Metal; F10 x 18/16 x 5; 22 x 1.5	2	
12	017-11818-002	*Scraper Collar	1	
13	017-11812-004	*Shaft; Scraper	1	
14	638-90000-012	*Washer; 18 x 10.4 x 0.4	1	
15	611-42600-004	*Pulley; P26-3M060 (HTD)	1	
16	019-11803-000	*Upper Arm; Scraper	1	
17	019-11804-006	*Spring; Scraper	1	
18	635-17613-004	*Stepped Screw; M3 x 4	1	
7	006-11332-009	Core; Pickup Roller	1	
8	019-11806-106	Rubber Roller; Pickup	1	
9	019-11812-106	Lock Ring	1	
	019-91800-200	Feed Tray Safety SW Ass'y; A3; CE		A3
	017-91805-100	Feed Tray Safety SW Ass'y II; CE		B4, A4, L
19	019-41801-109	*Cover; Pickup Roller; CE	1	A3
19	017-31801-106	*Cover; Pickup Roller; CE	1	B4, A4, L
20	017-11819-009	*Spring F; Safety SW	1	
21	019-21802-206	*Bracket; Feed Tray Safety SW; CE	1	A3
21	018-31622-004	*Bracket; Feed Tray Safety SW	1	B4, A4, L
22	443-02000-708	*Micro-SW; AM50630A331	2	
23	019-55032-000	*Wire Harness; Feed Tray Safety SW	1	
24	017-11820-007	*Spring B; Safety SW	1	

No.	Part No.	Part Name	Q'ty	Remark
25	018-31621-105	Scraper Cover	1	B4, A4, L
25	019-41611-008	Scraper Cover;A3	1	A3
26	635-17613-004	Stepped Screw; M3 x 4	2	
	019-91830-002	P.-F. Pressure Adj. Lever Ass'y		
27	017-11805-008	*Bracket; P.-F. Pressure Adj. Lever	1	
28	011-11810-105	*P.-F. Pressure Adj. Lever	1	
29	011-11815-000	*Spring: P.-F. Pressure Adj. Lever	1	
30	017-11808-007	*Hook; P.-F. Pressure Adj.	1	
31	019-11811-100	*Spring B; P.-F. Pressure Adj.	1	
32	660-05000-301	*Magnet Catch; SM-41	1	
33	017-60025-000	*Micro-SW Ass'y 3	1	
34	017-11640-009	Bracket; Elevator Spring	1	
35	019-21602-002	Spring; Elevator	2	A3
35	017-11641-005	Spring; Elevator	2	B4, A4, L
36	002-11719-303	Rack; Elevator	2	
37	017-11602-301	Link Plate; Elevator	1	
38	002-11717-009	Collar; Elevator	2	
39	607-16000-403	Metal; F10 x 15/14 x 5.5; 20 x 2.5	1	
40	019-11814-206	Bracket; Upper Limit Sensor	1	
41	017-60007-001	Upper Limit Sensor	1	
42	019-91600-007	Shaft; Elevator	1	A3
42	017-91610-008	Shaft; Elevator	1	B4, A4, L
43	443-31003-007	Sensor; OJ-620331	1	
44	017-11648-000	Bracket; Lower Limit Sensor	1	
45	017-11649-006	Gear; Elevator	1	
46	017-91620-003	Unit/Elevator Motor	1	
47	607-15000-000	Metal; F8 x 13/12 x 5; 16 x 2	1	
48	607-12001-006	Metal; F5 x 10/9 x 4; 12 x 1.5	1	
49	550-20687-001	Seal; P.-Feed Pressure	1	
49	550-20688-008	Seal; P.-Feed Pressure; Pic.	1	

Fig. 3 PAPER-FEED TRAY(FR2950)

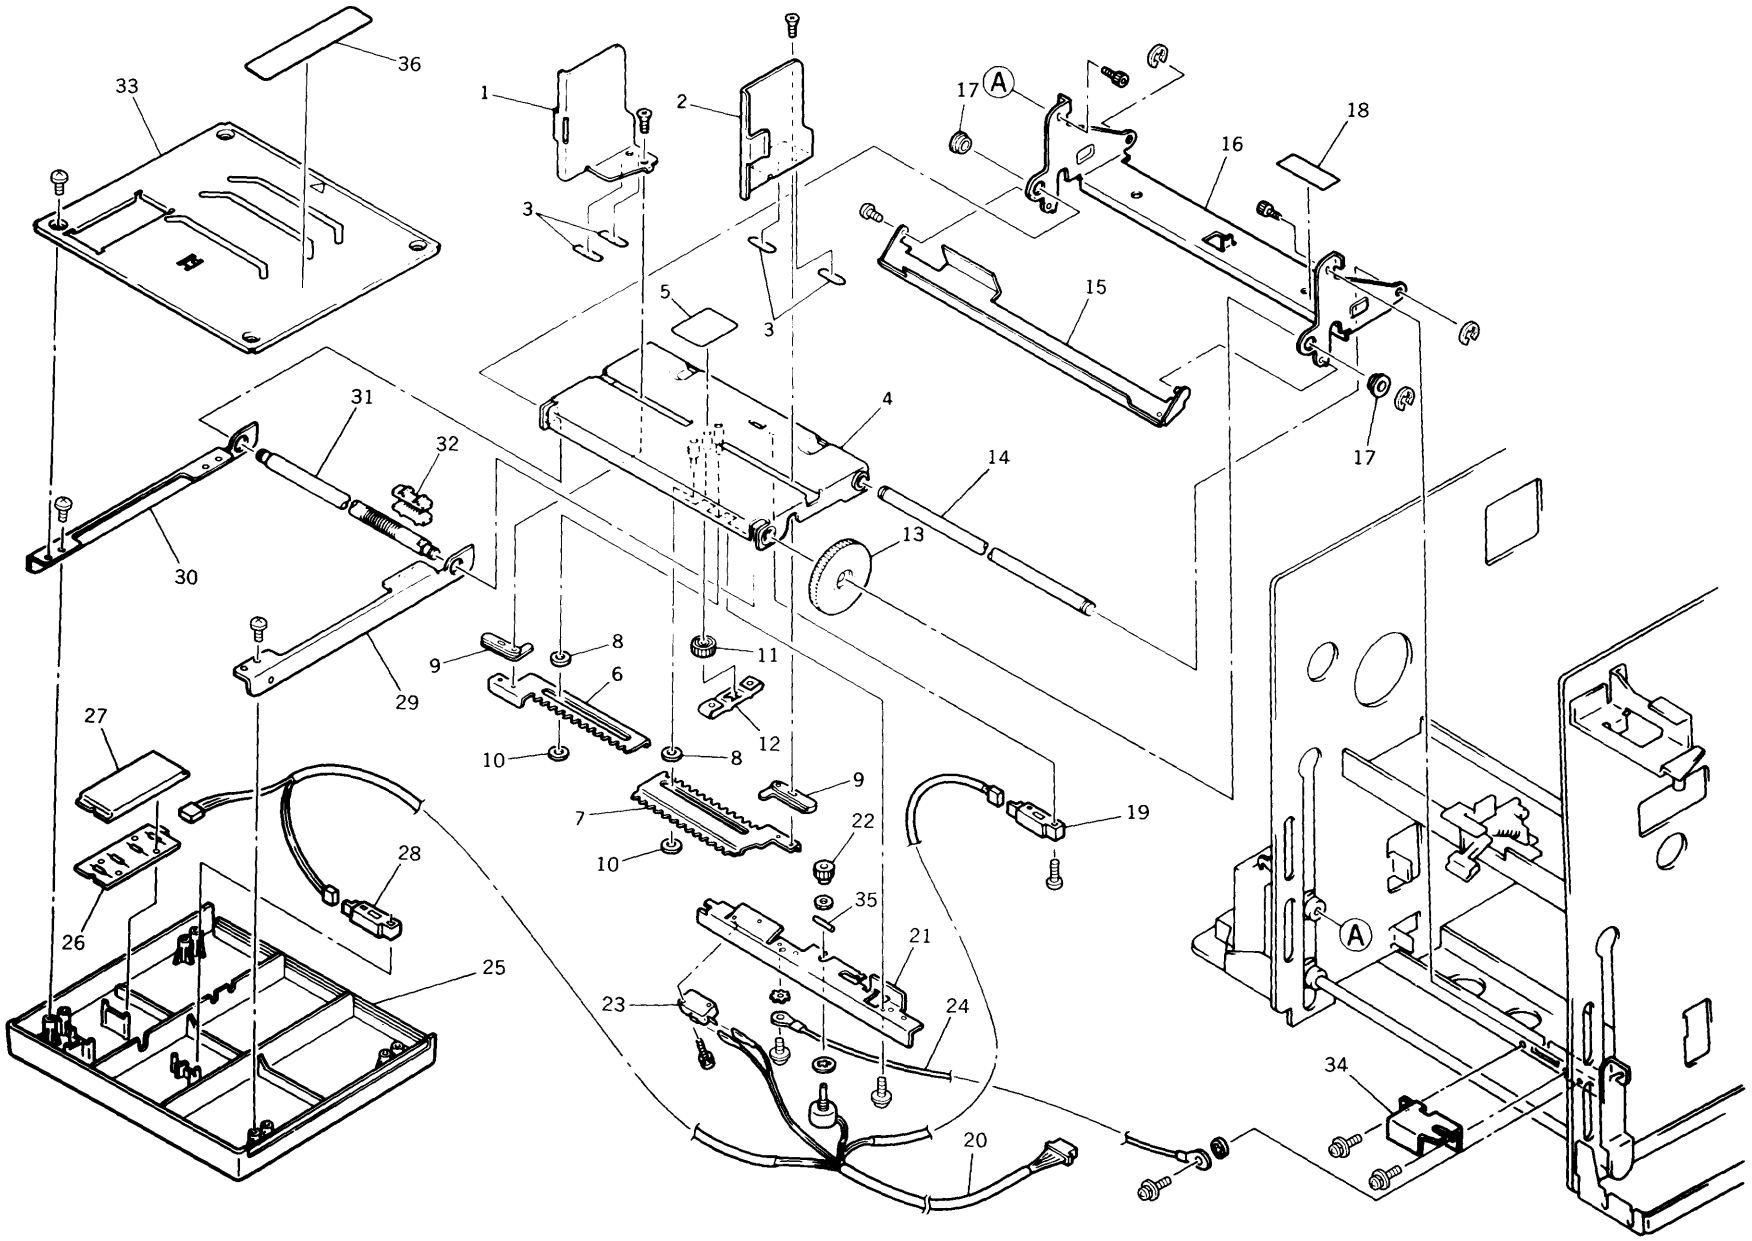

Fig. 3 Paper-Feed Tray (FR2950)

No.	Part No.	Part Name	Q'ty	Remark
	017-91510-216	Unit/Paper-Feed Tray II; CE		
	017-91512-219	Unit/Paper-Feed Tray II; US		U.S.A.
1	011-11510-209	*Side Guide L; P. -F. -T.	1	
2	011-11509-200	*Side Guide R; P. -F. -T.	1	
3	019-11524-100	*Slide Sheet; P. -F. -T.	4	
4	017-41501-100	*Paper Feed Tray; CE	1	
5	011-11516-002	*L. O. Sheet	1	
6	017-11512-205	*Slide Rack; P. -F. -T.; CE	1	
7	017-21507-200	*Slide Rack F; P. -F. -T.; CE	1	
8	011-11513-003	*Collar; Slide Rack; P. -F. -T	2	
9	019-11522-108	*Link Plate; Side Guide; P. -F. -T.	2	
10	638-90616-005	*Washer; 6.1 x 12 x 1.6	2	
11	011-11514-000	*Gear; Slide Rack; P. -F. -T.	1	
12	014-11533-006	*Spring; Slide Rack	1	
13	011-11524-005	*Adj. Dial	1	
14	011-11503-008	*Shaft B; P. -F. -T.	1	
15	017-11513-406	*Actuater Plate; P. -F. -T.; CE	1	
16	017-31503-008	*Bracket; P. -F. -T.; CE	1	
17	607-15006-009	*Metal; F8x16x5; 18x1.1	2	
18	550-20590-105	*Seal; P. -F. -T.	1	
18	550-21121-001	*Seal; P. -F. -T.; US	1	U.S.A.
19	443-30002-007	*Sensor K; PS-R11LB	1	
20	019-55016-307	*Wire Harness II; P. -F. -T.	1	
21	017-11518-505	*Bracket; Size VR; P. -F. -T.; CE	1	
22	017-11516-103	*Size Gear; P. -F. -T.	1	
23	443-02000-708	*Micro-SW; AM50630A331	1	
24	488-90026-004	*Ground Wire; P. -F. -T.	1	
25	011-11529-309	*Feed Board Cover	1	
27	017-11519-102	*Lead SW Cover; P. -F. -T.; CE	1	
28	443-32001-008	*Sensor S; GP2A20L	1	
29	019-11521-209	*Support Plate L; Feed Board; CE	1	
30	019-11520-202	*Support Plate R; Feed Board; CE	1	
31	011-11502-109	*Shaft A; P. -F. -T.	1	
32	011-11523-106	*Adj. Nut; P. -F. -T.	1	
33	017-31517-106	*Feed Board II; CE	1	

No.	Part No.	Part Name	Q'ty	Remark
33	017-31530-102	*Feed Board II;US	1	U.S.A.
34	019-11502-000	Connector Cover	1	
35		Pin; ϕ2 x 10	1	Ref.Pg.II-36
36	550-21292-108	Seal; Paper Side Guide	1	
36	550-21505-004	Seal; Paper Side Guide; Ch	1	China
26	Not Available.	For domestic models only		

Fig. 4 PAPER-FEED TRAY(FR3950)

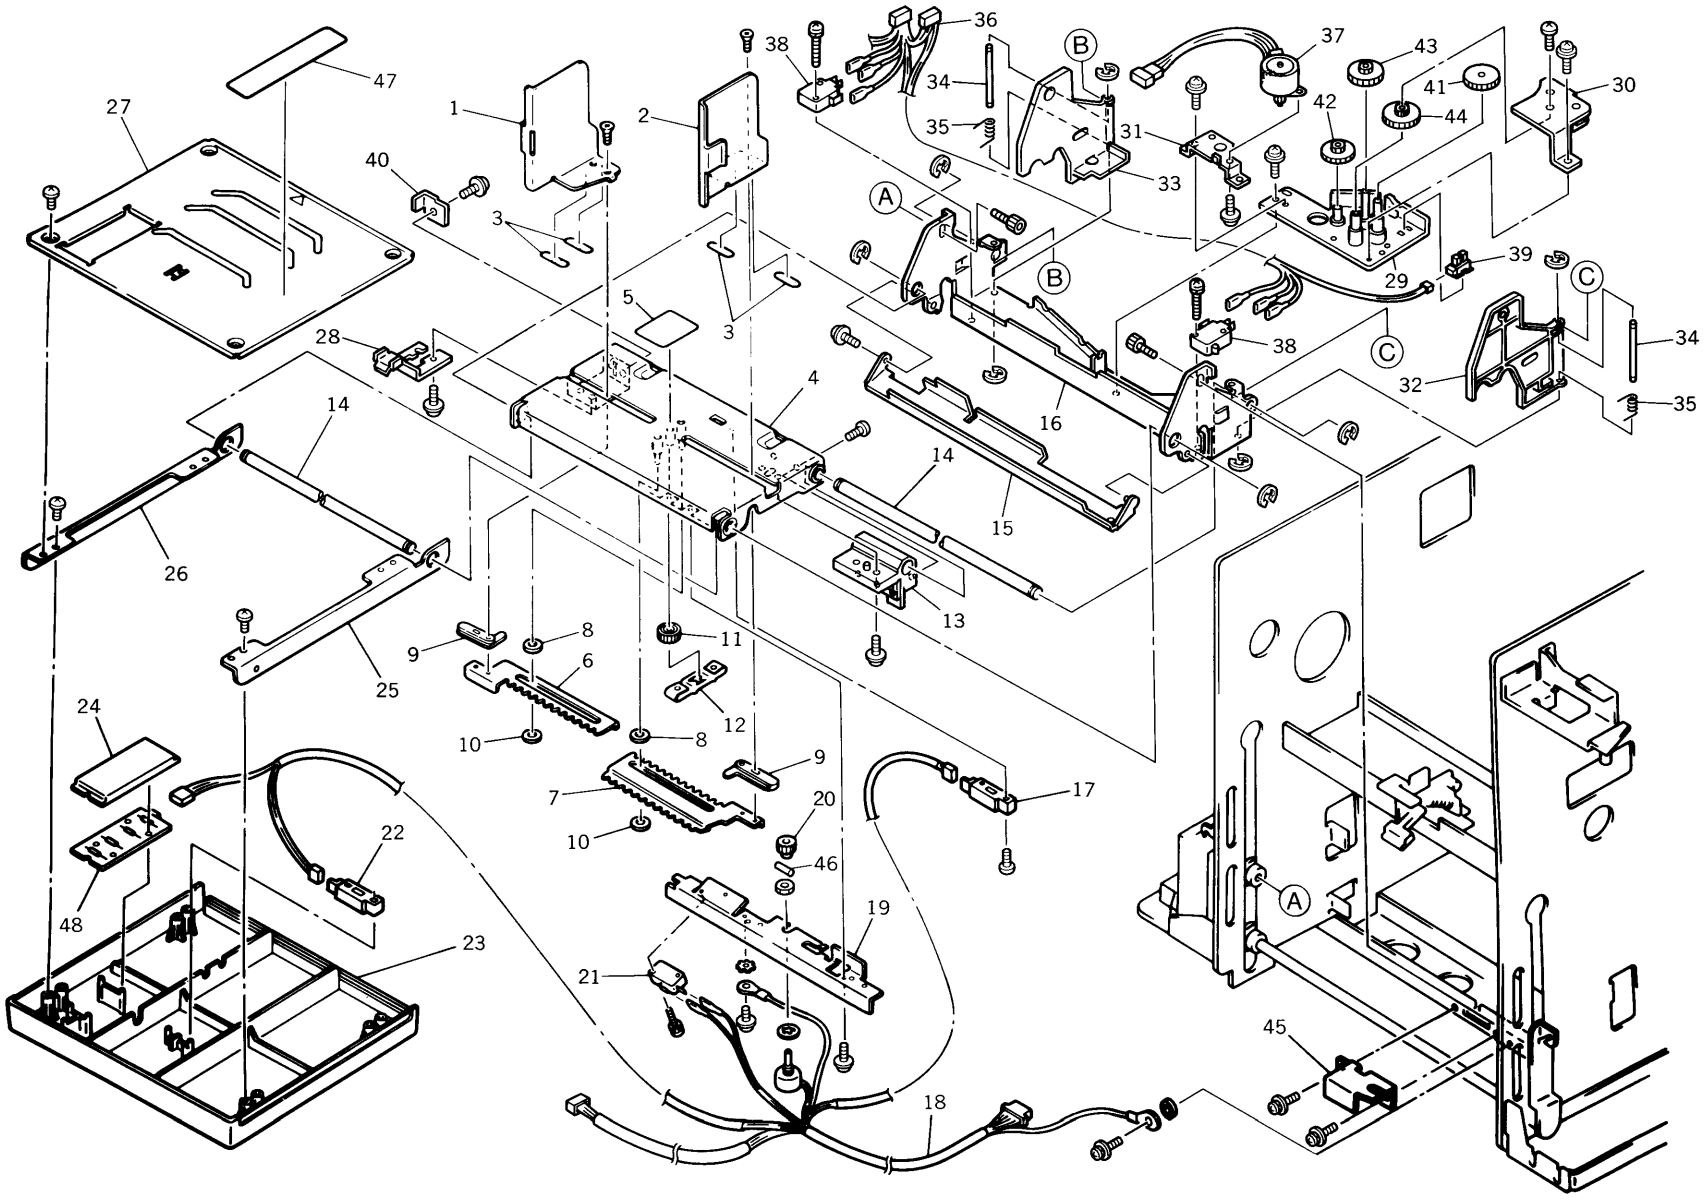

Fig.4 Paper-Feed Tray (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
	019-91510-008	Unit/Paper-Feed Tray; A3; CE		
	019-91511-004	Unit/Paper-Feed Tray; A3; US; CE		U.S.A.
1	011-11510-209	*Side Guide L; P. -F. -T.	1	
2	011-11509-200	*Side Guide R; P. -F. -T.	1	
3	019-11524-100	*Slide Sheet; P. -F. -T.	4	
4	019-41701-007	*Paper Feed Tray; CE	1	
4	019-41702-003	*Paper Feed Tray; US; CE	1	U.S.A.
5	011-11516-002	*L.O. Sheet	1	
6	019-21513-107	*Slide Rack; P. -F. -T.; CE	1	
7	019-21512-100	*Slide Rack F; P. -F. -T.; CE	1	
8	011-11513-003	*Collar; Slide Rack; P. -F. -T.	2	
9	019-11522-108	*Link Plate; Side Guide; P. -F. -T.	2	
10	638-90616-005	*Washer; 6.1 x 12 x 1.6	2	
11	011-11514-000	*Gear; Slide Rack; P. -F. -T.	1	
12	014-11533-006	*Spring; Slide Rack	1	
13	019-41726-000	*Rack; Drive; P.-F.-T.	1	
14	019-21501-001	*Shaft B; P. -F. -T.	2	
15	019-41732-000	*Actuater Plate; P. -F. -T.; CE	1	
16	019-41711-002	*Bracket; P. -F. -T.; CE	1	
17	443-32001-008	*Sensor S; GP2A20L	1	
18	019-55109-003	*Wire Harness II;P.-F.-T.	1	
19	019-41731-003	*Bracket; Size VR; P. -F. -T.; CE	1	
20	017-11516-103	*Size Gear; P. -F. -T.	1	
21	443-02000-708	*Micro-SW; AM50630A331	1	
22	443-30002-007	*Sensor K; PS-R11LB	1	
23	014-11529-203	*Feed Board Cover	1	
24	017-11519-102	*Lead SW Cover; P. -F. -T.; CE	1	
25	019-11521-209	*Support Plate L; Feed Board; CE	1	
26	019-11520-202	*Support Plate R; Feed Board; CE	1	
27	019-41519-004	*Feed Board; CE	1	
28	019-41707-005	*Cover; Wire Harness; P.-F.-T.	1	
29	019-41712-009	*Bracket; Drive ; P.-F.-T.	1	
30	019-41717-000	*Gear Cover	1	
31	019-41720-001	*Bracket; Motor; P.-F.-T.	1	
32	019-41727-006	*Cover F; P.-F.-T.	1	

No.	Part No.	Part Name	Q'ty	Remark
33	019-41728-002	*Cover R; P.-F.-T.	1	
34	019-41729-009	*Shaft; Cover; P.-F.-T.	2	
35	019-41730-007	*Spring; Cover; P.-F.-T.	2	
36	019-55108-007	*Wire Harness ;P.-F.-T.	1	
38	443-02017-007	**Mcro-SW; AM50610C431F1	2	
37	019-65022-003	*Pulse Motor	1	
39	443-31003-007	*Sensor; OJ-620331	1	
40	019-41708-001	*Stopper; P.-F.-T.	1	
41	612-12307-008	*Gear;m1x35x9	1	
42	612-80601-003	*Gear;m0.5x63+m0.8x14	1	
43	612-81300-007	*Gear;m0.8x36+m0.8x14	1	
44	612-81400-001	*Gear;m0.8x49+m1x14	1	
45	019-11502-000	Connector Cover	1	
46		Pin; ϕ2 x 10	1	Ref.Pg.II-36
47	550-21292-108	Seal; Paper Side Guide	1	
47	550-21505-004	Seal; Paper Side Guide; Ch	1	China
48	Not Available.	For domestic models only		

Fig. 5 DRIVE MECHANISM AREA (FR2950)

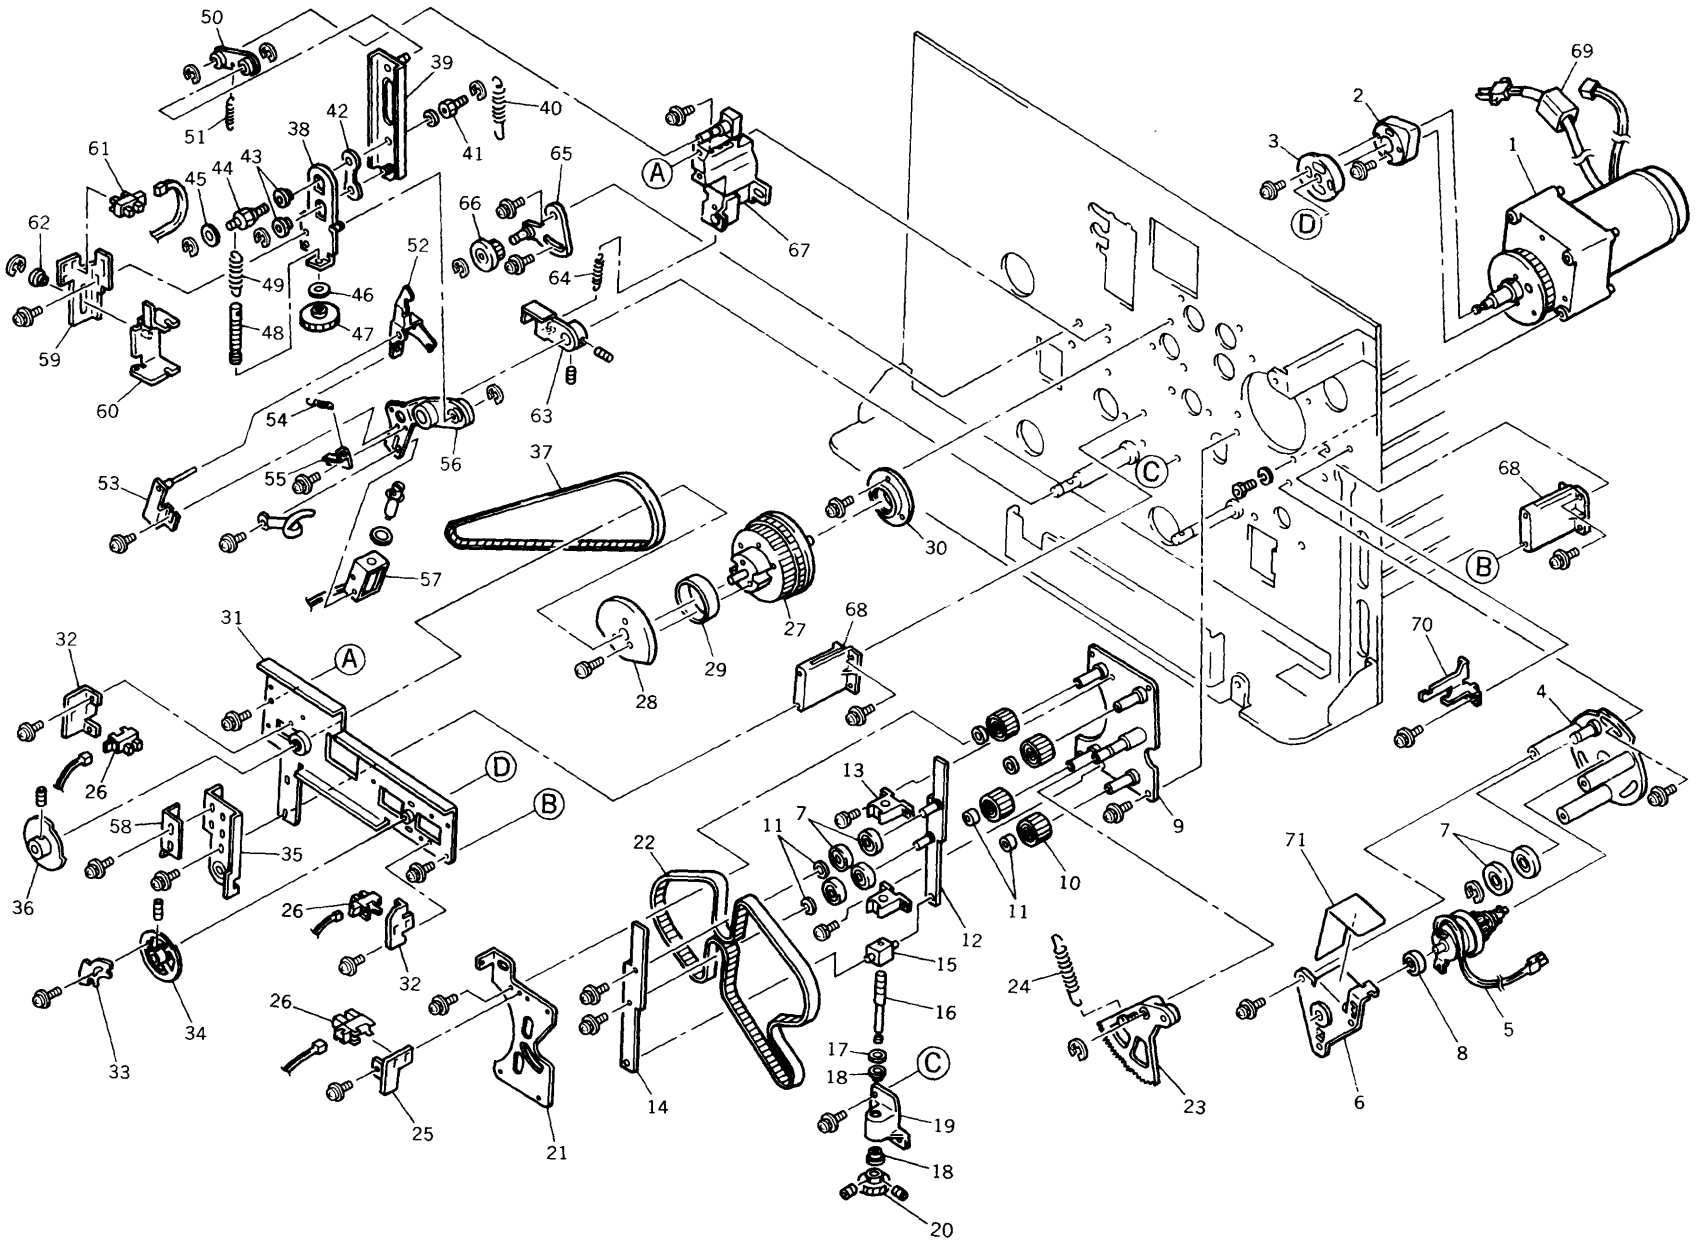

Fig. 5 Drive Mechanism Area (FR2950)

No.	Part No.	Part Name	Q'ty	Remark
	019-91211-000	Unit/Main Motor; T		
1	019-91212-007	*Main Motor Ass'y; T	1	
	011-60027-106	**Photoelectron Disc.	1	
	017-60031-000	**Encoder Sensor	1	
2	002-11220-015	*Cam; Guide Roller	1	
3	011-11240-309	*Cam; Timing Roller	1	
	019-91220-107	Unit/Drive; CE		
4	019-11213-008	*Base Plate; P. -F. Clutch	1	
5	019-65021-104	*P. -F. Clutch	1	
6	019-11220-209	*Bracket; P. -F. Clutch; CE	1	
7	600-08242-006	*Bearing; 628ZZ	6	
8	600-20061-009	*Bearing; 608ZZ	1	
9	011-11208-103	*Base Shaft Plate; Slide Plate	1	
10	019-11201-000	*Idler Pulley	4	
11	002-11227-001	*Spacer; Slide Plate	6	
12	019-11209-000	*Slide Plate (Base)	1	
13	002-11225-009	*Support Block; Slide Plate	2	
14	006-11224-109	*Slide Plate (Front)	1	
15	011-11231-008	*Shaft Block; Slide Plate	1	
16	011-11230-001	*Shaft; Slide Plate	1	
17	638-90616-005	*Washer; 6.1 x 12 x 1.6	1	
18	607-13000-003	*Metal; F6 x 10/9 x 4; 12 x 1.5	2	
19	011-11220-006	*Shaft Base Block; Slide Plate	1	
20	011-11232-004	*Gear; Slide Plate	1	
21	011-11227-000	*Reinforce Plate; Slide Plate	1	
22	620-78309-003	*Belt; 830-5GT-11	1	
23	002-11291-109	*Sector Gear	1	
24	011-11296-002	Spring; Sector Gear	1	
25	017-11201-200	Bracket A; Sensor	1	
26	443-31003-007	Sensor; OJ-620331	3	
	019-91226-008	Main Shaft Ass'y;A4	1	A4
27	019-91228-000	*Main Pulley; Main Shaft	1	
28	017-11238-006	*Cam; Pressure Roller; B4	1	
29	019-11256-009	Ring; Main Shaft	1	

No.	Part No.	Part Name	Q'ty	Remark
	019-91225-001	Main Shaft Ass'y	1	B4, L
27	019-91228-000	*Main Pulley; Main Shaft	1	
28	017-11237-000	*Cam; Pressure Roller; B4	1	
30	006-11216-106	Bearing House A; Main Shaft	1	
31	017-11209-405	Face Plate; Main Shaft	1	
32	017-11202-001	Bracket B; Sensor	2	
	019-91231-001	P Disc Ass'y		
33	019-11238-000	*Range Adj. Plate; P Disc	1	
34	019-11235-001	*P Disc	1	
35	019-11224-000	Face Plate; Pressure Shaft	1	
36	018-31201-009	Pressure Sensor Disc; B4	1	
37	620-97506-006	Belt; 750-3GT-6	1	
	017-91230-302	Pressure Link Ass'y		
38	019-11247-000	*Pressure Link II; Bottom	1	
39	017-11214-000	*Pressure Link; Top	1	
40	017-11226-008	*Spring B; Pressure Link	1	
41	017-11217-009	*Link Boss B	1	
42	017-11224-005	*Link Spacer	1	
43	607-15002-003	*Metal; F8 x 12 x 5; 16 x 2	2	
44	017-11216-002	*Link Boss A	1	
45	638-90804-006	*Washer; 8 x 15 x 0.4	1	
46	607-71420-004	*Washer; 14X20X0.8	1	
47	019-11245-007	*Gear; Pressure Adj. Screw	1	
48	019-11250-000	*Pressure Adj. Screw	1	
49	019-11251-007	*Spring; Pressure Link	1	
50	017-11223-009	*Linking Plate; Drive Base	1	
51	017-11234-108	*Spring; Linking Plate	1	
52	019-11226-002	*Hook Lever	1	
53	019-11231-103	*Shaft; Hook Lever	1	
54	019-11230-000	*Spring; Hook Lever	1	
55	011-11289-006	*Bracket; Hook Lever Spring	1	
56	011-11280-106	*Pressure Hook	1	
57	019-65012-008	*Pressure Solenoid	1	
58	019-11225-006	Resting Position Plate; Pressure Lever	1	

Fig.5 Drive Mechanism Area (FR2950)

No.	Part No.	Part Name	Q'ty	Remark
	017-91206-100	Pressure Det. Ass'y		
59	019-11252-003	*Bracket A II; Pressure Control	1	
60	019-11253-000	*Bracket B II; Pressure Control	1	
61	443-30005-006	*Sensor; GP1A71A	1	
62	607-11001-002	*Metal; F4 x 6 x 2.2; 8 x 1	1	
63	019-11240-102	Pressure Lever	1	
64	019-11223-003	Spring ; Pressure Link	1	
65	019-13610-209	Bracket; Tension Pulley	1	
66	011-11254-202	Tension Pulley	1	
67	017-11208-000	Base Shaft Plate; Pressure	1	
68	011-11234-201	Main Bracket; Face Plate	2	
69	435-00025-000	Core; SFC-6	1	
70	019-18051-100	Guide; Motor Wire Harness; CE	1	
71	019-11222-007	Cover; Paper Feed Clutch; CE	1	

No.	Part No.	Part Name	Q'ty	Remark

MEMO

Fig. 6 DRIVE MECHANISM AREA (FR3950)

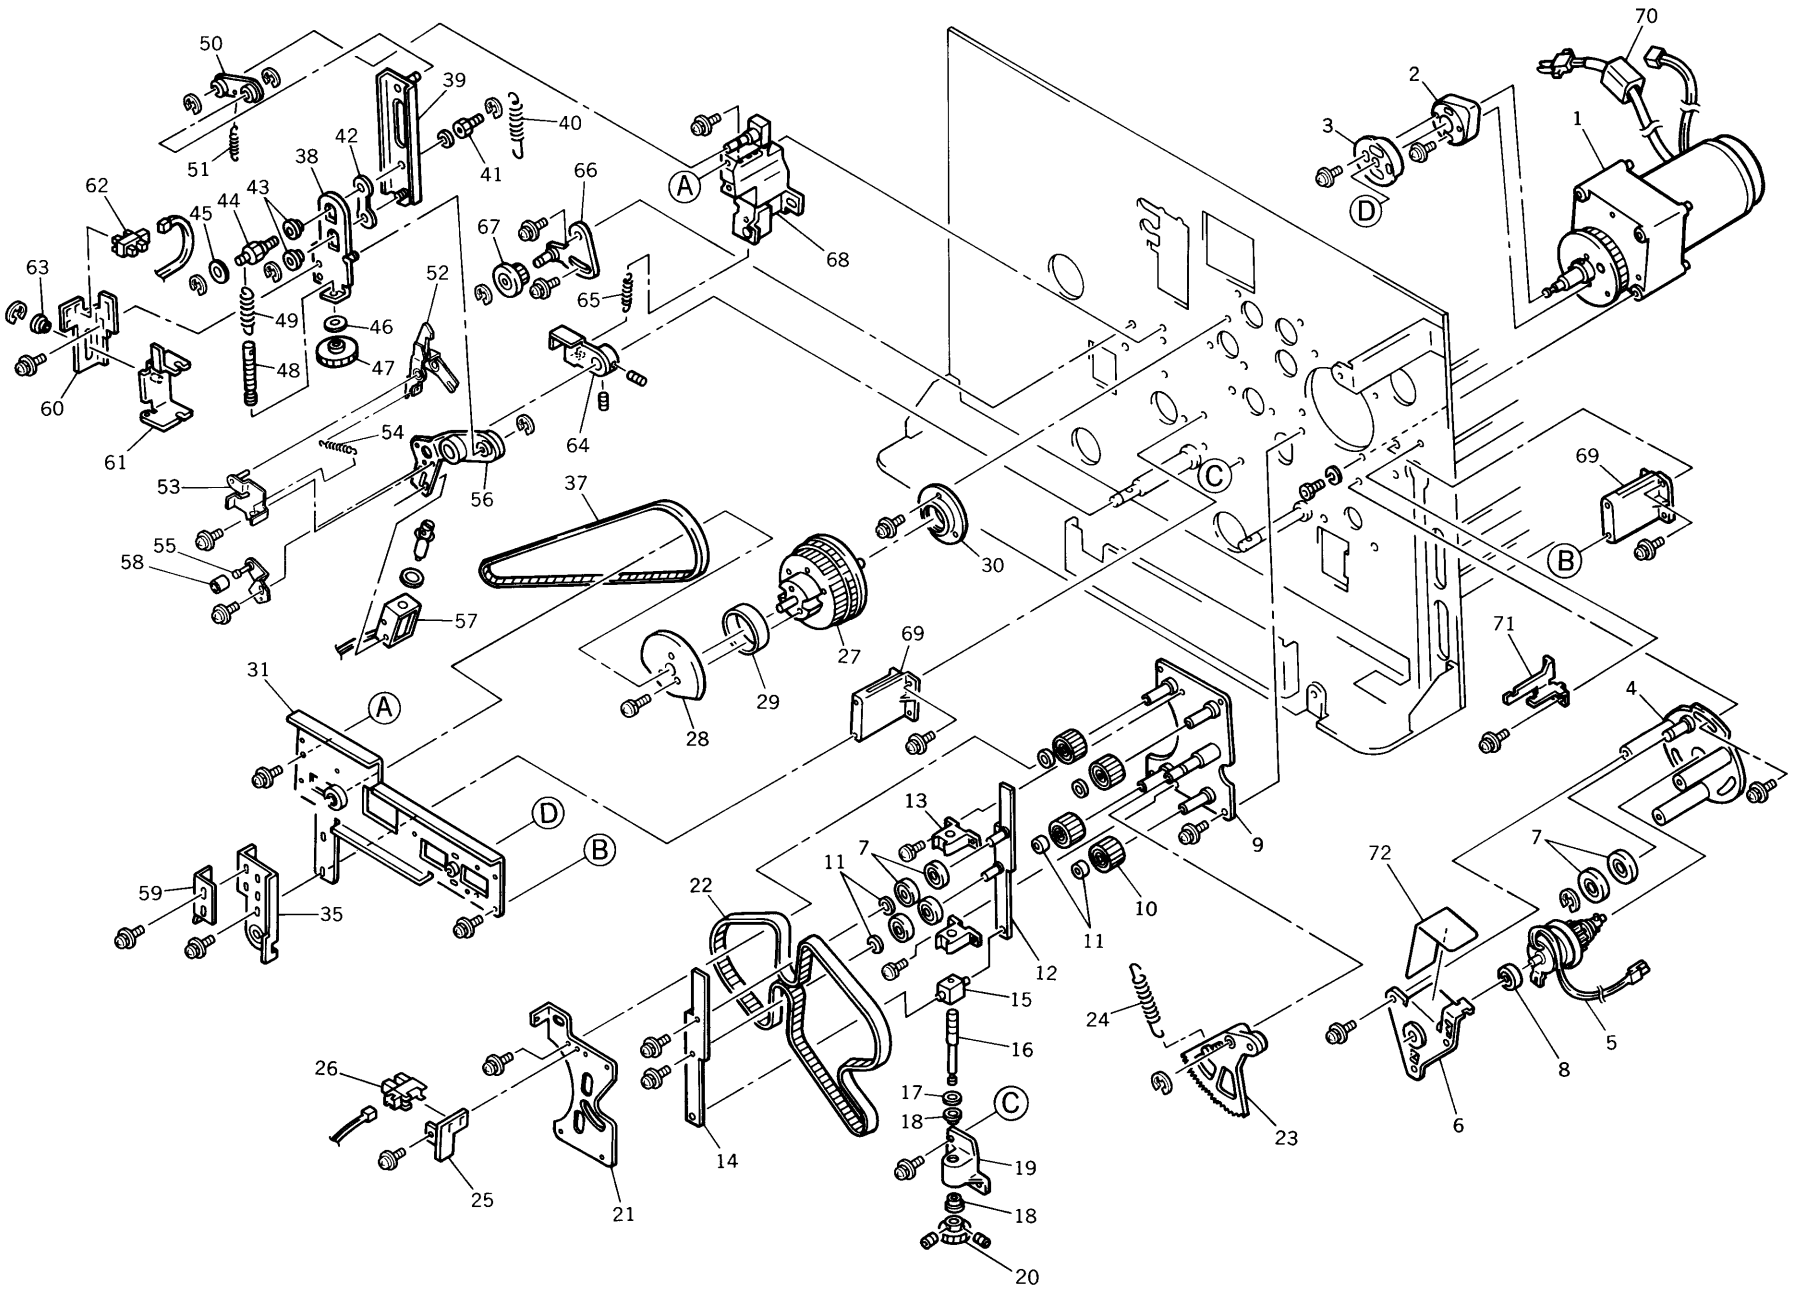

Fig. 6 Drive Mechanism Area (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
	019-91211-000	Unit/Main Motor; T		
1	019-91212-007	*Main Motor Ass'y; T	1	
	011-60027-106	**Photoelectron Disc.	1	
	017-60031-000	**Encoder Sensor	1	
2	002-11220-015	*Cam; Guide Roller	1	
3	011-11240-309	*Cam; Timing Roller	1	
	019-91220-107	Unit/Drive; CE		
4	019-11213-008	*Base Plate; P. -F. Clutch	1	
5	019-65021-104	*P. -F. Clutch	1	
6	019-11220-209	*Bracket; P. -F. Clutch; CE	1	
7	600-08242-006	*Bearing; 628ZZ	6	
8	600-20061-009	*Bearing; 608ZZ	1	
9	011-11208-103	*Base Shaft Plate; Slide Plate	1	
10	019-11201-000	*Idler Pulley	4	
11	002-11227-001	*Spacer; Slide Plate	6	
12	019-11209-000	*Slide Plate (Base)	1	
13	002-11225-009	*Support Block; Slide Plate	2	
14	006-11224-109	*Slide Plate (Front)	1	
15	011-11231-008	*Shaft Block; Slide Plate	1	
16	011-11230-001	*Shaft; Slide Plate	1	
17	638-90616-005	*Washer; 6.1 x 12 x 1.6	1	
18	607-13000-003	*Metal; F6 x 10/9 x 4; 12 x 1.5	2	
19	011-11220-006	*Shaft Base Block; Slide Plate	1	
20	011-11232-004	*Gear; Slide Plate	1	
21	011-11227-000	*Reinforce Plate; Slide Plate	1	
22	620-78309-003	*Belt; 830-5GT-11	1	
23	002-11291-109	*Sector Gear	1	
24	011-11296-002	Spring; Sector Gear	1	
25	017-11201-200	Bracket A; Sensor	1	
26	443-31003-007	Sensor; OJ-620331	1	
	019-91227-004	Main Shaft Ass'y;A3	1	
27	019-91228-000	*Main Pulley; Main Shaft	1	
28	019-21201-105	*Cam; Pressure Roller; A3	1	
29	019-11256-009	Ring; Main Shaft	1	
30	006-11216-106	Bearing House A; Main Shaft	1	

No.	Part No.	Part Name	Q'ty	Remark
31	017-11209-405	Face Plate; Main Shaft	1	
35	019-11224-000	Face Plate; Pressure Shaft	1	
37	620-97506-006	Belt; 750-3GT-6	1	
	019-91232-008	Pressure Link Ass'y		
38	019-11247-000	*Pressure Link II; Bottom	1	
39	017-11214-000	*Pressure Link; Top	1	
40	019-21202-004	*Spring C; Pressure Link	1	
41	017-11217-009	*Link Boss B	1	
42	017-11224-005	*Link Spacer	1	
43	607-15002-003	*Metal; F8 x 12 x 5; 16 x 2	2	
44	017-11216-002	*Link Boss A	1	
45	638-90804-006	*Washer; 8 x 15 x 0.4	1	
46	607-71420-004	*Washer; 14X20X0.8	1	
47	019-11245-007	*Gear; Pressure Adj. Screw	1	
48	019-11250-000	*Pressure Adj. Screw	1	
49	019-11251-007	*Spring; Pressure Link	1	
50	017-11223-009	*Linking Plate; Drive Base	1	
51	017-11234-108	*Spring; Linking Plate	1	
52	019-41226-007	*Hook Lever	1	
53	019-41231-000	*Shaft; Hook Lever	1	
54	019-11230-000	*Spring; Hook Lever	1	
55	019-41234-000	*Stopper; Pressure Hook	1	
56	011-11280-106	*Pressure Hook	1	
57	019-65012-008	*Pressure Solenoid	1	
58	019-41237-009	*Stopper; Cushion	1	
59	019-11225-006	Resting Position Plate; Pressure Lever	1	
	017-91206-100	Pressure Det. Ass'y		
60	019-11252-003	*Bracket A II; Pressure Control	1	
61	019-11253-000	*Bracket B II; Pressure Control	1	
62	443-30005-006	*Sensor; GP1A71A	1	
63	607-11001-002	*Metal; F4 x 6 x 2.2; 8 x 1	1	

Fig. 6 Drive Mechanism Area (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
64	019-11240-102	Pressure Lever	1	
65	019-11223-003	Spring ; Pressure Link	1	
66	019-13610-209	Bracket; Tension Pulley	1	
67	011-11254-202	Tension Pulley	1	
68	017-11208-000	Base Shaft Plate; Pressure	1	
69	011-11234-201	Main Bracket; Face Plate	2	
70	435-00025-000	Core; SFC-6	1	
71	019-18051-100	Guide; Motor Wire Harness; CE	1	
72	019-11222-007	Cover; Paper Feed Clutch; CE	1	

No.	Part No.	Part Name	Q'ty	Remark

MEMO

Fig. 7 ROLLER SYSTEM AREA(FR2950)

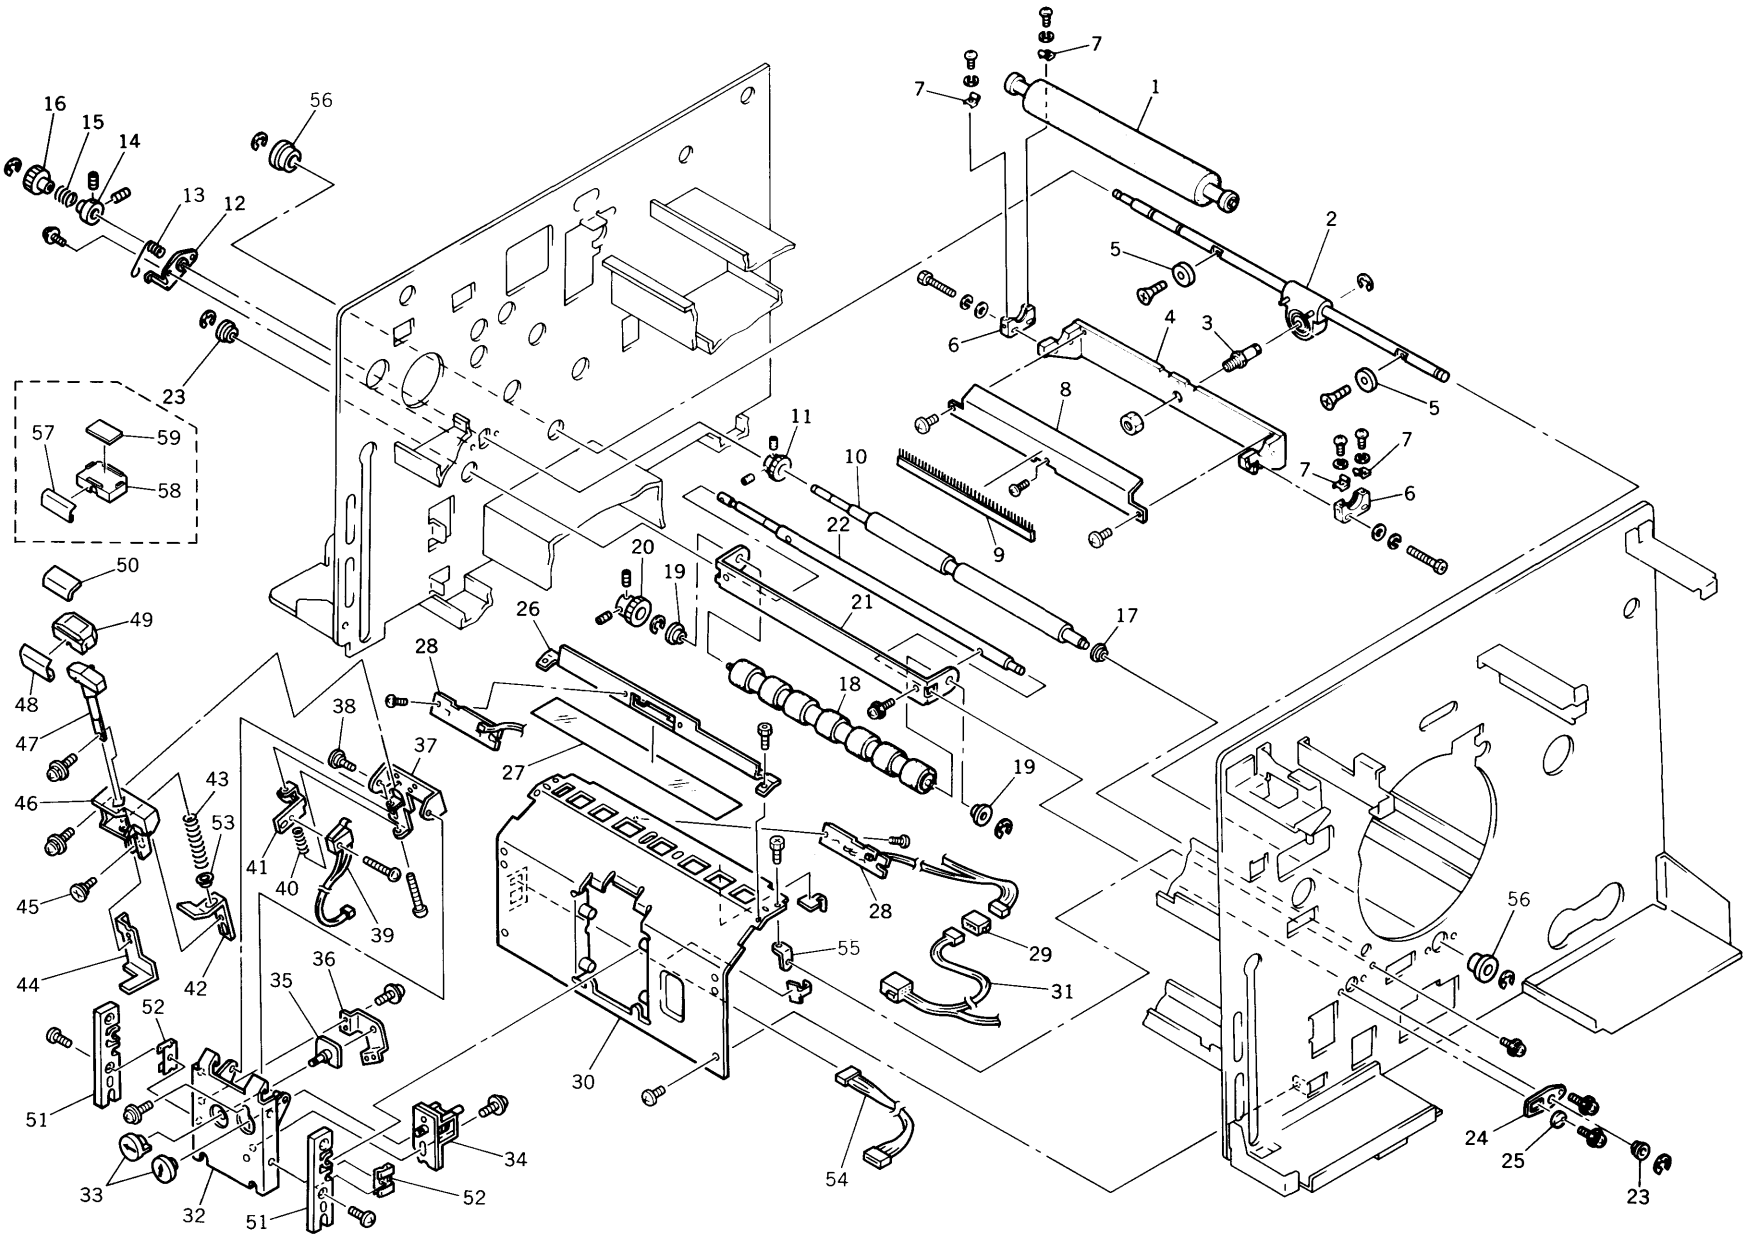

Fig. 7 Roller System Area (FR2950)

No.	Part No.	Part Name	Q'ty	Remark
1	011-91420-019	Pressure Roller Ass'y; B4	1	B4
1	011-91421-007	Pressure Roller Ass'y; A4	1	A4,L
	011-91410-315	Pressure Shaft Ass'y; B4		B4
	011-91411-109	Pressure Shaft Ass'y; A4		A4,L
2	011-91412-008	*Pressure Shaft	1	
3	002-11405-007	*Center Shaft; Pressure	1	
4	011-11403-305	*Pressure Roller Support	1	
5	006-11312-008	*Support Collar; R3	2	
6	002-11402-008	*Adjuster; Press. -Roll. Support	2	
7	002-11404-108	*Roller Holder; Pressure	4	
8	011-11409-206	*Guide Cover; Pressure; B4	1	B4
8	017-11401-004	*Guide Cover; Pressure; A4	1	A4,L
9	011-11404-301	*De-electricity Brush; B4	2	B4
9	011-41404-101	*De-electricity Brush; A4	1	A4,L
	011-91320-103	Guide Roller Ass'y		
10	011-11301-103	*Guide Roller	1	
11	006-11306-008	*Gear A; Guide Roller	1	
12	002-11412-003	*Shaft Catch; Guide Roller	1	
13	002-11210-109	*Load Spring; Guide Roller	1	
14	006-11304-005	*Guide Shaft	1	
15	006-11305-109	*One-Way Spring	1	
16	006-11303-009	*Gear; Guide Roller	1	
17	600-50059-017	Bearing; FLW688ZZ	1	
	017-91310-209	Timing Roller Ass'y		
18	006-11301-502	*Timing Roller	1	
19	607-13000-402	*Metal; F6 x 10/9 x 6; 12 x 1.5	2	
20	006-11307-004	*Gear B; Timing Roller	1	
21	017-11302-103	*Bracket; Timing Roller	1	
22	017-11301-107	*Shaft; Timing Roller	1	
23	607-15000-000	Metal; F8 x 13/12 x 5; 16 x 2	2	
24	000-01327-100	Adj. Plate; Guide Roller; CE	1	
25	000-01328-107	Adj. Eccentric; Guide Roller; CE	1	
	018-91700-101	Unit/Guide Plate		
26	017-21716-003	*Guide Plate (Upper)	1	
27	019-11702-203	*Sheet; Guide Plate	1	

No.	Part No.	Part Name	Q'ty	Remark
28	017-60003-200	*Paper Sensor	1	
29		**Junction Connector; 6P	1	Ref.Pg.II-36
30	018-31603-000	*Guide Plate (Lower)	1	
31	017-55039-205	*Wire Harness; Guide Plate; 49	1	
	018-91701-108	*Unit/Stripper		
32	018-31607-005	**Bracket; Stripper Unit (Dial)	1	
33	019-11739-000	**Adj. Dial;Stripper	2	
34	019-11750-100	**Worm Gear Box;Stripper (Dial)	1	
35	019-11760-106	**Cam Plate; Stripper (Dial)	1	
36	019-11741-101	**Bracket; Stripper Shaft (Dial)	1	
37	019-11748-009	**Bracket; Stripper Base (Dial)	1	
38	635-17624-006	**Stepped Screw; ϕ6x2.2; M4x2.5	1	
39	019-60020-002	**Micro SW Ass'y 4 (Stack)	1	
40	019-11756-001	**Spring; Stack Paper Feed SW	1	
41	019-11755-005	**Bracket II; Stack Paper Feed SW	1	
42	019-11740-202	**Spring Stopper; Stripper (Dial)	1	
43	019-11738-003	**Spring; Stripper (Dial)	1	
44	019-11749-200	**Actuator Plate II; Stack P.-F.SW	1	
45	635-17523-005	**Stepped Screw; ϕ5x2; M3x3	1	
46	019-11742-108	**Housing; Stripper (Dial)	1	
47	019-11737-104	**Shaft; Stripper (Dial)	1	
51	018-31609-008	**Fixing Block	2	
52	018-31614-001	**Ground Spring; Roller System	2	
53	019-11763-008	**Collar; Stripper	1	
54	019-55015-009	*Wire Harness J; Guide Plate	1	
55	011-11713-002	L Plate; Guide Plate	2	
56	607-17000-105	Metal; F12 x 18 x 10; 24 x 2.5	2	
48	019-11734-202	Cover (STND); Stripper Sheet	1	
49	019-11733-109	Base; Stripper Sheet	1	
50	019-11731-009	Stripper Sheet (SHRT); 80	1	
	019-91740-003	Unit/Stripper Pad; 70		
57	019-11832-000	*Cover F;Stripper Pad	1	
58	019-11831-100	*Base F;Stripper Pad	1	
59	019-11833-006	*Stripper Pad;70	1	
59	019-11834-002	*Stripper Pad; U	1	

Fig. 8 ROLLER SYSTEM AREA(FR3950)

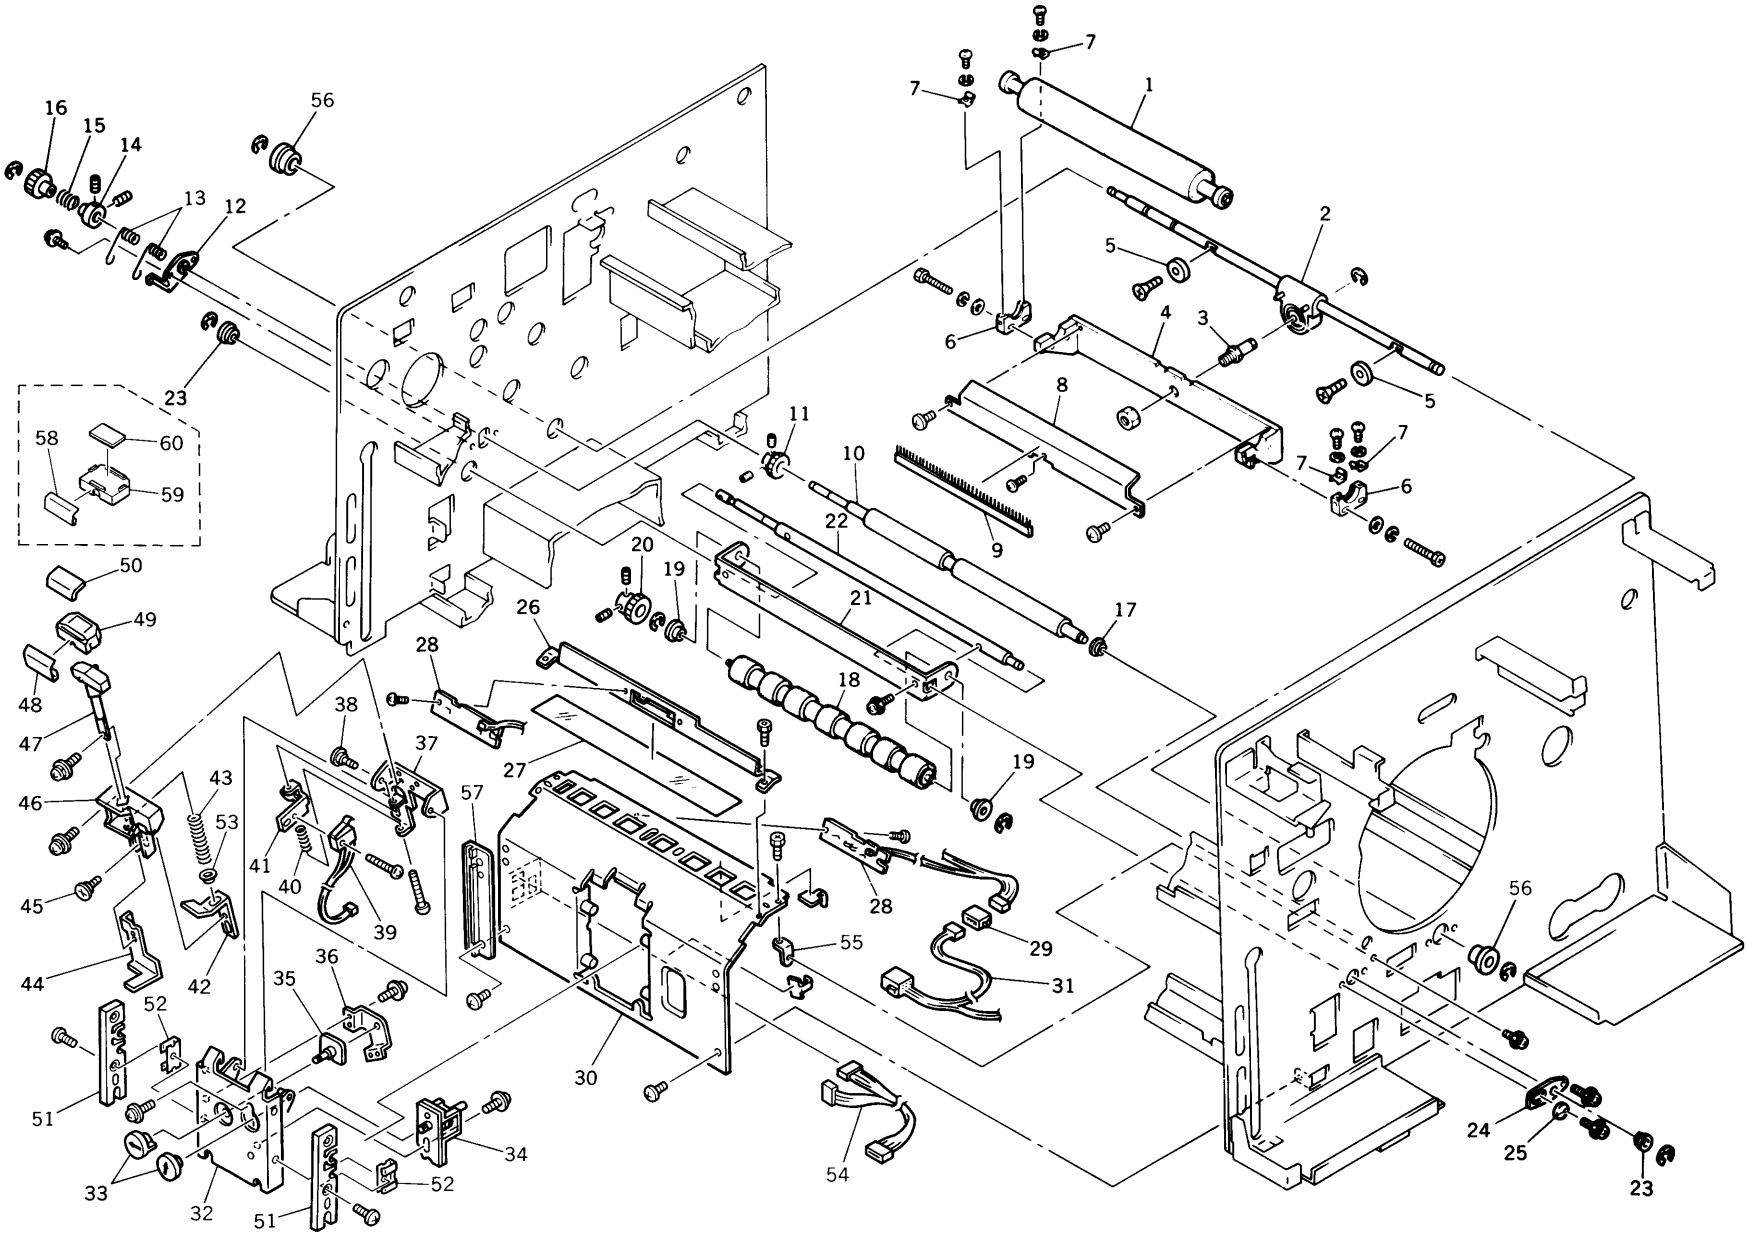

Fig. 8 Roller System Area (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
1	014-91420-002	Pressure Roller Ass'y; A3	1	
	014-91410-309	Pressure Shaft Ass'y; A3; CE		
2	014-91412-000	*Pressure Shaft; A3	1	
3	002-11405-007	*Center Shaft; Pressure	1	
4	014-11406-209	*Pressure Roller Support; A3; CE	1	
5	014-11410-001	*Support Collar; A3	2	
6	002-11402-008	*Adjuster; Press.-Roll. Support	2	
7	002-11404-108	*Roller Holder; Pressure	4	
8	014-11404-206	*Guide Cover; Pressure; A3	1	
9	014-11405-008	*De-electricity Brush; A3	1	
	014-91320-008	Guide Roller Ass'y; A3		
10	014-11301-202	*Guide Roller; A3	1	
11	006-11306-008	*Gear A; Guide Roller	1	
12	002-11412-003	*Shaft Catch; Guide Roller	1	
13	002-11210-109	*Load Spring; Guide Roller	2	
14	006-11304-005	*Guide Shaft	1	
15	006-11305-109	*One-Way Spring	1	
16	006-11303-009	*Gear; Guide Roller	1	
17	600-50059-017	Bearing; FLW688ZZ	1	
	019-91310-009	Timing Roller Ass'y; A3		
18	014-11303-108	*Timing Roller; A3	1	
19	607-13000-402	*Metal; F6 x 10/9 x 6; 12 x 1.5	2	
20	006-11307-004	*Gear B; Timing Roller	1	
21	019-21302-009	*Bracket; Timing Roller	1	
22	019-21301-002	*Shaft; Timing Roller	1	
23	607-15000-000	Metal; F8 x 13/12 x 5; 16 x 2	2	
24	000-01327-100	Adj. Plate; Guide Roller; CE	1	
25	000-01328-107	Adj. Eccentric; Guide Roller; CE	1	
	019-91730-105	Unit/Guide Plate; A3		
26	019-21716-008	*Guide Plate (Upper)	1	
27	019-11702-203	*Sheet; Guide Plate	1	
28	017-60003-200	*Paper Sensor	1	
29		**Junction Connector; 6P	1	Ref.Pg.II-36
30	019-41601-002	*Guide Plate (Lower)	1	
31	017-55039-205	*Wire Harness; Guide Plate; 49	1	

No.	Part No.	Part Name	Q'ty	Remark
	018-91701-108	*Unit/Stripper		
32	018-31607-005	**Bracket; Stripper Unit (Dial)	1	
33	019-11739-000	**Adj. Dial; Stripper	2	
34	019-11750-100	**Worm Gear Box; Stripper (Dial)	1	
35	019-11760-106	**Cam Plate; Stripper (Dial)	1	
36	019-11741-101	**Bracket; Stripper Shaft (Dial)	1	
37	019-11748-009	**Bracket; Stripper Base (Dial)	1	
38	635-17624-006	**Stepped Screw; ϕ6x2.2; M4x2.5	1	
39	019-60020-002	**Micro SW Ass'y 4 (Stack)	1	
40	019-11756-001	**Spring; Stack Paper Feed SW	1	
41	019-11755-005	**Bracket II; Stack Paper Feed SW	1	
42	019-11740-202	**Spring Stopper; Stripper (Dial)	1	
43	019-11738-003	**Spring; Stripper (Dial)	1	
44	019-11749-200	**Actuator Plate II; Stack P.-F. SW	1	
45	635-17523-005	**Stepped Screw; ϕ5x2; M3x3	1	
46	019-11742-108	**Housing; Stripper (Dial)	1	
47	019-11737-104	**Shaft; Stripper (Dial)	1	
51	018-31609-008	**Fixing Block	2	
52	018-31614-001	**Ground Spring; Roller System	2	
53	019-11763-008	**Collar; Stripper	1	
54	019-55107-000	*Wire Harness J; Guide Plate	1	
55	011-11713-002	L Plate; Guide Plate	2	
56	607-17000-105	Metal; F12 x 18 x 10; 24 x 2.5	2	
57	019-41604-001	Bracket;Guide Plate	1	
48	019-11734-202	Cover (STND); Stripper Sheet	1	
49	019-11733-109	Base; Stripper Sheet	1	
50	019-11731-009	Stripper Sheet (SHRT); 80	1	
	019-91740-003	Unit/Stripper Pad; 70		
58	019-11832-000	*Cover F;Stripper Pad	1	
59	019-11831-100	*Base F;Stripper Pad	1	
60	019-11833-006	*Stripper Pad;70	1	
60	019-11834-002	*Stripper Pad; U	1	

Fig. 9 SQUEEGEE-INK PUMP UNIT AREA (Black)

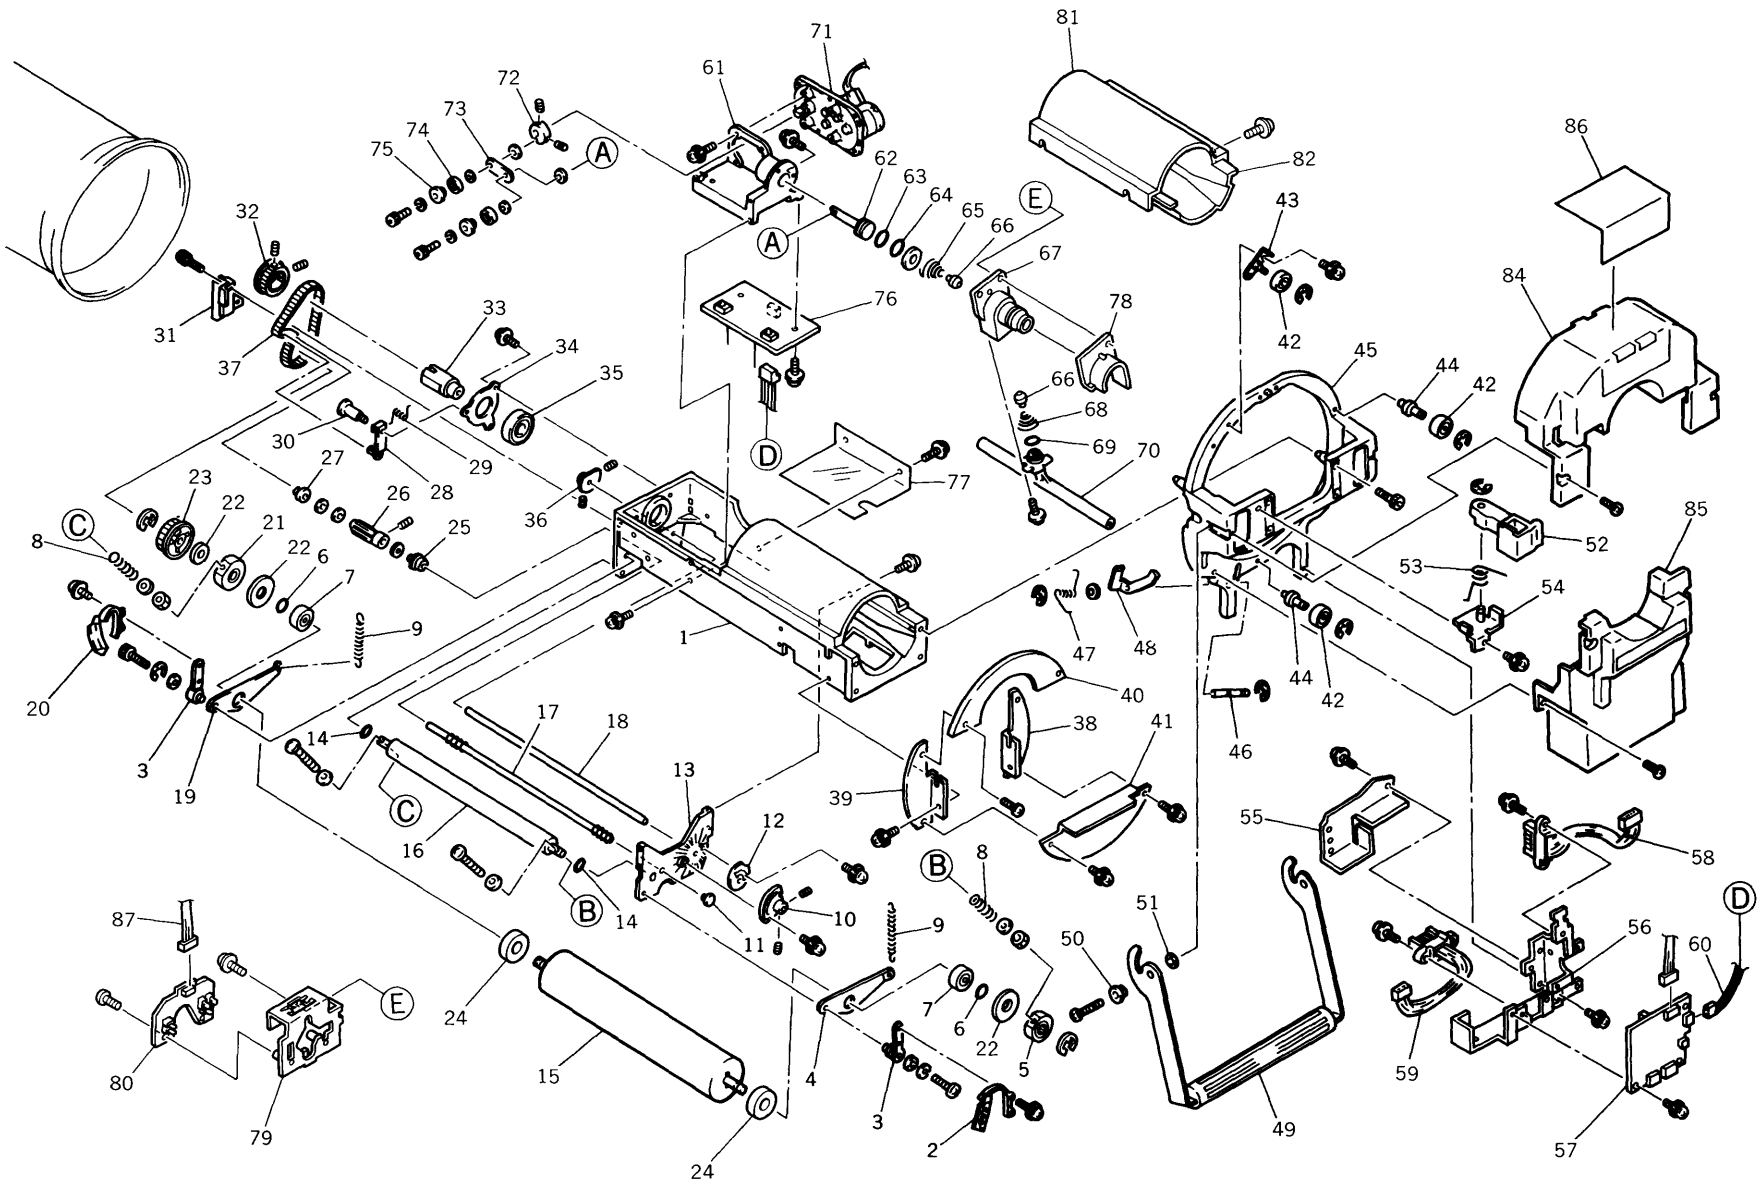

Fig. 9 Squeegee-Ink Pump Unit Area (Black)

No.	Part No.	Part Name	Q'ty	Remark
	017-92231-000	Unit/Squeegee III; OW		
	019-92200-002	Unit/Squeegee; A3		A3
1	017-12101-900	*Squeegee Stay; OW	1	
1	014-12201-104	*Squeegee Stay; A3	1	A3
2	000-02254-514	*Ink Blocking Plate (Front)	1	
3	002-12219-002	*Adj. Boss; Ink Blocking	2	
4	019-12206-005	*Adj. Plate (Front); Squeegee	1	
5	014-12227-103	*Reverse Rotation Stopper AII	1	
6	640-60080-010	*O Ring; P8-1.9	2	
7	601-10192-005	*Bearing; 6800ZZ	2	
8	000-02211-017	*Spring; Squeegee Gap	2	
9	002-12234-001	*Spring; Adj. Plate (Front)	2	
10	002-12213-101	*Sector Adjustor; Squeegee	1	
11	002-12240-001	*Shaft Catch; Drive; Squeegee	1	
12	002-12209-007	*Adj. Collar A; Squeegee	1	
13	017-12105-204	*Side Frame; Squeegee; OW	1	
13	011-12211-302	*Side Frame; Squeegee	1	A3
14	640-60140-004	*O Ring; P14-2.4	2	
15	017-12111-506	*Squeegee Roller; OW	1	
15	014-12221-504	*Squeegee Roller; A3	1	A3
16	017-12114-203	*Doctor Roller II; OW	1	
16	014-12226-000	*Doctor Roller II; A3	1	A3
17	017-12121-005	*Drive Shaft; Squeegee; OW	1	
17	014-12252-000	*Drive Shaft; Squeegee; A3	1	A3
18	017-12123-008	*Adj. Shaft; Squeegee; OW	1	
18	014-12251-004	*Adj. Shaft; Squeegee; A3	1	A3
19	019-12207-001	*Adj. Plate (Back); Squeegee	1	
20	000-02255-510	*Ink Blocking Plate (Back)	1	
21	017-12115-005	*Reverse Rotation Stopper B	1	
21	019-22206-003	*Reverse Rotation Stopper B	1	A3
22	638-90000-020	*Washer; 18 x 10.2 x 0.2	3	
23	011-12205-000	*Pulley; Squeegee Roller	1	
24	019-12208-008	*Spacer; 18 x 10 x 1.8	2	
25	640-70030-100	*V Ring; VRY2.7 x 3.5 x 4.1	1	
26	002-12238-104	*Axis; Drive Shaft; Squeegee	1	

No.	Part No.	Part Name	Q'ty	Remark
27	607-10000-010	*Metal; F3 x 5 x 3; 8 x 1.4	1	
28	002-12229-105	*Tensioner; Squeegee	1	
29	002-12233-005	*Spring; Tensioner; Squeegee	1	
30	011-12221-006	*Fulcrum; Tensioner; Squeegee	1	
31	017-12122-001	*Shaft Support; Squeegee	1	
31	011-12241-007	*Shaft Support II; Squeegee	1	A3
	017-12124-403	*Ass'y; Shaft Joint	1	
	011-12206-406	*Ass'y; Shaft Joint	1	A3
32		**Pulley; Main Shaft	1	
33		**Shaft Joint	1	
34		**Bearing Holder A; Squeegee	1	
35		**Bearing; 6202ZZ	1	
36	002-12210-005	*Adj. Collar B; Squeegee	1	
37	620-21209-002	*Squeegee Belt; B120M x L-9.5	1	
38	011-12222-401	Bracket R; Drum Cover F	1	
39	011-12223-408	Bracket L; Drum Cover F	1	
40	011-12213-100	Drum Cover F (Upper)	1	
41	011-12224-005	Drum Cover F (Lower)	1	
	017-92300-002	Unit/Drum Frame		
42	000-01169-114	*Support Roller; Drum	3	
43	002-12410-004	*Adj. Plate; Support Roller	1	
44	002-12409-103	*Support Shaft; Support Roller	2	
45	017-12201-700	*Frame; Drum	1	
46	019-12315-009	*Shaft; Locking Plate II; Drum	1	
47	019-12307-006	*Spring; Locking Plate; Drum	1	
48	019-12314-002	*Locking Plate II; Drum	1	
49	017-12228-004	*Drum Lever	1	
50	002-12407-003	*Boss A; Drum Lever	2	
51	002-12418-102	*Spacer; Drum Lever	2	
52	014-12295-001	Lever; Bottle Stopper	1	
53	014-12297-004	Spring; Stopper Lever	1	
54	018-32306-009	Bracket; Stopper Lever	1	
55	017-12213-007	Inner Cover; Drum	1	
56	017-22301-001	Bracket II; Drum Control PCB2	1	
57	018-51018-006	Drum Control PCB2	1	

Fig. 9 Squeegee-Ink Pump Unit Area (Black)

No.	Part No.	Part Name	Q'ty	Remark
58	017-55028-203	Wire Harness; Drum (R)	1	
59	017-55029-102	Wire Harness; Drum (L)	1	
60	019-55010-104	Wire Harness; Drum Inner	1	
	018-92200-005	Unit/Ink Pump		
	019-92420-002	Unit/Ink Pump		A3
61	002-12303-305	*Bracket; Inking Motor	1	
62	002-12304-107	*Piston Inking Pump	1	
63	640-60140-004	*O Ring; P14-2.4	1	
64	640-60220-016	*O Ring; P22-2.4	1	
65	000-07119-100	*Coil Spring; Inking Pump	1	
66	011-12151-008	*Valve; Inking Pump	2	
67	018-32201-002	*Inking Pump Body ϕ19	1	
67	019-42201-008	*Inking Pump Body ϕ19; A3	1	A3
68	011-12147-205	*Coil Spring; Inking Pump; RC	1	
69	640-60100-100	*O Ring; P10A-2.4	1	
70	011-12153-000	*Ink Distributor II	1	
70	014-12213-005	*Ink Distributor; A3	1	A3
71	017-65016-700	*Inking Motor	1	
72	002-12307-203	*Linking Disc; Inking Pump	1	
73	002-12308-005	*Linking Plate; Inking Pump	1	
74	002-12309-001	*Collar; Inking Pump	2	
75	002-12310-107	*Collar Holder; Inking Pump	2	
76	017-60020-407	Drum PCB	1	
	484-00000-800	*Pilot Lamp	1	
77	017-12215-107	PCB Cover; Drum	1	
78	018-32205-008	PCB Guard	1	
79	018-32202-009	Bracket; Bottle SW	1	
80	018-51019-002	Bottle SW PCB	1	
	014-12216-209	Bottle Guide II Ass'y		A3
81	011-12208-107	*Bottle Guide (Over)	1	
82	014-12217-108	*Bottle Guide II (Base)	1	
84	019-12302-101	Drum Cover (Upper)	1	
85	019-12303-108	Drum Cover (Lower)	1	
86	550-21736-006	Seal; Ink (Black);Pic.	1	
86	550-21742-006	Seal; Ink (Black)	1	

No.	Part No.	Part Name	Q'ty	Remark
86	550-21743-002	Seal; Ink (Black); CH	1	
87	018-55029-100	Wire Harness; Bottle SW	1	

MEMO

Fig. 10 SQUEEGEE-INK PUMP UNIT AREA (Color)

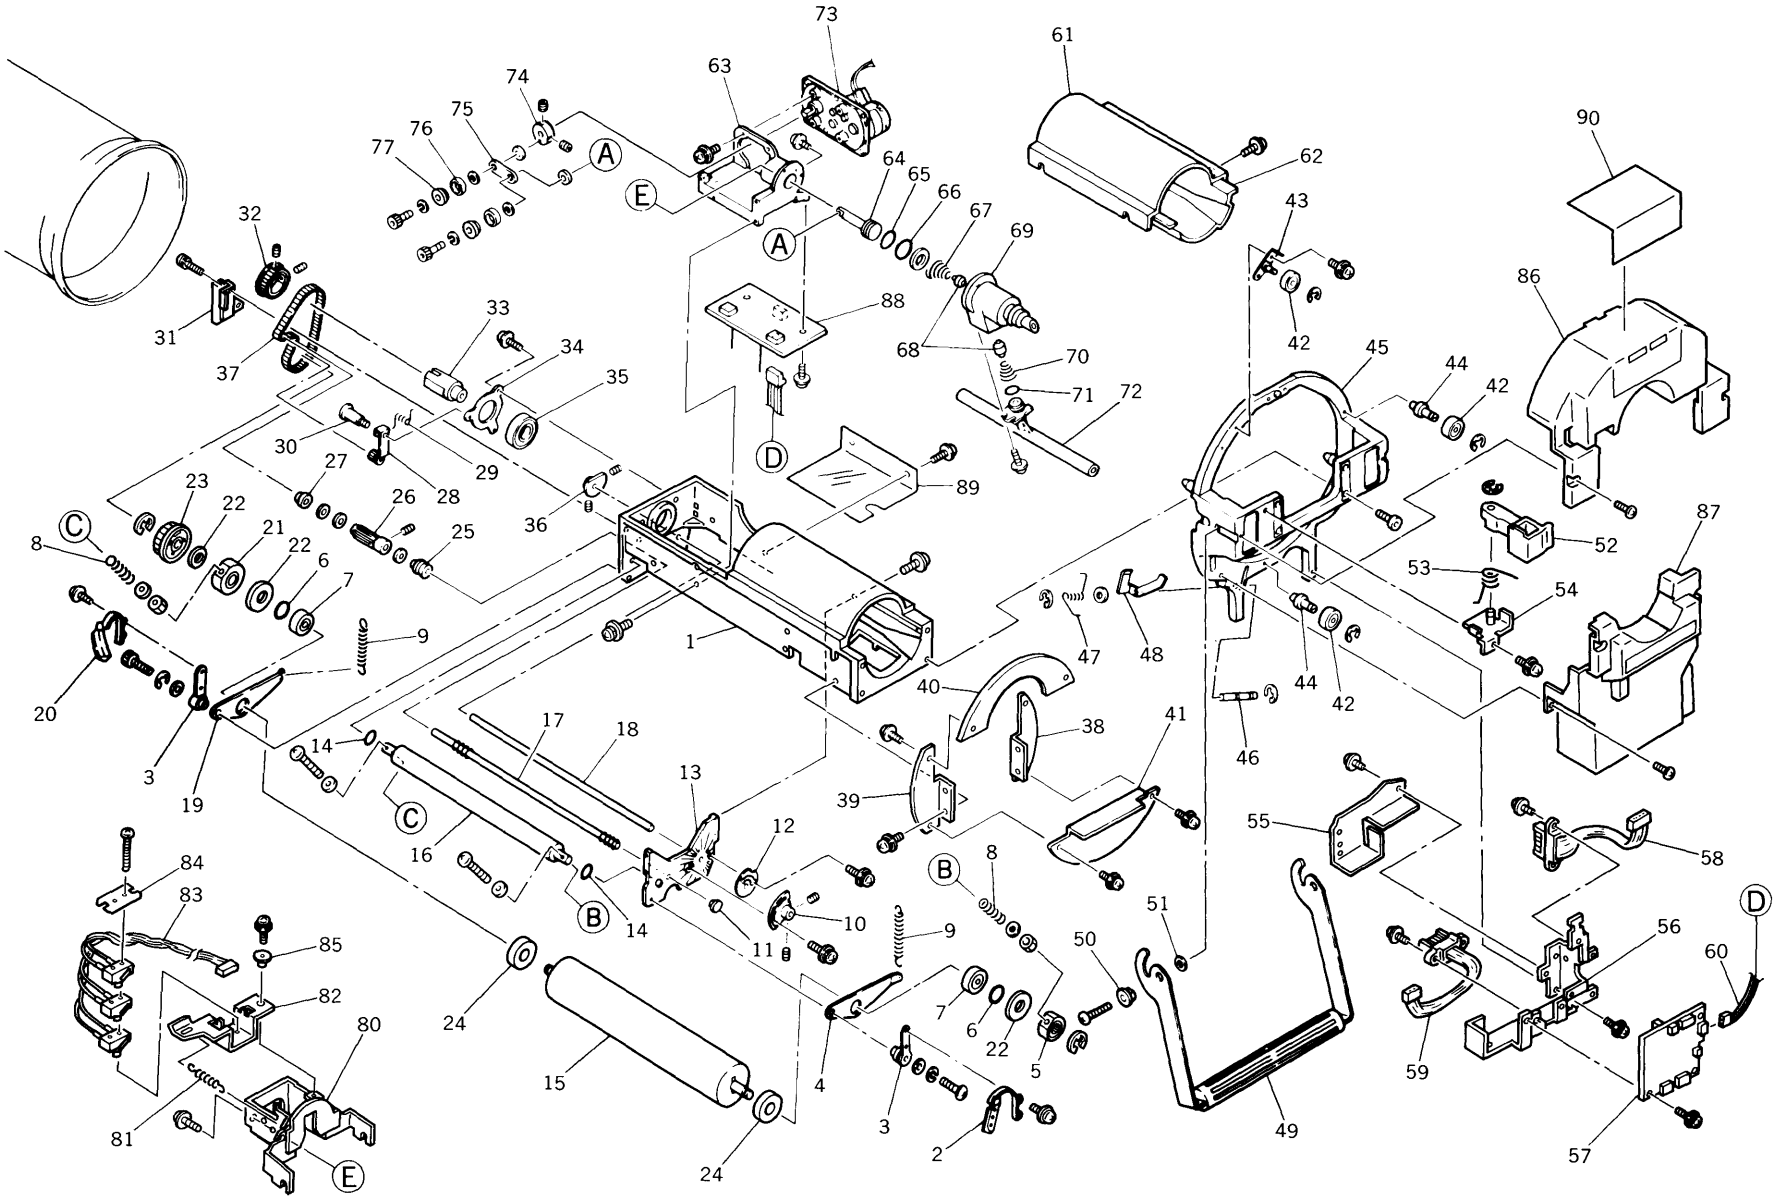

Fig. 10 Squeegee-Ink Pump Unit Area (Color)

No.	Part No.	Part Name	Q'ty	Remark
	017-92231-000	Unit/Squeegee III; OW		
	019-92200-002	Unit/Squeegee; A3		A3
1	017-12101-900	*Squeegee Stay; OW	1	
1	014-12201-104	*Squeegee Stay; A3	1	A3
2	000-02254-514	*Ink Blocking Plate (Front)	1	
3	002-12219-002	*Adj. Boss; Ink Blocking	2	
4	019-12206-005	*Adj. Plate (Front); Squeegee	1	
5	014-12227-103	*Reverse Rotation Stopper AII	1	
6	640-60080-010	*O Ring; P8-1.9	2	
7	601-10192-005	*Bearing; 6800ZZ	2	
8	000-02211-017	*Spring; Squeegee Gap	2	
9	002-12234-001	*Spring; Adj. Plate (Front)	2	
10	002-12213-101	*Sector Adjustor; Squeegee	1	
11	002-12240-001	*Shaft Catch; Drive; Squeegee	1	
12	002-12209-007	*Adj. Collar A; Squeegee	1	
13	017-12105-204	*Side Frame; Squeegee; OW	1	
13	011-12211-302	*Side Frame; Squeegee	1	A3
14	640-60140-004	*O Ring; P14-2.4	2	
15	017-12111-506	*Squeegee Roller; OW	1	
15	014-12221-504	*Squeegee Roller; A3	1	A3
16	017-12114-203	*Doctor Roller II; OW	1	
16	014-12226-000	*Doctor Roller II; A3	1	A3
17	017-12121-005	*Drive Shaft; Squeegee; OW	1	
17	014-12252-000	*Drive Shaft; Squeegee; A3	1	A3
18	017-12123-008	*Adj. Shaft; Squeegee; OW	1	
18	014-12251-004	*Adj. Shaft; Squeegee; A3	1	A3
19	019-12207-001	*Adj. Plate (Back); Squeegee	1	
20	000-02255-510	*Ink Blocking Plate (Back)	1	
21	017-12115-005	*Reverse Rotation Stopper B	1	
21	019-22206-003	*Reverse Rotation Stopper B	1	A3
22	638-90000-020	*Washer; 18 x 10.2 x 0.2	3	
23	011-12205-000	*Pulley; Squeegee Roller	1	
24	019-12208-008	*Spacer; 18 x 10 x 1.8	2	
25	640-70030-100	*V Ring; VRY2.7 x 3.5 x 4.1	1	
26	002-12238-104	*Axis; Drive Shaft; Squeegee	1	

No.	Part No.	Part Name	Q'ty	Remark
27	607-10000-010	*Metal; F3 x 5 x 3; 8 x 1.4	1	
28	002-12229-105	*Tensioner; Squeegee	1	
29	002-12233-005	*Spring; Tensioner; Squeegee	1	
30	011-12221-006	*Fulcrum; Tensioner; Squeegee	1	
31	017-12122-001	*Shaft Support; Squeegee	1	
31	011-12241-007	*Shaft Support II; Squeegee	1	A3
	017-12124-403	*Ass'y; Shaft Joint	1	
	011-12206-406	*Ass'y; Shaft Joint	1	A3
32		**Pulley; Main Shaft	1	
33		**Shaft Joint	1	
34		**Bearing Holder A; Squeegee	1	
35		**Bearing; 6202ZZ	1	
36	002-12210-005	*Adj. Collar B; Squeegee	1	
37	620-21209-002	*Squeegee Belt; B120M x L-9.5	1	
38	011-12222-401	Bracket R; Drum Cover F	1	
39	011-12223-408	Bracket L; Drum Cover F	1	
40	011-12213-100	Drum Cover F (Upper)	1	
41	011-12220-204	Drum Cover F (Lower)	1	
	017-92300-002	Unit/Drum Frame		
42	000-01169-114	*Support Roller; Drum	3	
43	002-12410-004	*Adj. Plate; Support Roller	1	
44	002-12409-103	*Support Shaft; Support Roller	2	
45	017-12201-700	*Frame; Drum	1	
46	019-12315-009	*Shaft; Locking Plate II; Drum	1	
47	019-12307-006	*Spring; Locking Plate; Drum	1	
48	019-12314-002	*Locking Plate II; Drum	1	
49	017-12228-004	*Drum Lever	1	
50	002-12407-003	*Boss A; Drum Lever	2	
51	002-12418-102	*Spacer; Drum Lever	2	
52	014-12295-001	Lever; Bottle Stopper	1	
53	014-12297-004	Spring; Stopper Lever	1	
54	017-12211-004	Bracket; Stopper Lever	1	
55	017-12213-007	Inner Cover; Drum	1	
56	017-22301-001	Bracket II; Drum Control PCB2	1	
57	019-51005-106	Drum Control PCB2	1	

Fig.10 Squeegee-Ink Pump Unit Area (Color)

No.	Part No.	Part Name	Q'ty	Remark
58	017-55028-203	Wire Harness; Drum (R)	1	
59	017-55029-102	Wire Harness; Drum (L)	1	
60	019-55010-104	Wire Harness; Drum Inner	1	
	014-12216-209	Bottle Guide II Ass'y		A3
61	011-12208-107	*Bottle Guide (Over)	1	
62	014-12217-108	*Bottle Guide II (Base)	1	
	017-92220-009	Unit/Ink Pump		
	019-92220-003	Unit/Ink Pump; A3		A3
63	002-12303-305	*Bracket; Inking Motor	1	
64	002-12304-107	*Piston Inking Pump	1	
65	640-60140-004	*O Ring; P14-2.4	1	
66	640-60220-016	*O Ring; P22-2.4	1	
67	000-07119-100	*Coil Spring; Inking Pump	1	
68	011-12151-008	*Valve; Inking Pump	2	
69	011-12201-200	*Inking Pump Body	1	
69	014-12211-002	*Inking Pump Body; A3	1	A3
70	011-12147-205	*Coil Spring; Inking Pump; RC	1	
71	640-60100-100	*O Ring; P10A-2.4	1	
72	011-12153-000	*Ink Distributor II	1	
72	014-12213-005	*Ink Distributor; A3	1	A3
73	017-65016-700	*Inking Motor	1	
74	002-12307-203	*Linking Disc; Inking Pump	1	
75	002-12308-005	*Linking Plate; Inking Pump	1	
76	002-12309-001	*Collar; Inking Pump	2	
77	002-12310-107	*Collar Holder; Inking Pump	2	
80	017-22206-106	Bracket; Bottle SW	1	
80	019-22203-306	Bracket; Bottle SW	1	A3
81	019-12211-009	Spring; Bottle SW	1	
81	019-32201-204	Spring; Bottle SW; A3	1	A3
	019-92231-102	Bottle Set SW Ass'y		
82	019-32203-401	*Holder; Bottle SW	1	
83	019-60010-309	*Bottle Set SW	1	
84	019-12210-002	*Set Plate; Bottle SW	1	
85	011-12218-102	Boss; Bottle Set SW	1	
86	019-12302-101	Drum Cover (Upper)	1	

No.	Part No.	Part Name	Q'ty	Remark
87	019-12303-108	Drum Cover (Lower)	1	
88	017-60020-407	Drum PCB	1	
	484-00000-800	*Pilot Lamp	1	
89	017-12215-107	PCB Cover; Drum	1	
90	550-21293-104	Color Seal Set		
		*Seal; Ink (Blue)	1	
		*Seal; Ink (Red)	1	
		*Seal; Ink (Yellow)	1	
		*Seal; Ink (Brown)	1	
		*Seal; Ink (Green)	1	
		*Seal; Ink (Marine Red)	1	
		*Seal; Ink (Bright Red)	1	
		*Seal; Ink (Purple)	1	
		*Seal; Ink (Federal Blue)	1	
		*Seal; Ink (Medium Blue)	1	
		*Seal; Ink (Grey)	1	
		*Seal; Ink (Light Grey)	1	
		*Seal; Ink (Teal)	1	
		*Seal; Ink (Burgundy)	1	
		*Seal; Ink (Fluorescent Pink)	1	
		*Seal; Ink (Fluorescent Orange)	1	

MEMO

Fig. 11 DRUM-SCREEN AREA (FR2950)

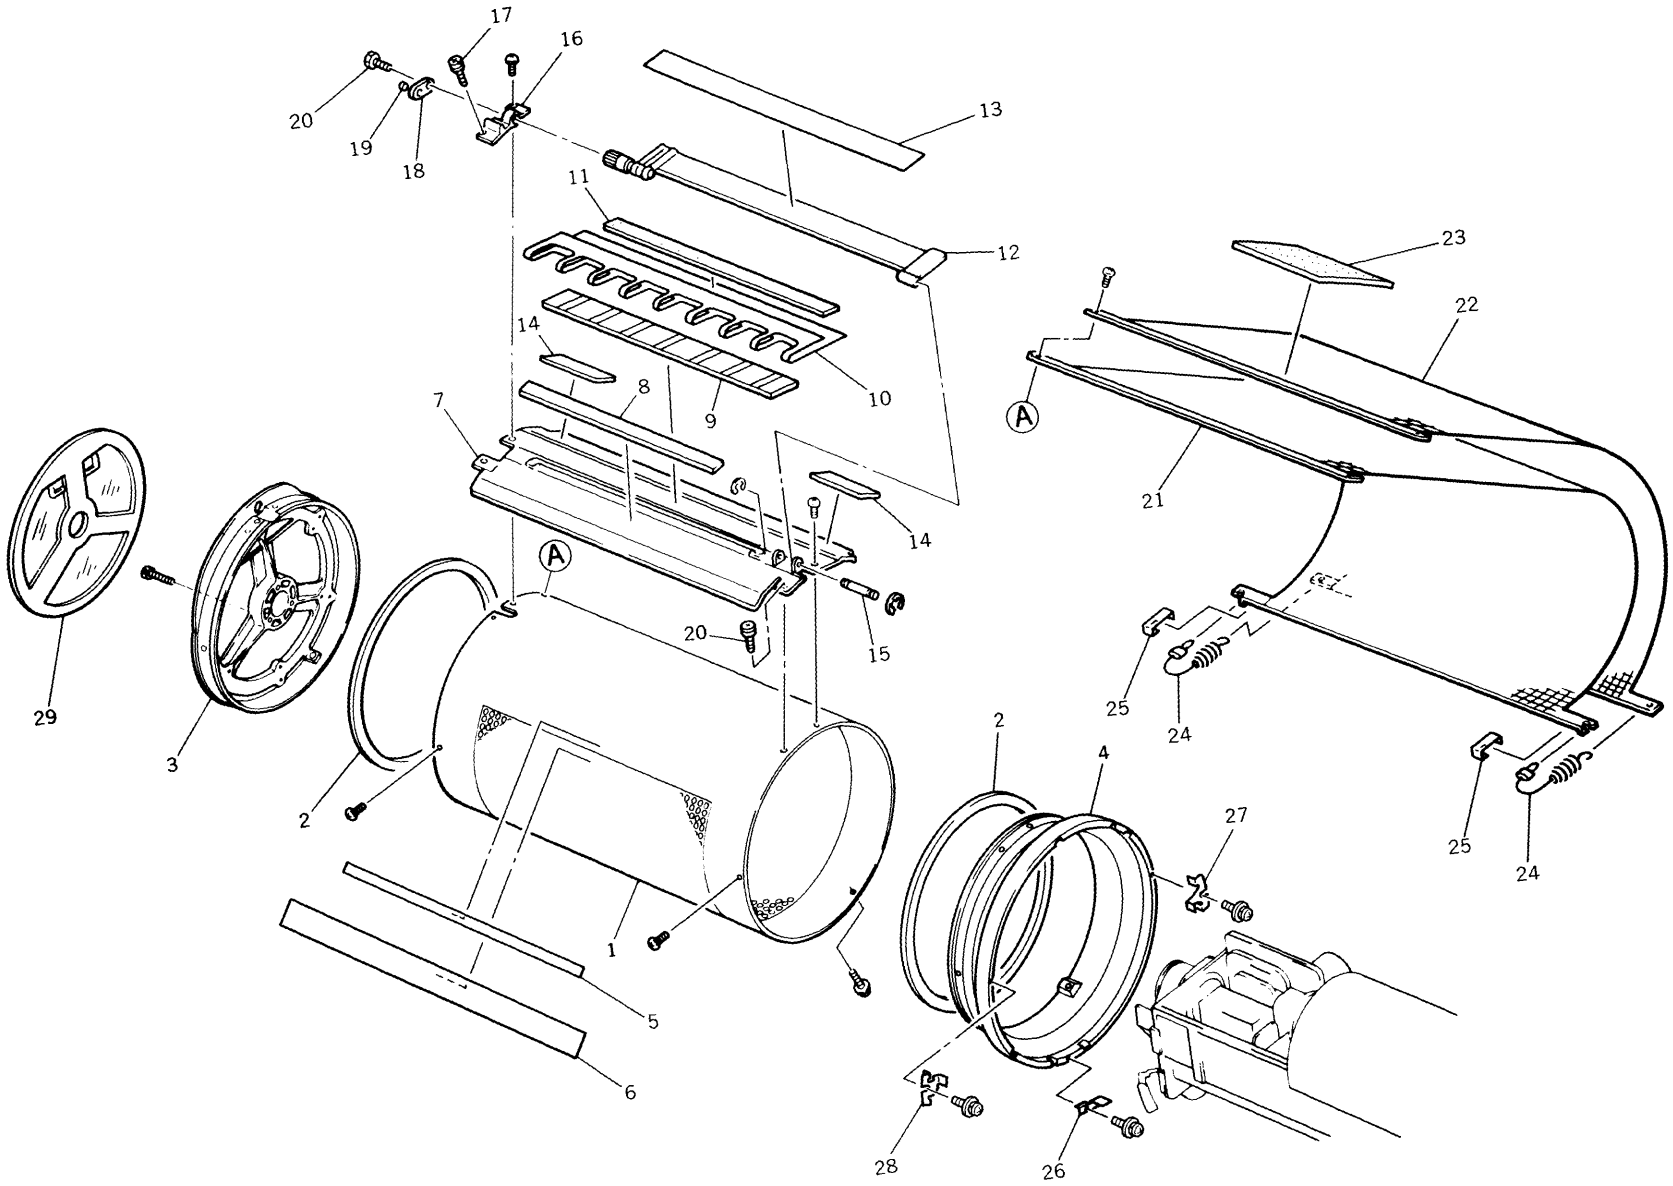

Fig. 11 Drum-Screen Area (FR2950)

No.	Part No.	Part Name	Q'ty	Remark
	017-92119-006	Unit/Drum Screen; B4		
	017-92118-000	Unit/Drum Screen; A4		
	017-92117-003	Unit/Drum Screen; US		L
	017-92123-100	*Drum Body Ass'y; B4	1	
	017-92122-007	*Drum Body Ass'y; A4	1	
	017-92121-000	*Drum Body Ass'y; US	1	L
1	017-12008-004	**Drum Body E; OW	1	B4
1	017-12004-009	**Drum Body (E);A4	1	A4
1	017-12006-001	**Drum Body (E);100 US	1	L
2	011-12139-008	**Drum Seal	2	
3	017-12011-005	**Drum Body Support (Left); OW	1	
4	017-12001-204	**Drum Body Support (Right)	1	
5	011-12104-000	*Seal Tape	1	A4,L
6	011-12142-106	*Ink Blocking Sheet; A4	1	A4
6	011-12140-006	*Ink Blocking Sheet; B4	1	L
	017-12014-004	*Ink Blocking Sheet; B4	1	*B4
7	011-12120-200	*Clamp Plate Base	1	
8	011-12130-000	*Clamp Magnet B	1	
9	002-12110-205	*Clamp Magnet A; B4	1	
10	011-12132-801	*Sheet; Clamp Plate	1	
11	002-12134-104	*Sticker Sheet; Drum	1	
12	017-22108-007	*Clamp Plate Ass'y	1	
13	011-12129-100	*Clamp Sub-Plate	1	
14	011-12134-006	*Sheet; Drum; B4	2	
15	011-12114-005	*Shaft; Clamp Plate	1	
16	011-12124-108	*Compensator	1	
17	011-12141-100	*Screw; Spring Hanger	2	
	011-92106-008	*Ass'y; Angular Magnet Plate		
18	011-12154-104	**Plate II; Angular Magnet	1	
19	660-05500-606	**Magnet TDK REC 22 D5 x 2.2	1	
20	011-12155-208	*Screw; Angular Magnet	1	
21	011-12105-200	*Screen A	1	
22	011-12107-106	*Screen B	1	
23	017-22107-108	*Light Absorber Strip; B4	1	
24	011-12136-009	*Spring; Screen	2	

No.	Part No.	Part Name	Q'ty	Remark
25	011-12131-007	*Hanger Plate	2	
26	017-12205-101	Position A Plate	1	
27	019-12214-008	Position C2 Plate	1	
28	019-12215-004	Position C1 Plate	1	
29	011-12116-202	Drum Cover R	1	
*	Seal Tape and Ink Blocking Sheet are combined only on B4 models.			

Fig. 12 DRUM-SCREEN AREA (FR3950)

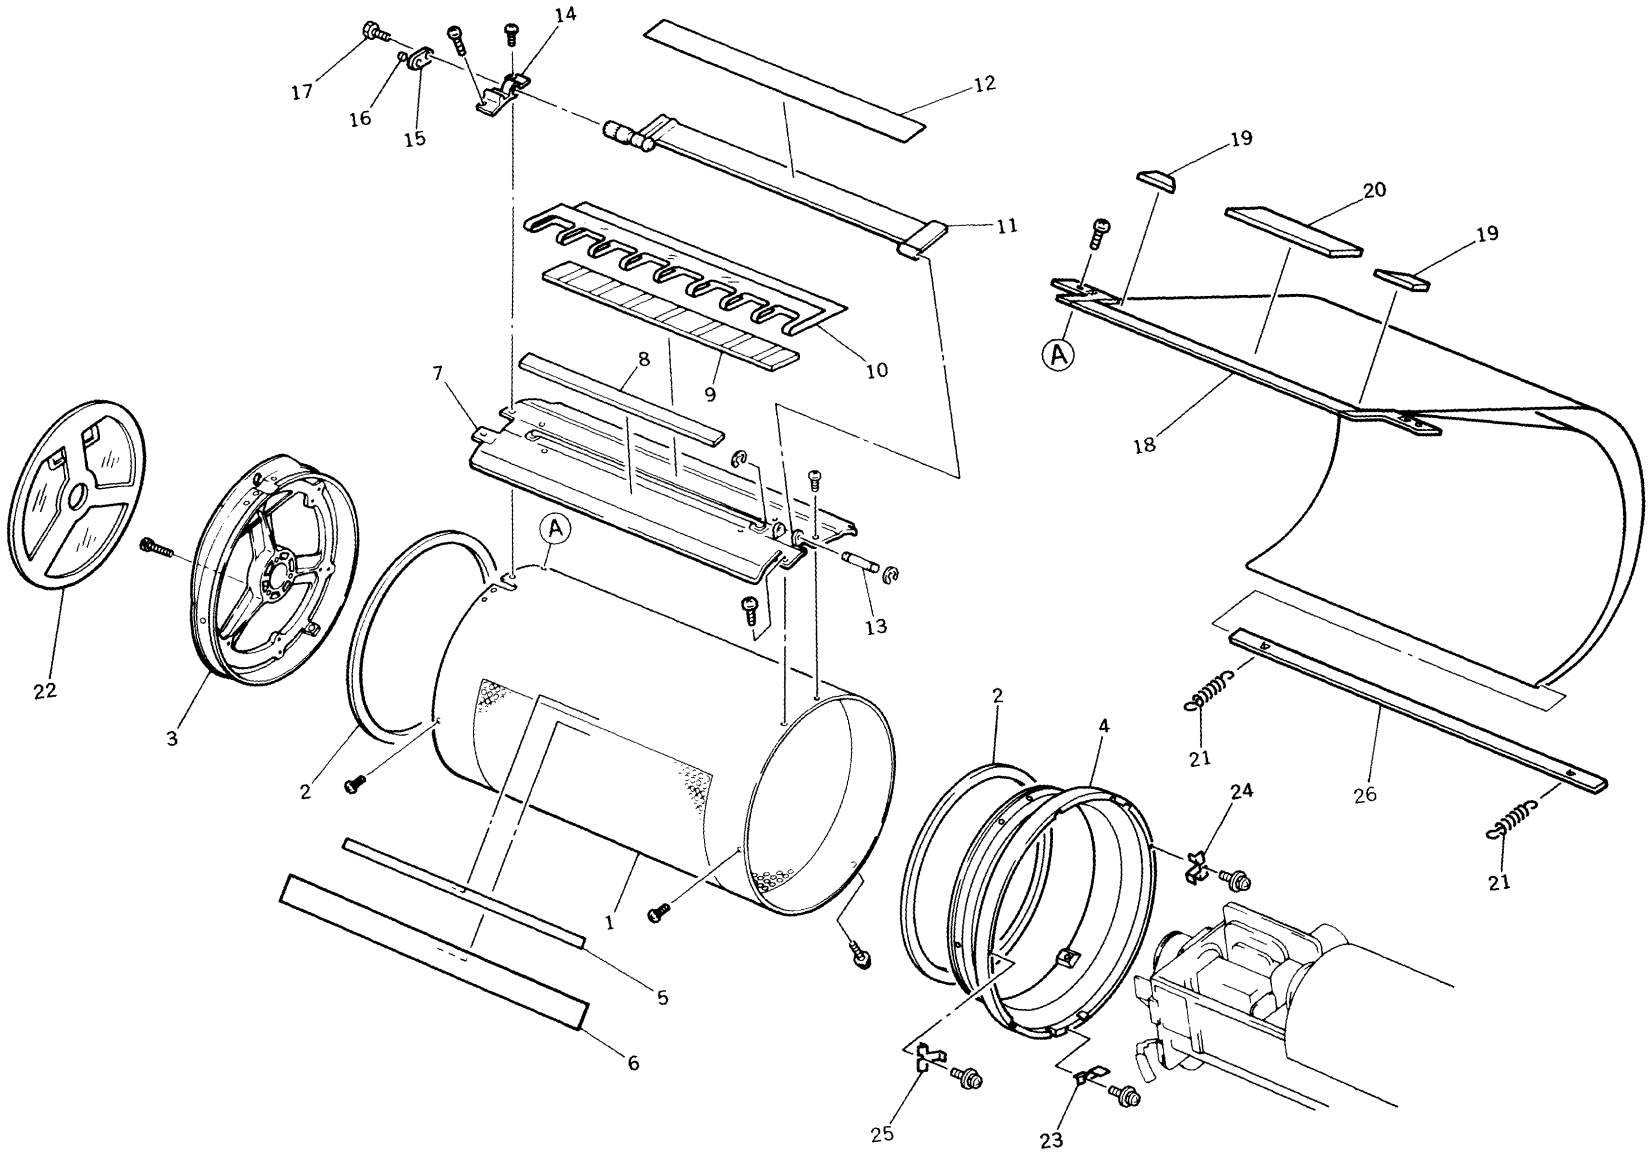

Fig. 12 Drum-Screen Area (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
	019-92105-000	Unit/Drum Screen; A3		
	019-92110-003	*Drum Body Ass'y; A3	1	
1	014-12101-002	**Drum Body; A3	1	
2	011-12139-008	**Drum Seal	2	
3	014-12103-102	**Drum Body Support (Left); A3	1	
4	019-22101-201	**Drum Body Support (Right); A3	1	
5	014-12114-007	*Seal Tape; A3	1	
6	014-12116-301	*Ink Blocking Sheet; A3	1	
7	019-22108-206	*Clamp Plate Base	1	
8	011-12130-000	*Clamp Magnet B	1	
9	019-22111-002	*Clamp Magnet A; A3	1	
10	014-12121-607	*Sheet; Clamp Plate; A3	1	
11	019-32417-606	*Clamp Plate Ass'y; II	1	
12	014-12115-003	*Clamp Sub-Plate	1	
13	011-12114-005	*Shaft; Clamp Plate	1	
14	011-12124-108	*Compensator	1	
	011-92106-008	*Ass'y; Angular Magnet Plate		
15	011-12154-104	**Plate II; Angular Magnet	1	
16	660-05500-100	**Magnet TDK REC 18 D5 x 2	1	
17	011-12155-208	*Screw; Angular Magnet	1	
18	019-22102-208	*Screen Ass'y; A3	1	
19	019-22113-102	*Anti-Wrinkle Strip; Drum	1	
20	019-22112-106	*Light Absorber Strip; A3	1	
21	019-22107-102	*Spring; Screen	2	
26	019-22106-106	*Screen Hanger(Lower)	1	
22	011-12116-202	Drum Cover R	1	
23	017-12205-101	Position A Plate	1	
24	019-12214-008	Position C2 Plate	1	
25	019-12215-004	Position C1 Plate	1	

No.	Part No.	Part Name	Q'ty	Remark

Fig. 13 LOCK LEVER AREA

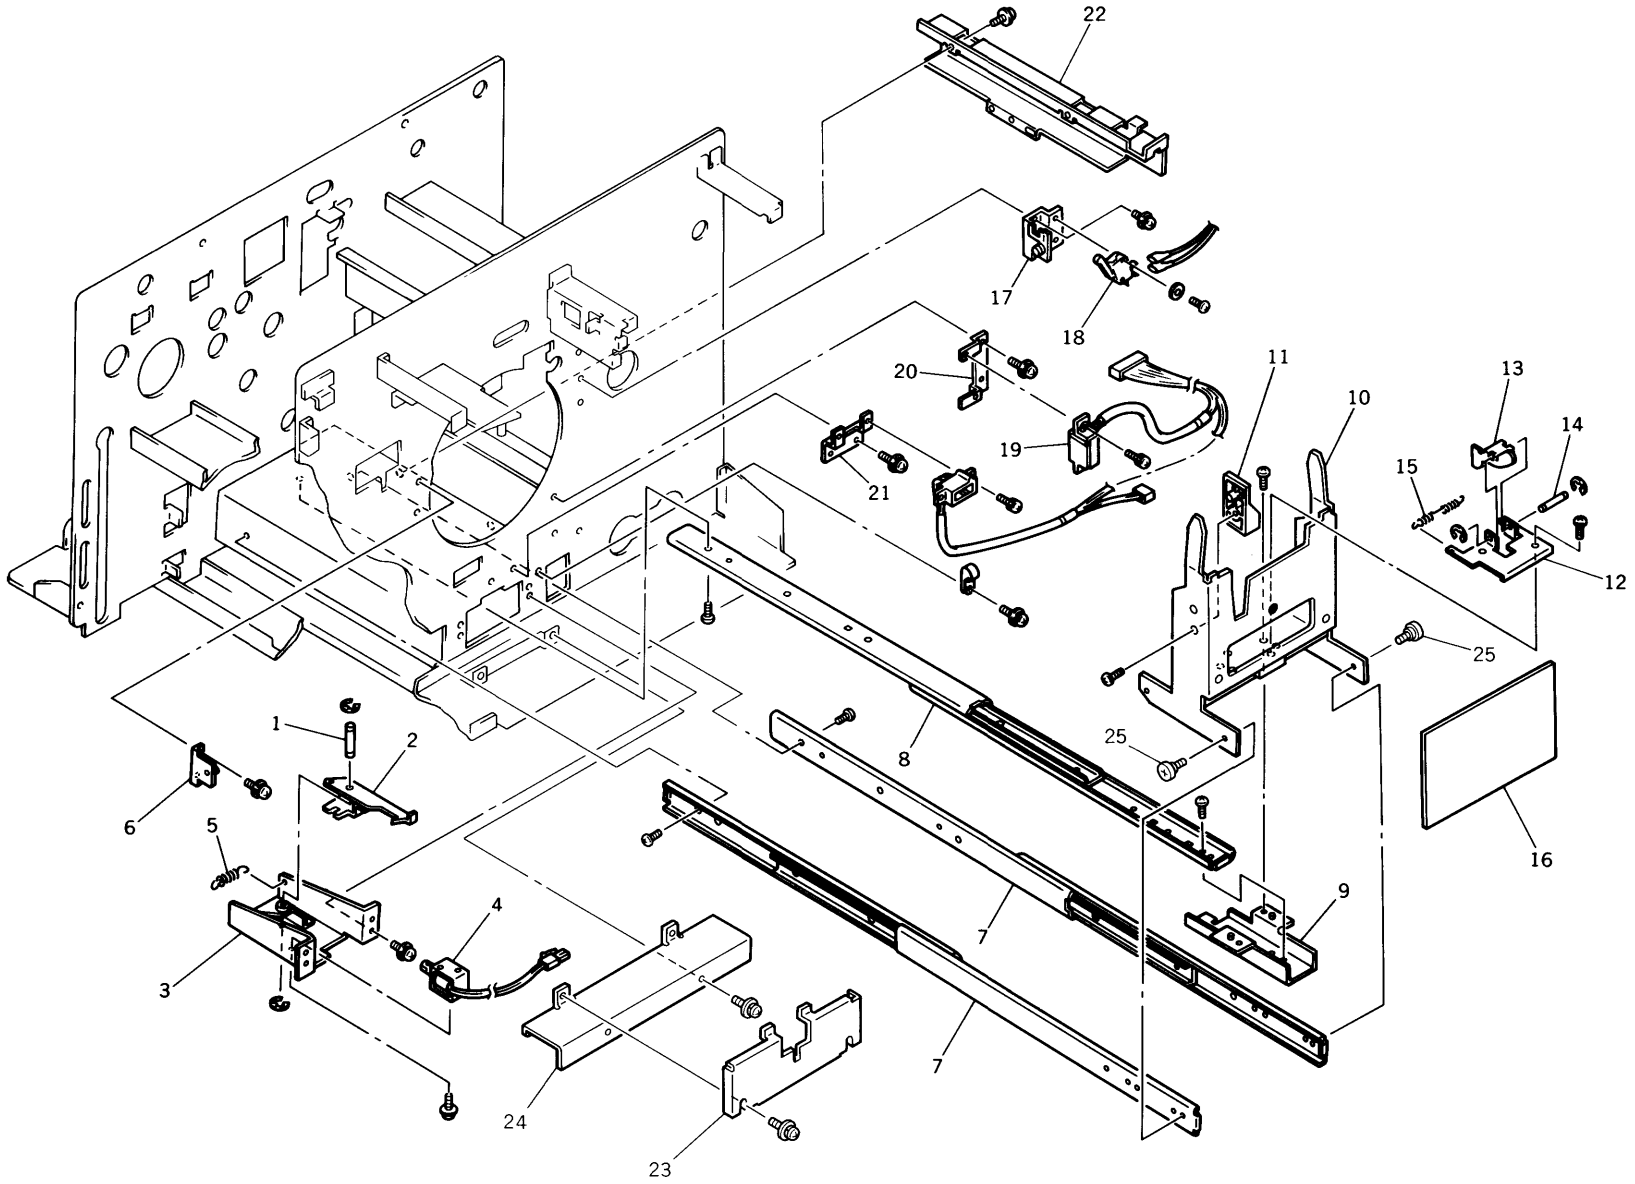

Fig. 13 Lock Lever Area

No.	Part No.	Part Name	Q'ty	Remark
	014-92351-004	Unit/Drum Lock		
1	014-12311-007	*Shaft; Lock	1	
2	014-12322-106	*Lock Hook; Drum Lock	1	
3	014-12324-109	*Bracket; Drum Lock	1	
4	019-65014-000	*Lock Solenoid	1	
5	014-12326-004	*Spring; Lock	1	
6	011-12311-005	Drum Catch (L)	1	
7	011-12306-117	Rail; Drum	2	B4, A4, L
7	014-12301-109	Rail; Drum; A3	2	A3
8	019-12301-008	Rail B; Drum	1	
9	014-12310-108	Rail Bracket; Drum	1	
	018-92130-007	Drum Holder Ass'y		
10	018-32311-002	*Drum Holder	1	
11	019-12304-007	*Guide Block; Drum Holder	1	
12	017-12605-100	*Lever Base; Drum Holder	1	
13	017-12604-103	*Lever; Drum Holder	1	
14	017-12606-009	*Shaft; Drum Holder	1	
15	017-12607-005	*Spring; Drum Holder	1	
16	550-21737-002	Seal; Drum Holder; Pic.	1	
16	550-21744-009	Seal; Drum Holder	1	
16	550-21745-005	Seal; Drum Holder; CH	1	
	019-92320-008	Drum Set SW Ass'y		
17	019-12308-002	*Drum Catch (R) II	1	
18	443-00120-609	*Micro-SW; E21-91N	1	
19	019-55028-100	Wire Harness; CN15	1	
20	019-12223-104	Bracket A; Connector; Drum	1	
21	017-12203-109	Bracket B; Connector; Drum	1	
22	017-21108-208	Bracket; Wire Harness	1	
23	018-37129-105	Cover; Drum Lock; CE	1	
24	018-37126-009	Cover; Wire Harness	1	
25	635-17634-206	Stepped Screw; 6x3.1;M4x4	2	

No.	Part No.	Part Name	Q'ty	Remark

Fig. 14 CLAMP-PRESSURE CONTROL AREA

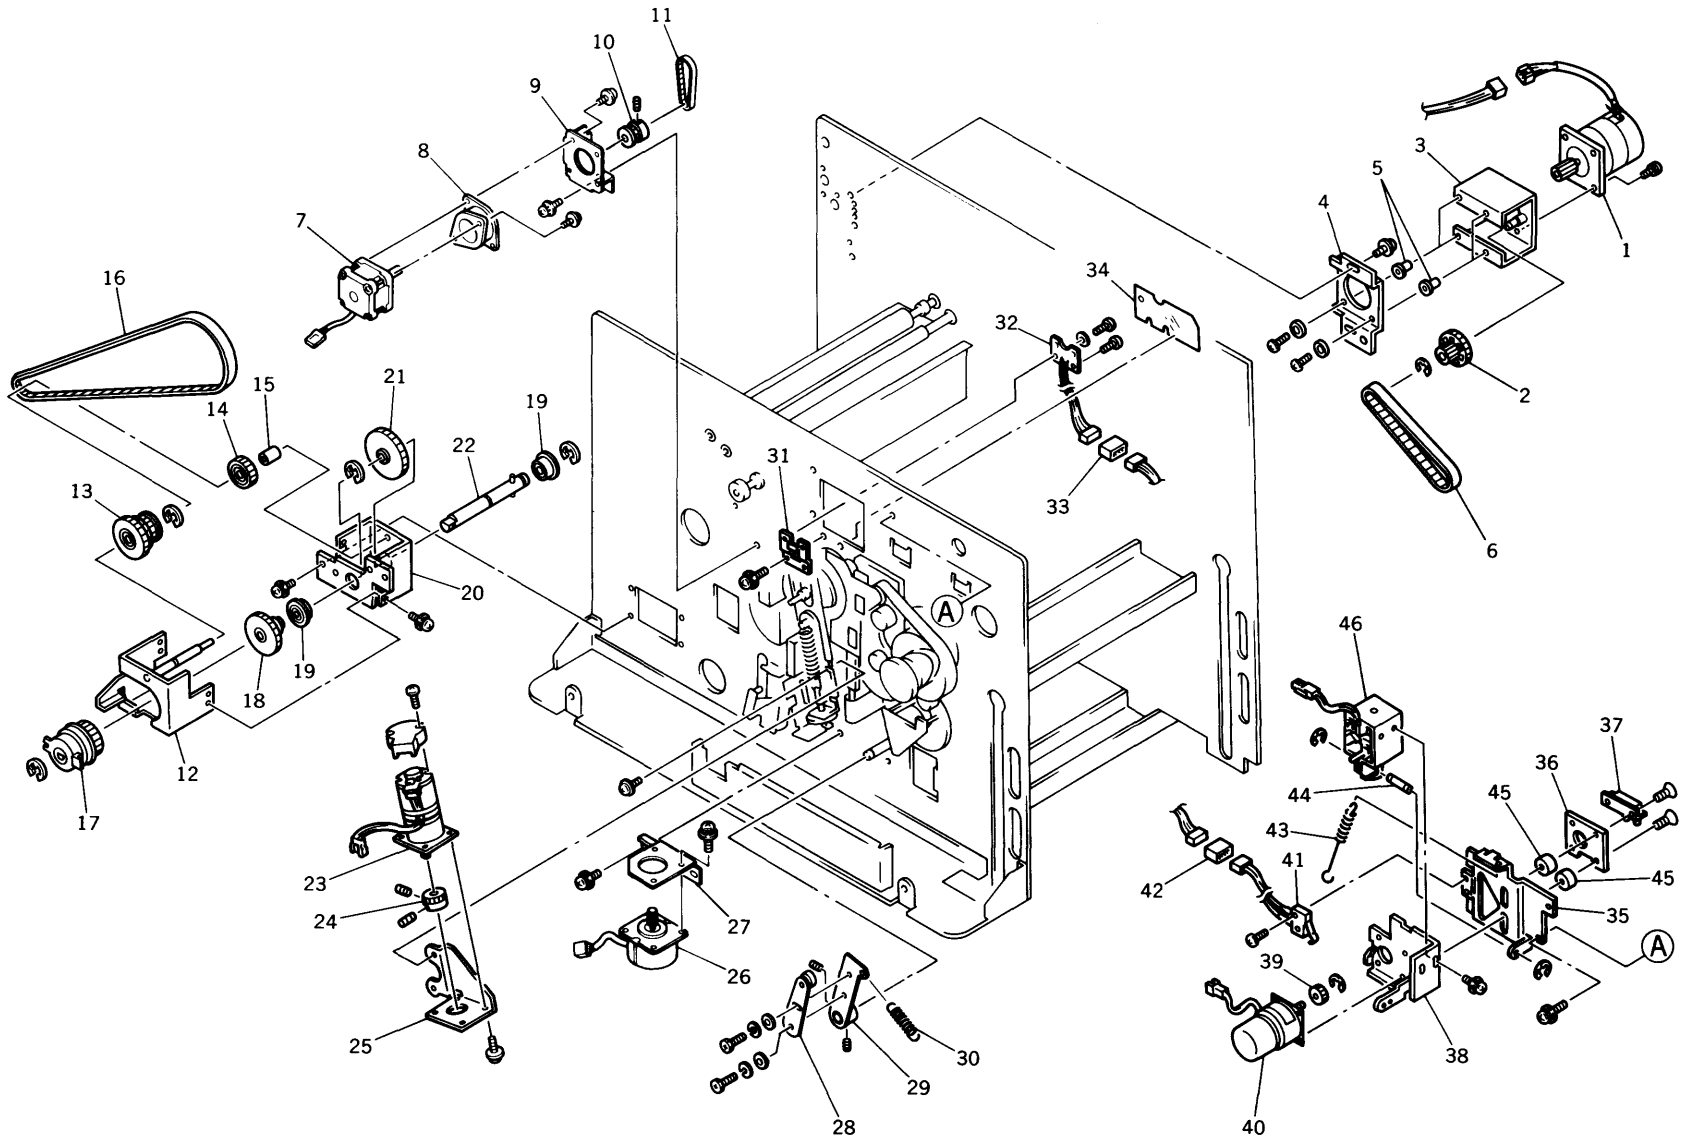

Fig. 14 Clamp-Pressure Control Area

No.	Part No.	Part Name	Q'ty	Remark
	019-95040-103	Unit/Write Pulse Motor		
1	019-65002-100	*Write Pulse Motor	1	
2	011-15018-007	*Pulley; Write Pulse Motor	1	
3	011-15146-102	*Bracket; Write Pulse Motor	1	
4	019-15125-006	*Base Plate; Write Pulse Motor	1	
5	665-04950-205	*Nut; E-632	4	
6	620-21429-002	Belt; B142 M x L-9.5	1	
6	620-21909-004	Belt; B190 M x L-9.5	1	A3
	017-95050-007	Unit/Loading Pulse Motor		
7	017-65015-207	*Loading Pulse Motor	1	
8	014-15155-006	*Mount; Loading Pulse Motor	1	
9	011-15037-109	*Bracket; Loading Pulse Motor	1	
10	009-35214-017	*Pulley PM (16); Exit Roller	1	
11	620-20714-005	Belt; B71M x L4.8	1	
	017-93602-100	Unit/Clutch		
	019-93602-104	Unit/Clutch; A3		A3
12	017-23605-500	*Clutch Cover	1	
12	019-23605-505	*Clutch Cover; A3	1	A3
13	019-13601-200	*Gear A; Clutch	1	
14	019-13604-004	*Idler Gear; Clutch	1	
15	634-05020-000	*Collar; ϕ 5.1 x 2.5	1	
16	620-97506-006	*Belt; 750-3GT-6	1	
17	019-65007-101	*Suction Clutch	1	
18	019-13602-001	*Gear B; Clutch	1	
19	600-08168-108	*Bearing; SC866ZZNR/1K	2	
20	017-23601-203	*Bracket; Suction Drive	1	
20	019-23601-208	*Bracket; Suction Drive; A3	1	A3
21	019-13603-105	*Drive Gear; Clutch	1	
22	017-23604-300	*Shaft; Clutch	1	
22	019-23604-304	*Shaft; Clutch; A3	1	A3
	017-91266-102	Pressure Control Motor Ass'y	1	
23	017-65005-406	*Pressure Control Motor	1	
24	019-11246-003	*Gear II; Pressure Control Motor	1	
25	017-11229-007	*Bracket; Pressure Control Motor	1	
	017-91240-103	Unit/Print Positioning Motor		

No.	Part No.	Part Name	Q'ty	Remark
26	017-11240-108	*Print Positioning Motor	1	
27	019-11214-004	*Bracket; Print Positioning Motor	1	
	006-91440-001	Unit/Adj. Plate; Timing Lever		
28	002-11421-100	*Adj. Plate; Timing Lever	1	
29	006-11308-205	*Timing Lever	1	
30	006-11311-206	Spring; Timing Lever; R3	1	
	017-93220-002	Angular Sensor Ass'y		
31	017-12409-009	*Bracket; Angular Sensors	1	
32	017-60016-000	*Angular Sensor	1	
33		**Junction Connector; 4P	1	Ref.Pg.II-36
34	002-12537-403	Protection Sheet	1	
	017-92400-201	Unit/Clamp		
35	014-12401-103	*Base Plate; Clamp Solenoid	1	
36	011-12405-107	*Bracket; Compensator Plate	1	
37	019-12401-002	*Compensator Plate	1	
38	014-12402-401	*Bracket; Clamp Solenoid	1	
39	011-12411-000	*Gear; Clamp Motor	1	
40	017-65004-205	*Clamp Motor	1	
41	017-60011-009	*Clamp Safety Switch	1	
42		**Junction Connector; 2P	1	Ref.Pg.II-36
43	011-12402-108	*Spring; Clamp Solenoid	1	
44	011-12410-003	*Plunger Pin; Clamp Solenoid	1	
45	011-12412-006	*Spacer; Compensator Plate	2	
46	011-65004-503	*Clamp Solenoid	1	

Fig. 15 SEPARATOR AREA (FR2950)

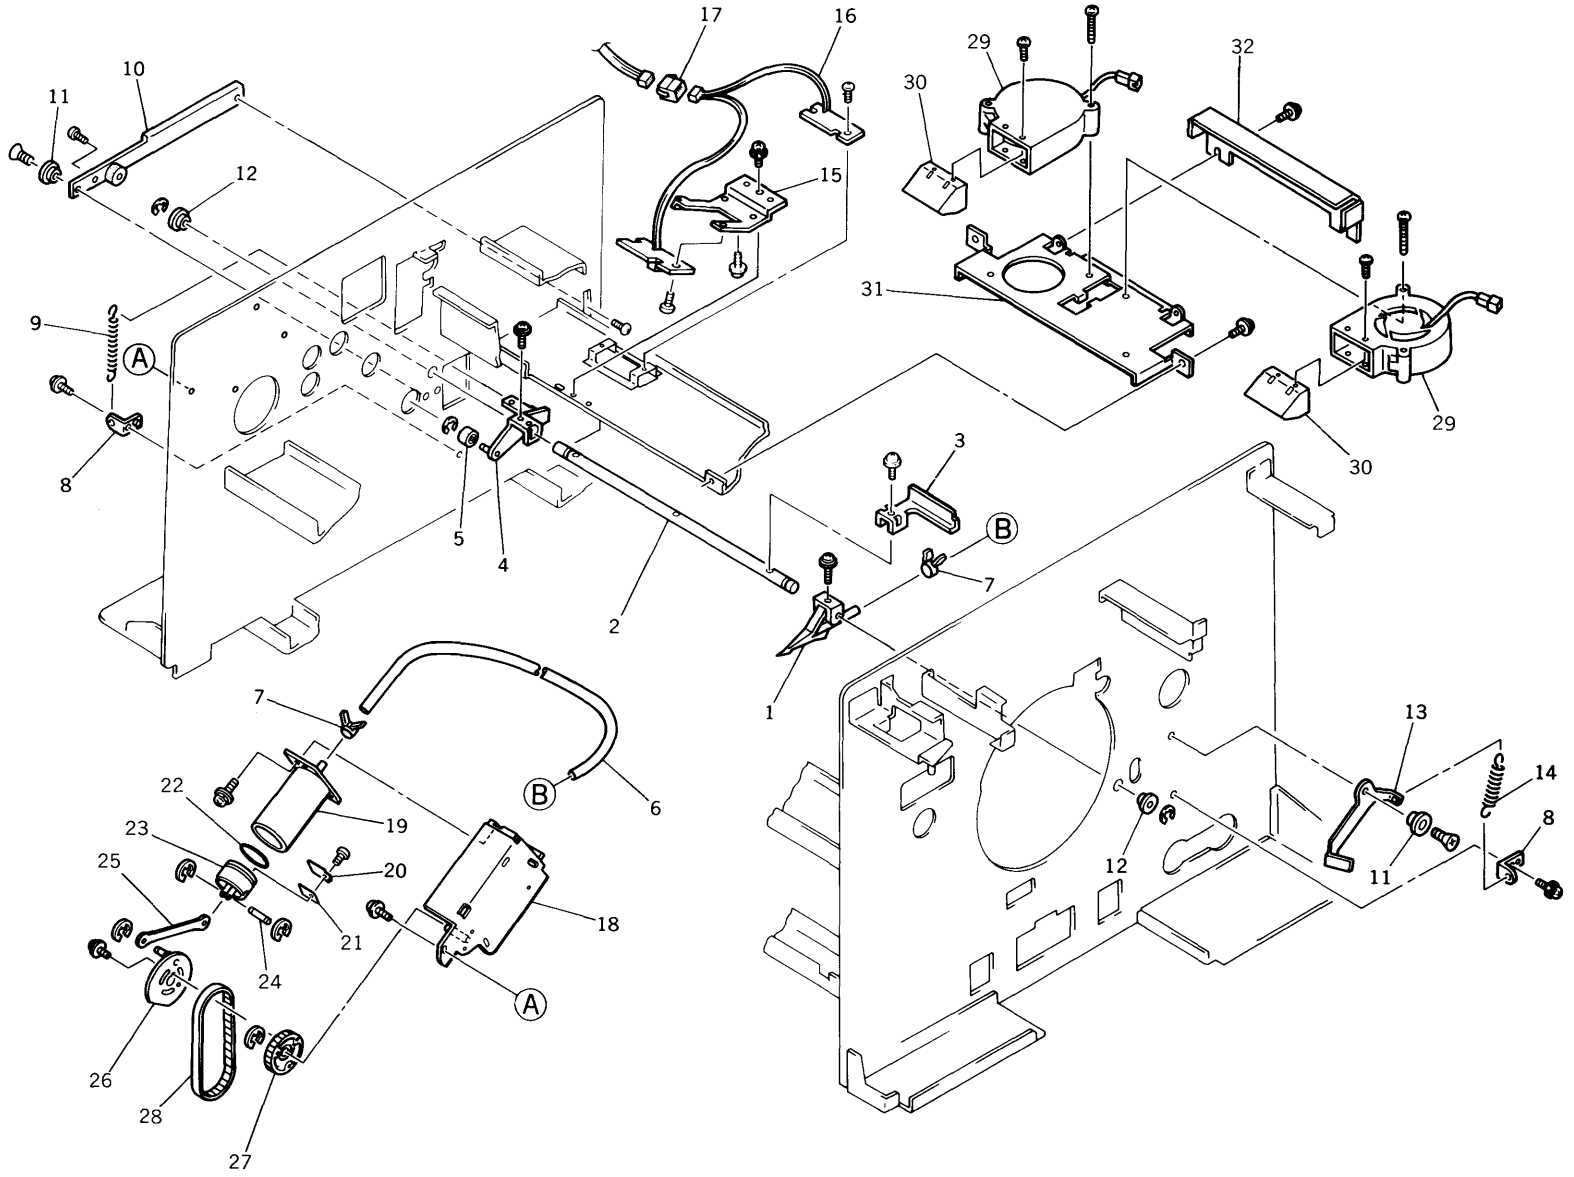

Fig. 15 Separator Area (FR2950)

No.	Part No.	Part Name	Q'ty	Remark
	017-93310-109	Separator Ass'y; CE		
1	019-13301-109	*Separator II	1	
2	011-13304-207	*Shaft; Separator; CE	1	
3	011-13311-106	*Release Lever	1	
4	011-13301-208	*Lever; Separator	1	
5	000-01515-004	*Collar; Separator	1	
6	019-13514-005	*Air Hose; Separator	1	
7	665-02901-002	*Power Band T10	1	
7	665-02901-002	Power Band T10	1	
8	011-13310-002	Hook Plate	2	
9	002-13352-202	Spring; Separator	1	
10	011-13307-206	Adj. Stopper; Separator	1	
11	011-13306-005	Collar A; Separator	2	
12	607-15000-000	Metal; F8 x 13/12 x 5; 16 x 2	1	
13	017-13301-007	Release Lever; Separator	1	
14	007-13121-100	Spring; Release Lever	1	
	019-93201-207	Paper Receiving Sensor IV (Receive) Ass'y		
15	017-23314-000	*Bracket II; P. -Rcv. Sensor II (Receive)	1	
16	019-60013-200	*Paper Receiving Sensor IV (Receive)	1	
17		**Junction Connector; 6P	1	Ref.Pg.II-36
	019-93320-109	Air Pump Ass'y		
18	019-13507-106	*Bracket; Air Pump	1	
19	019-13501-000	*Cylinder; Air Pump	1	
20	019-13517-004	*Cylinder Valve II; Air Pump	1	
21	019-13518-000	*Cylinder Valve Sheet; Air Pump	1	
22	640-67340-009	*O Ring; 34-3.6	1	
23	019-13516-105	*Piston Head II; Air Pump	1	
24	019-13512-002	*Arm Shaft; Air Pump	1	
25	019-13511-103	*Arm; Air Pump	1	
26	019-13504-000	*Cam Plate; Air Pump	1	
27	019-13503-003	*Cam Pulley; Air Pump	1	
28	620-73758-004	*Belt; 375-5GT-8	1	
	017-93301-002	Separation Fan Ass'y II		
29	017-65019-008	*Separation Fan	2	
30	017-23311-108	*Nozzle; Separation	2	

No.	Part No.	Part Name	Q'ty	Remark
31	017-23312-104	*Bracket II; Separation Fan	1	
32	017-23313-208	*Cover II; Separation Fan	1	

Fig. 16 SEPARATOR AREA (FR3950)

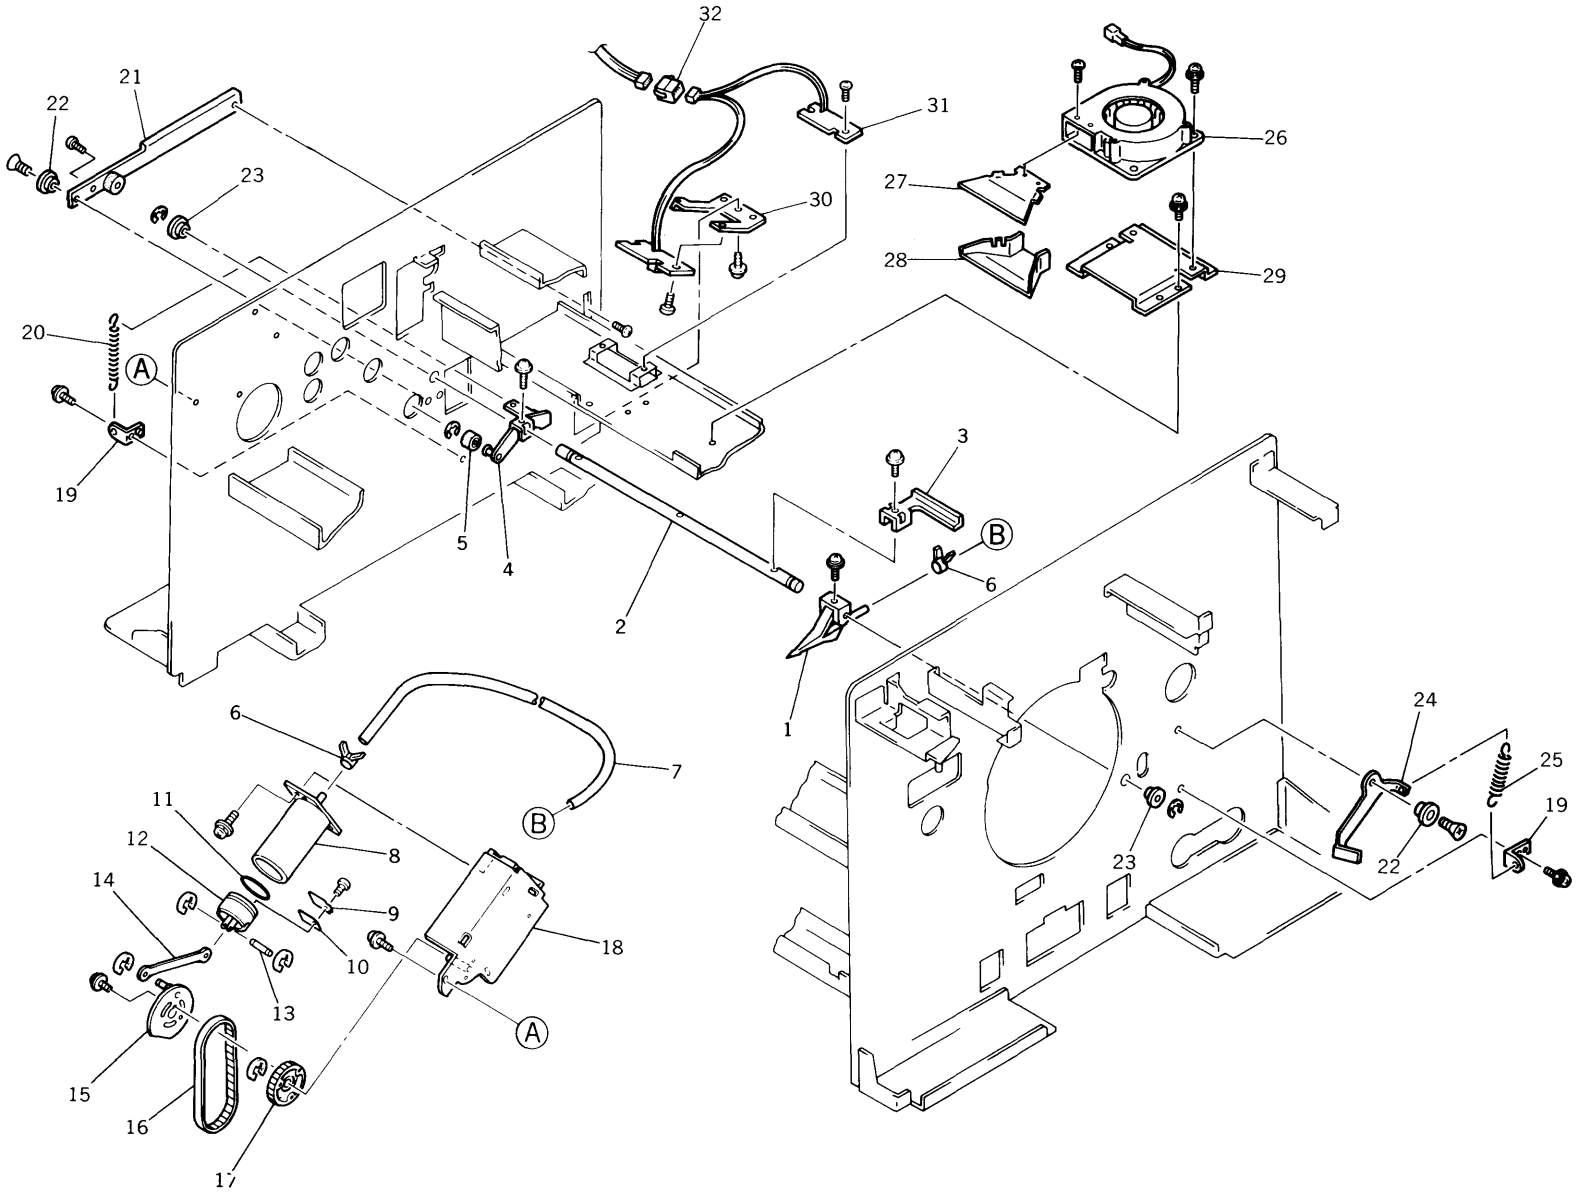

Fig. 16 Separator Area (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
	019-93300-108	Separator Ass'y; A3; CE		
1	019-13301-109	*Separator II	1	
2	019-23301-107	*Shaft; Separator II; A3; CE	1	
3	011-13311-106	*Release Lever	1	
4	011-13301-208	*Lever; Separator	1	
5	000-01515-004	*Collar; Separator	1	
6	665-02901-002	*Power Band T10	1	
7	019-13514-005	*Air Hose; Separator	1	
6	665-02901-002	Power Band T10	1	
	019-93320-109	Air Pump Ass'y		
8	019-13501-000	*Cylinder; Air Pump	1	
9	019-13517-004	*Cylinder Valve II; Air Pump	1	
10	019-13518-000	*Cylinder Valve Sheet; Air Pump	1	
11	640-67340-009	*O Ring; 34-3.6	1	
12	019-13516-105	*Piston Head II; Air Pump	1	
13	019-13512-002	*Arm Shaft; Air Pump	1	
14	019-13511-103	*Arm; Air Pump	1	
15	019-13504-000	*Cam Plate; Air Pump	1	
16	620-73758-004	*Belt; 375-5GT-8	1	
17	019-13503-003	*Cam Pulley; Air Pump	1	
18	019-13507-106	*Bracket; Air Pump	1	
19	011-13310-002	Hook Plate	2	
20	002-13352-202	Spring; Separator	1	
21	011-13307-206	Adj. Stopper; Separator	1	
22	011-13306-005	Collar A; Separator	2	
23	607-15000-000	Metal; F8 x 13/12 x 5; 16 x 2	1	
24	017-13301-007	Release Lever; Separator	1	
25	007-13121-100	Spring; Release Lever	1	
	019-93310-006	Separation Fan Ass'y		
26	019-65006-008	*Separation Fan	1	
27	014-13311-108	*Nozzle (Upper); Separation	1	
28	014-13310-004	*Nozzle (Lower); Separation	1	
29	014-13312-007	Bracket; Separation Fan	1	
	019-93201-207	Paper Receiving Sensor IV (Receive) Ass'y		
30	017-23314-000	*Bracket II; P. -Rcv. Sensor II (Receive)	1	

No.	Part No.	Part Name	Q'ty	Remark
31	019-60013-200	*Paper Receiving Sensor IV (Receive)	1	
32		**Junction Connector; 6P	1	Ref.Pg.II-36

Fig. 17 SUCTION UNIT

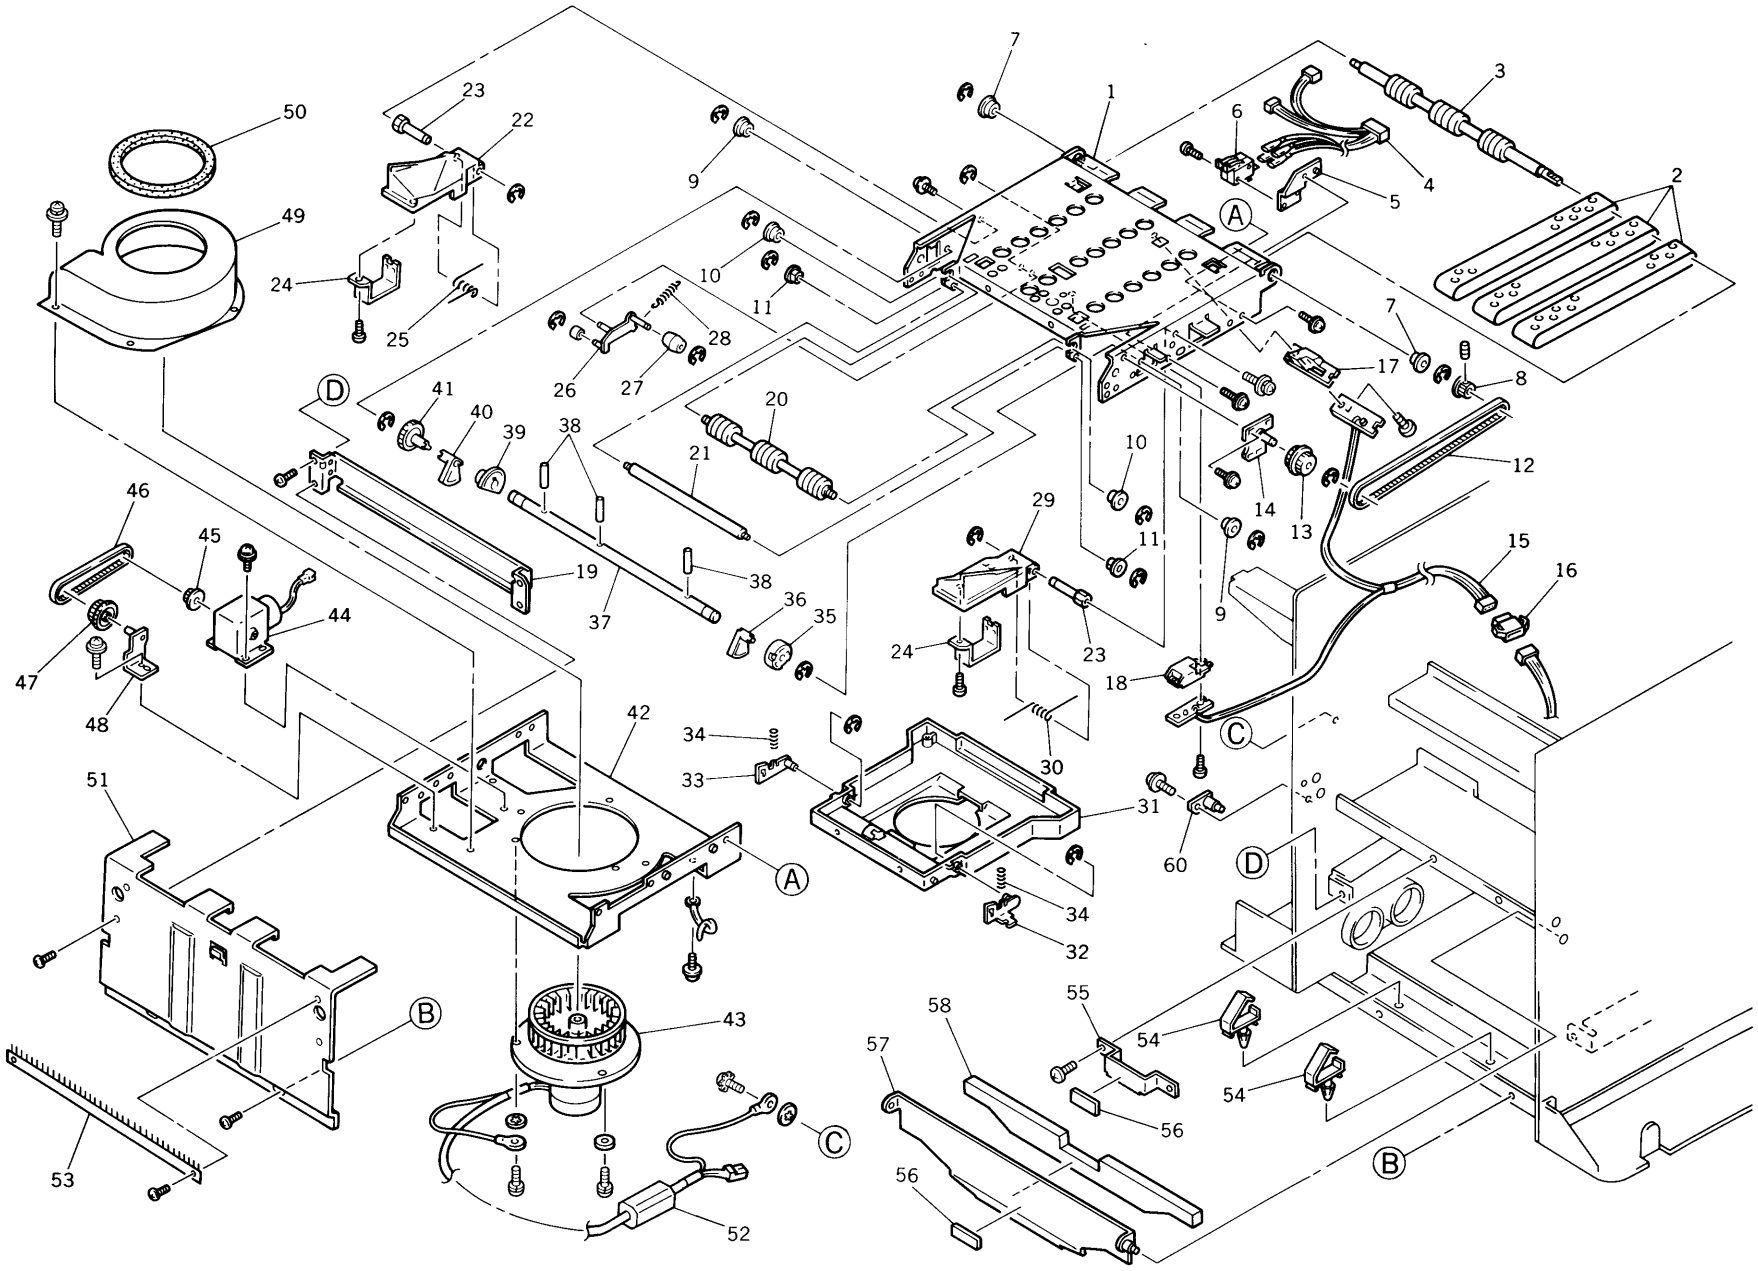

Fig. 17 Suction Unit

No.	Part No.	Part Name	Q'ty	Remark
	017-93205-208	Suction Unit W; CE		
	019-93200-200	Suction Unit W; A3; CE		A3
1	017-13201-800	*Face Cover W; Suction	1	
2	011-13220-003	*Transfer Belt	3	
3	017-13247-002	*Drive Shaft; Suction	1	
4	019-55036-103	*Wire Harness; Suction	1	
5	017-13229-209	*Adj. SW Plate; Suction	1	
6	443-02006-005	*Micro-SW; ABV1236413	2	
7	600-08168-000	*Bearing NMB; LNR-1680HH	2	
8	011-13204-008	*Pulley; Suction Motor	1	
9	607-13000-003	*Metal; F6 x 10/9 x 4; 12 x 1.5	2	
10	600-50046-004	*Bearing; FLAWBC6-12ZZA	2	
11	607-11003-005	*Metal; F4 x 6 / 5.6 x 5.9; 9 x 1	2	
12	620-22394-008	*Belt; 239-M x L-4.8	1	
13	019-13203-000	*Gear Pulley 38; Suction	1	
14	017-13237-104	*Fulcrum Plate II; Gear Pulley; Suction	1	
15	019-60012-204	*Paper Receiving Sensor (Send) IV	1	
16		**Junction Connector; 4P	1	Ref.Pg.II-36
17	017-13220-201	*Cover; Paper Rcv. Sensor 1	1	
18	017-13221-305	*Cover; Paper Rcv. Sensor 2	1	
19	017-13240-008	*Stay; Suction	1	
20	017-13235-004	*Idler Shaft; Suction	1	
21	017-13236-205	*Belt Idler; Suction	1	
22	017-23206-002	*Jump Wing (F); Suction	1	
22	019-13137-007	*Jump Wing (F); Suction	1	A3
23	017-13205-202	*Shaft; Jump Wing	2	
24	017-13208-007	*Wing Plate; Suction	2	
25	017-13239-000	*Spring; Jump Wing (F)	1	
26	017-13211-008	*Shaft Plate; Belt Roller; Suction	1	
27	017-13216-000	*Belt Roller; Suction	1	
28	017-13210-001	*Spring; Belt Roller; Suction	1	
29	017-23207-009	*Jump Wing (R); Suction	1	
29	019-13138-003	*Jump Wing (R); Suction	1	A3
30	017-13241-004	*Spring; Jump Wing (R)	1	
31	017-13219-300	*Suction Cover W (Upper)	1	

No.	Part No.	Part Name	Q'ty	Remark
32	017-13255-005	*Side Flap (R); Suction	1	
33	017-13252-006	*Side Flap (F); Suction	1	
34	017-13257-008	*Spring; Side Flap; Suction	2	
35	017-13228-105	*SW Cam; Suction	1	
36	017-13226-102	*Wing Cam (R); Suction	1	
37	017-13222-204	*Shaft; Wing Cam; Suction	1	
38		*Pin; f 2x 8	3	Ref.Pg.II-36
39	017-13225-106	*Roller Cam; Suction	1	
40	017-13224-207	*Wing Cam (F); Suction	1	
41	017-13223-006	*Cam Gear; Suction	1	
42	017-13232-102	*Bracket; Suction Fan	1	
43	019-65010-102	*Suction Fan Ass'y; CE	1	
44	017-65006-003	*Wing Motor; Suction	1	
45	017-13248-009	*Pulley; Wing Motor	1	
46	620-62256-007	*Belt; B60S3M225	1	
47	017-13246-006	*Wing Gear; Suction	1	
48	017-13242-000	*Shaft Plate; Wing Gear	1	
49	011-13206-205	*Suction Fan Cover	1	
50	017-13233-001	*Seal	1	
51	017-33250-301	Cover Plate W; Suction; CE	1	
51	019-43201-206	Cover Plate II; Suction; CE	1	A3
52	435-00025-000	Core; SFC-6	1	
53	017-13258-004	De-electricity Brush; Suction	1	
54	665-02031-008	Clamp; CP2311	2	
55	018-33136-000	Catch; Suction Unit	1	
56	018-33152-005	Sheet: Suction Unit	2	
57	018-33130-109	Receiving Tray Plate	1	
57	019-43111-002	Receiving Tray Plate; A3	1	A3
58	018-33150-002	Sound-Proof; Receiving Tray Plate	1	
58	019-43113-005	Sound-Proof; Receiving Tray Plate; A3	1	A3
60	017-15234-005	Set Plate; Master Holder Cover	1	

Fig. 18 PRECISION STACKING TRAY

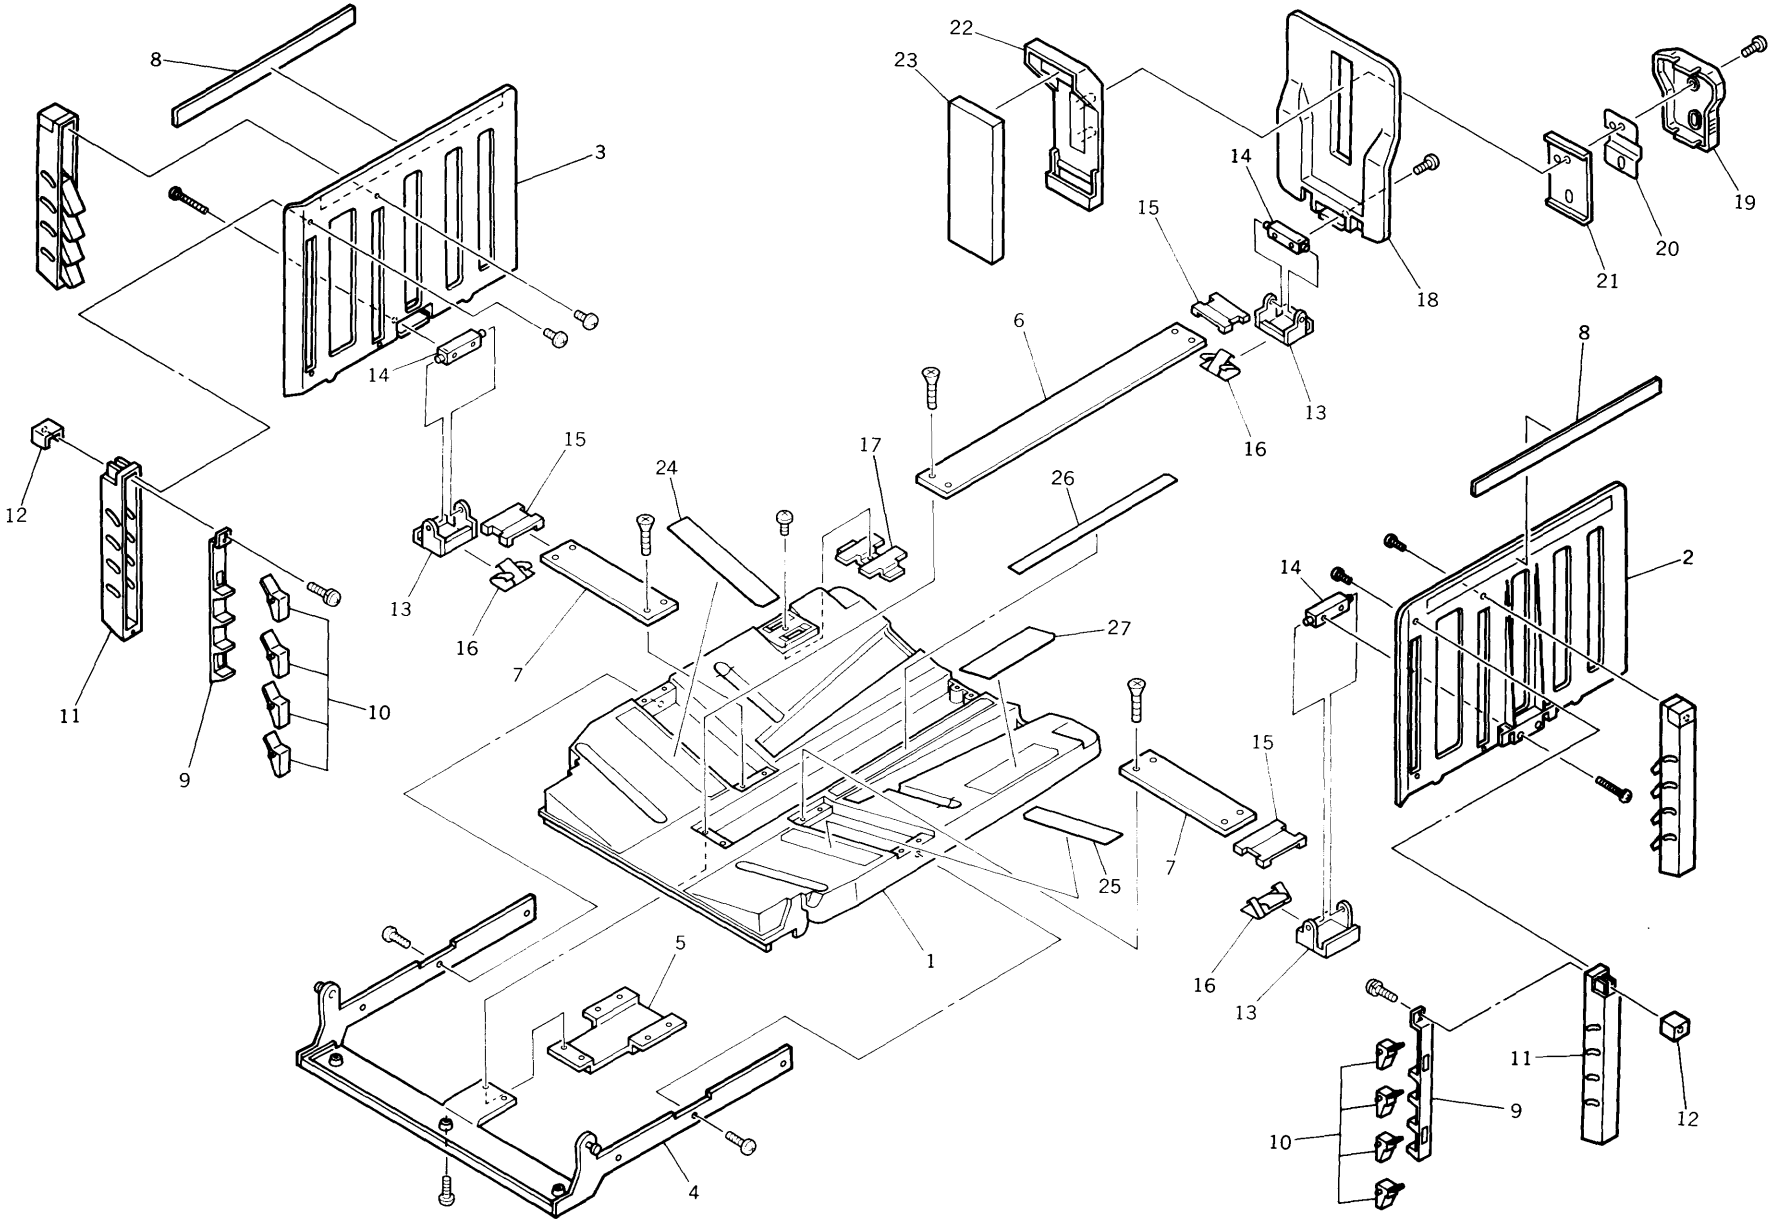

Fig. 18 Precision Stacking Tray

No.	Part No.	Part Name	Q'ty	Remark
	018-93105-057	Unit/Paper Receiving Tray; FR		
1	019-13125-106	*Receiving Tray Plate	1	
2	019-13102-009	*Paper Guide F; P. -Rcv. -T.	1	
3	019-13103-005	*Paper Guide R; P. -Rcv. -T.	1	
4	018-33110-000	*Frame; P. -Rcv. -T.	1	
5	019-13130-002	*Ground Plate; P. -Rcv. -T.	1	
6	019-13131-203	*Slide Rail A; P. -Rcv. -T.	1	
7	019-13132-200	*Slide Rail B; P. -Rcv. -T.	2	
8	019-13112-004	*Reinforce Plate; P. -Rcv. -T.	2	
9	015-35244-312	*Flap Adj. Plate; P. -Rcv. -T.	4	
10	019-13115-216	*Flap; P. -Rcv. -T.	16	
11	019-13116-115	*Flap Cover; P. -Rcv. -T.	4	
12	015-35246-013	*Adj. Lever; P. -Rcv. -T.	4	
13	015-35223-102	*Slide Base; P. -Rcv. -T.	3	
14	007-13124-109	*Base Block; Paper Guide; Rcv.	3	
15	015-35226-012	*Slide Plate; P. -Rcv. -T.	3	
16	015-35225-300	*Plate Spring; P. -Rcv. -T.	3	
17	019-13133-109	*Catch Plate; P. -Rcv. -T.	1	
18	018-33101-001	*Back Stop; P. -Rcv. -T.	1	
19	018-33104-000	*Stopper; P.-Rcv.-T.	1	
20	018-33105-007	*Plate; Fence	1	
21	018-33103-004	*Hook Plate	1	
22	018-33102-105	*Bracket: Cushion	1	
23	018-33151-106	*Fence Cusion	1	
	550-21299-102	Seal; P. -Rcv. -T.	1	
	550-21298-114	Seal; P. -Rcv. -T.; Pic.	1	
	550-21296-103	Seal; P. -Rcv. -T.; US	1	
	550-21527-008	Seal; P. -Rcv. -T.; CH	1	
24		**Seal F; P.-Rcv.-T.	1	
25		**Seal R; P.-Rcv.-T.	1	
26		**Seal C; P.-Rcv.-T.	1	
27		**Seal; Precision Stacking Tray	1	

No.	Part No.	Part Name	Q'ty	Remark

Fig. 19 ADF AREA (1)

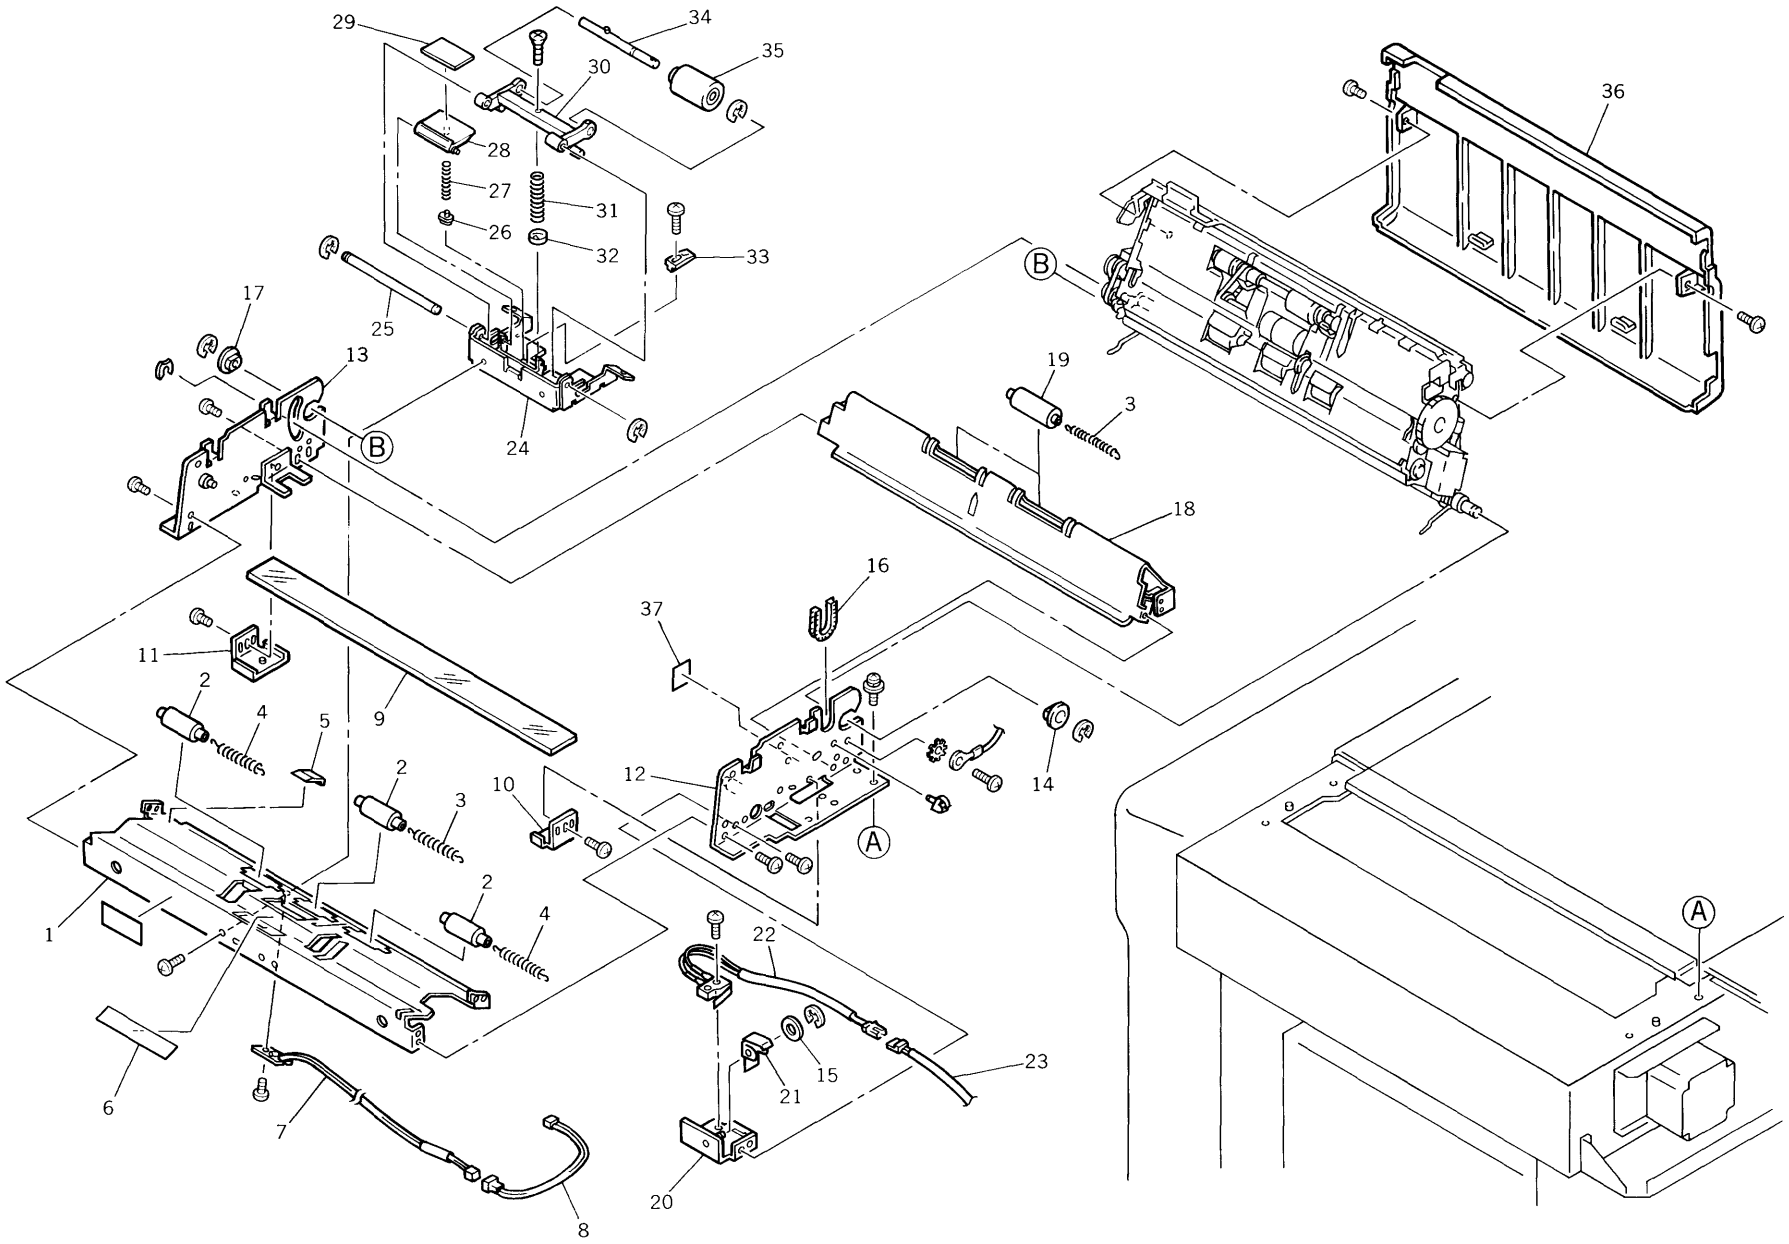

Fig. 19 ADF Area (1)

No.	Part No.	Part Name	Q'ty	Remark
1		Unit/ADF		
1		*ADF AREA (2)		
1	019-36526-000	*Original Guide Base (F);FB-ADF	1	
2	017-16542-005	*Roller (Lower); ADF	3	
3	017-16555-000	*Roller (Spring); ADF	3	
4	018-16590-104	*Roller Spring II; ADF	2	
5	019-36515-009	*Guide; Belt	1	
6	019-36516-005	*Sheet; Original Guide Base	1	
7	018-16568-001	*Original IN Sensor (Receive); FB-ADF	1	
8	018-16569-008	*Wire Harness; Original IN Sensor	1	
9	018-16502-108	*Glass Plate; Image Scanner	1	
10	018-16533-100	*Glass Holder R; Image Scanner	1	
11	018-16534-107	*Glass Holder L; Image Scanner	1	
12	019-36530-008	*Side Frame R; FB-ADF	1	
13	018-16508-203	*Side Frame L; FB-ADF	1	
14	018-16548-000	*Metal; 8M	1	
15	639-00405-008	*Washer; 4 x 6.5 x 0.5	1	
16	018-16578-201	*Free Bushing	1	
17	018-16554-000	*Metal; Exit Roller	1	
18	018-16592-000	*Original Guide Base (R); FB-ADF	1	
19	018-16593-006	*Exit Wheel; ADF; FB	2	
20	018-16598-105	*Bracket; ADF SW	1	
21	018-16600-002	*Actuator; ADF SW	1	
22	018-16570-006	*ADF SW; FB	1	
23	018-16571-002	*Wire Harness; FB-ADF SW	1	
24	019-36533-007	*Frame B; FB-Original Guide	1	
25	019-36537-002	*Stripper Shaft; FB-ADF	1	
26	019-36524-008	*Tray Push; FB-ADF	1	
27	019-36519-004	*Tray Spring; FB-ADF	1	
28	019-36518-008	*Stripper Tray; FB-ADF	1	
29	019-36520-002	*Stripper Pad; FB-ADF	1	
30	019-36534-003	*Stripper Arm; FB-ADF	1	
31	019-36535-000	*Spring; Stripper Arm	1	
32	018-16580-001	*Spacer; Stripper; FB-ADF	1	
33	019-36517-001	*Spring Plate; FB-ADF	1	
34	019-36509-009	*Shaft; Stripper Roller	1	
35	019-36508-002	*Stripper Roller; ADF	1	
36	018-16305-604	Cover B; FB-ADF	1	
37	550-20760-000	Seal; Image Scanner	1	

Fig. 20 ADF AREA (2)

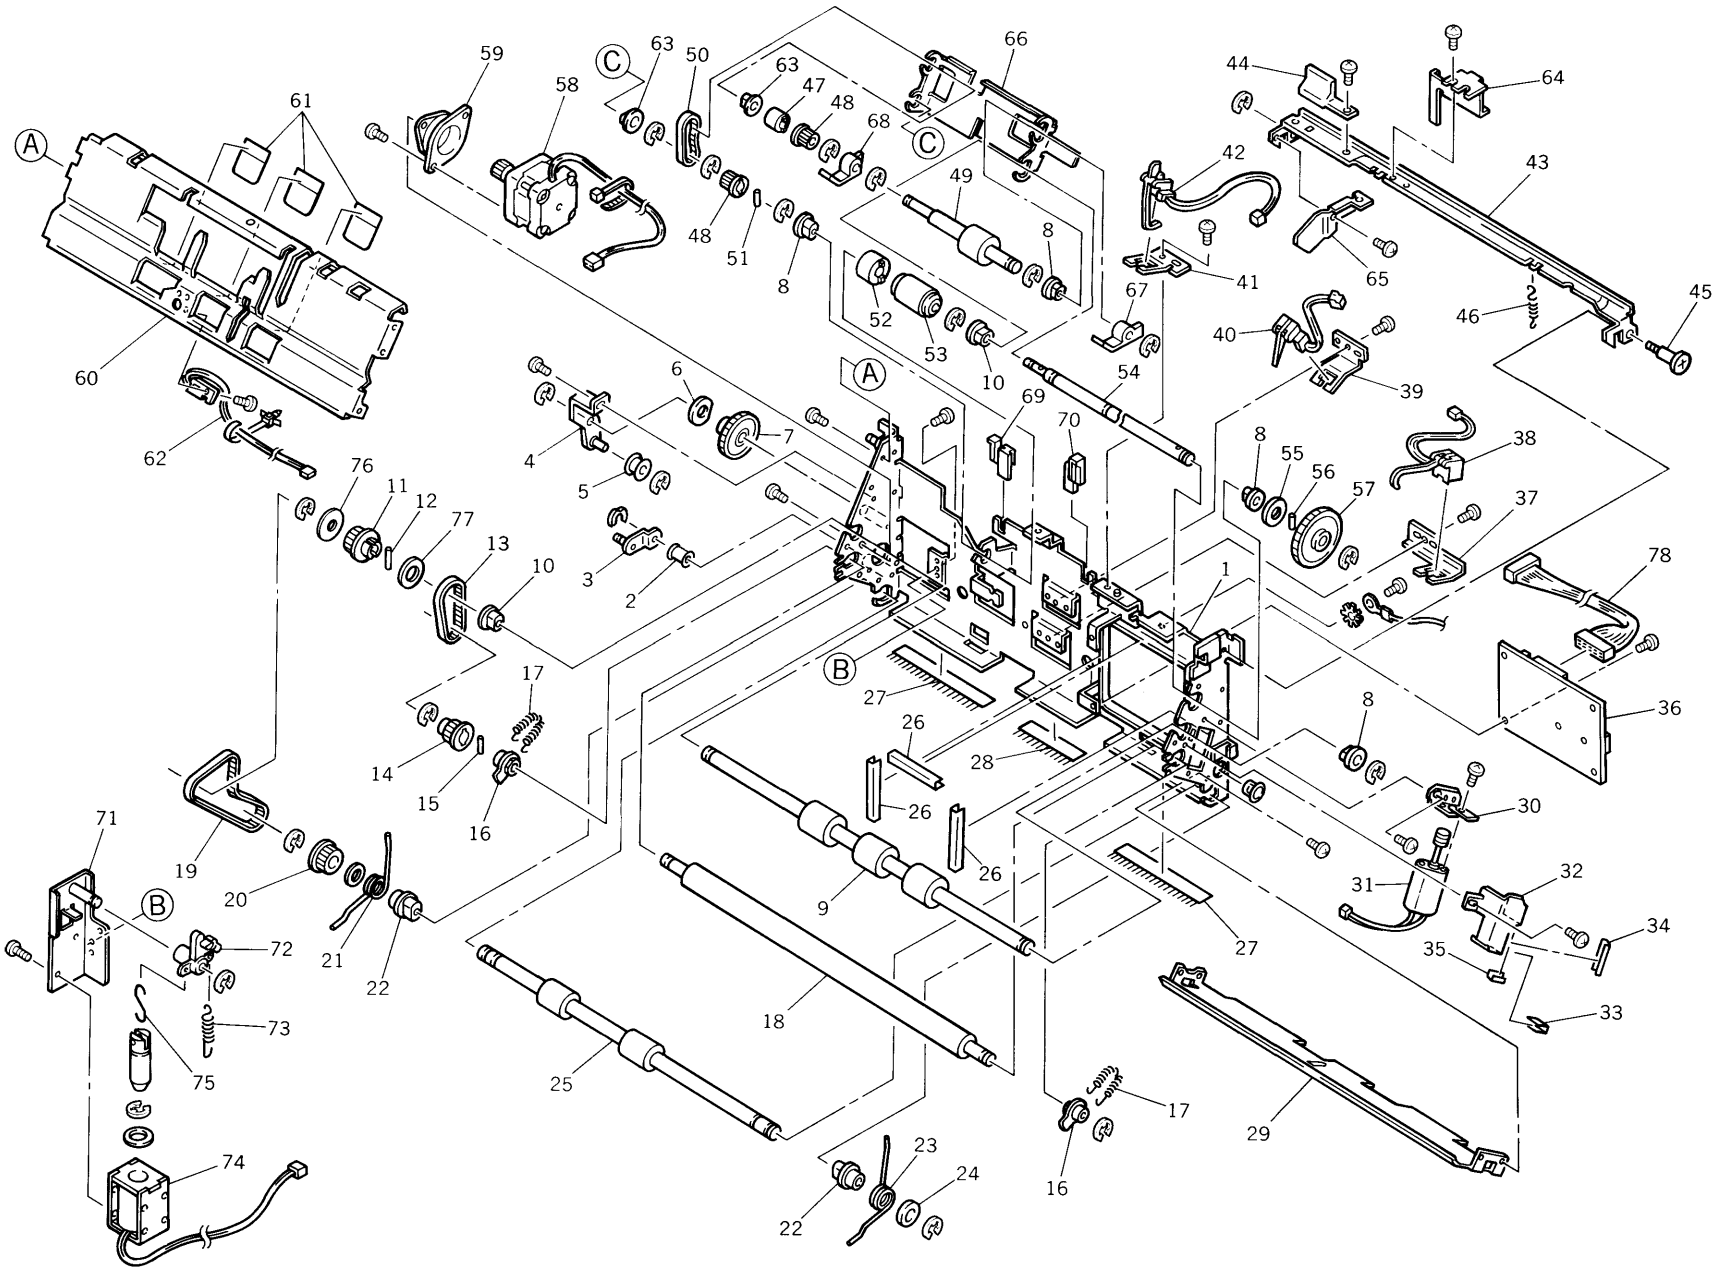

Fig. 20 ADF Area (2)

No.	Part No.	Part Name	Q'ty	Remark
		Unit/ADF		
		*ADF AREA (1)		
1	019-36529-000	*Upper Frame; FB-ADF	1	
2	018-16543-009	*Tension Pulley A; FB-ADF	1	
3	018-16506-006	*Stopper Plate; FB-ADF	1	
4	018-16507-100	*Tension Plate; FB-ADF	1	
5	018-16510-003	*Tension Pulley B; FB-ADF	1	
6	018-16546-008	*Spacer; Main Gear; FB-ADF	1	
7	018-16503-104	*Main Gear; FB-ADF	1	
8	018-16548-000	*Metal; 8M	4	
9	018-16513-002	*Transfer Roller; FB-ADF	1	
10	018-16547-004	*Metal; 8P	2	
11	019-36539-005	*Pulley; Transfer Roller	1	
12		*Pin; ϕ2 x 14	1	Ref.Pg.II-36
13	018-16572-009	*Belt B; 56	1	
14	018-16544-005	*Pulley; Read Roller	1	
15		*Pin; ϕ2 x 10	1	Ref.Pg.II-36
16	018-16550-102	*Housing; Read Roller	2	
17	017-16562-006	*Spring; Read Roller	2	
18	018-16516-109	*Read Roller	1	
19	018-16585-003	*Belt; 118	1	
20	018-16545-001	*Exit Pulley; FB-ADF	1	
21	018-16559-002	*Spring L; FB-ADF	1	
22	018-16549-007	*Housing; Exit Roller	2	
23	018-16558-006	*Spring R; FB-ADF	1	
24	018-16552-008	*Spacer; Exit Roller	1	
25	018-16514-009	*Exit Roller (Upper); FB-ADF	1	
26	018-16577-000	*Bushing; FB-ADF	3	
27	018-16555-007	*De-electricity Brush A; FB-ADF	2	
28	017-16546-000	*De-electricity Brush B; ADF	1	
29	018-16591-003	*Guide Plate; FB-ADF	1	
30	018-16522-001	*Bracket; ADF Motor	1	
31	018-16561-104	*ADF Motor; FB	1	
32	018-16518-101	*Motor Cover; FB-ADF	1	
33	018-16582-004	*Bushing (2); ADF Motor	1	

No.	Part No.	Part Name	Q'ty	Remark
34	018-16581-008	*Bushing (1); ADF Motor	1	
35	018-16583-000	*Bushing (3); ADF Motor	1	
36	017-51000-207	*ADF PCB	1	
37	018-16537-009	*Bracket; Original Regist. Sensor	1	
38	018-16565-002	*Original Regist. Sensor	1	
39	018-16535-103	*Bracket; Original Out Sensor	1	
40	018-16566-009	*Original Out Sensor	1	
41	018-16536-002	*Bracket; Original Det. Sensor	1	
42	018-16564-006	*Original Det. Sensor	1	
43	019-36528-003	*Hook Plate; FB-ADF	1	
44	018-16532-007	*Open Lever; FB-ADF	1	
45	018-16504-003	*Stepped Screw; M4 x 13	1	
46	019-36540-003	*Spring; Open Lever	1	
47	018-16575-008	*Collar; Pickup Roller; FB-ADF	1	
48	017-16530-007	*Pulley A; ADF	2	
49	019-36531-004	*Pickup Roller (Upper); FB-ADF	1	
50	017-16588-005	*Betl; 44	1	
51		*Pin; ϕ 2 x 10	1	Ref.Pg.II-36
52	018-16541-006	*Collar; Stripper Roller	1	
53	019-36536-006	*Stripper Roller; FB-ADF	1	
54	019-36532-000	*Shaft; Stripper Roller; FB-ADF	1	
55	018-16526-007	*Spacer; WHG	1	
56		*Pin; ϕ 2 x 12	1	Ref.Pg.II-36
57	017-16538-008	*Gear; ADF	1	
58	018-16563-000	*Read Pulse Motor; FB-ADF	1	
59	017-16595-001	*Mount; Read Pulse Motor	1	
60	019-36527-007	*Original Guide (F); FB-ADF	1	
61	019-36521-009	*Sheet Guide; FB-ADF	3	
62	018-16567-005	*Original IN Sensor (Send)	1	
63	018-16551-001	*Metal; 6	2	
64	019-36511-003	*Lever; Hook Plate	1	
65	019-36512-000	*Plate; Hook Plate	1	
66	019-36501-008	*Pickup Roller Frame; FB-ADF	1	
67	019-36503-000	*Lever Shutter R	1	
68	019-36504-007	*Lever Shutter L	1	

Fig. 20 ADF Area (2)

No.	Part No.	Part Name	Q'ty	Remark
69	019-36505-003	*Claw L; FB-ADF	1	
70	019-36506-000	*Claw R; FB-ADF	1	
71	019-36502-004	*Bracket; Pickup Solenoid	1	
72	019-36507-006	*Lever; Pickup	1	
73	019-36514-002	*Spring; Pickup Solenoid	1	
74	019-36538-009	*Pickup Solenoid; FB-ADF	1	
75	019-36510-007	*Link; Pickup Solenoid	1	
76	019-36523-001	*Collar; Transfer Roller	1	
77	019-36522-005	*Spacer; Transfer Roller	1	
78	019-55076-105	Wire Harness; ADF (FB)	1	

No.	Part No.	Part Name	Q'ty	Remark

MEMO

Fig. 21 SCANNER AREA (1)

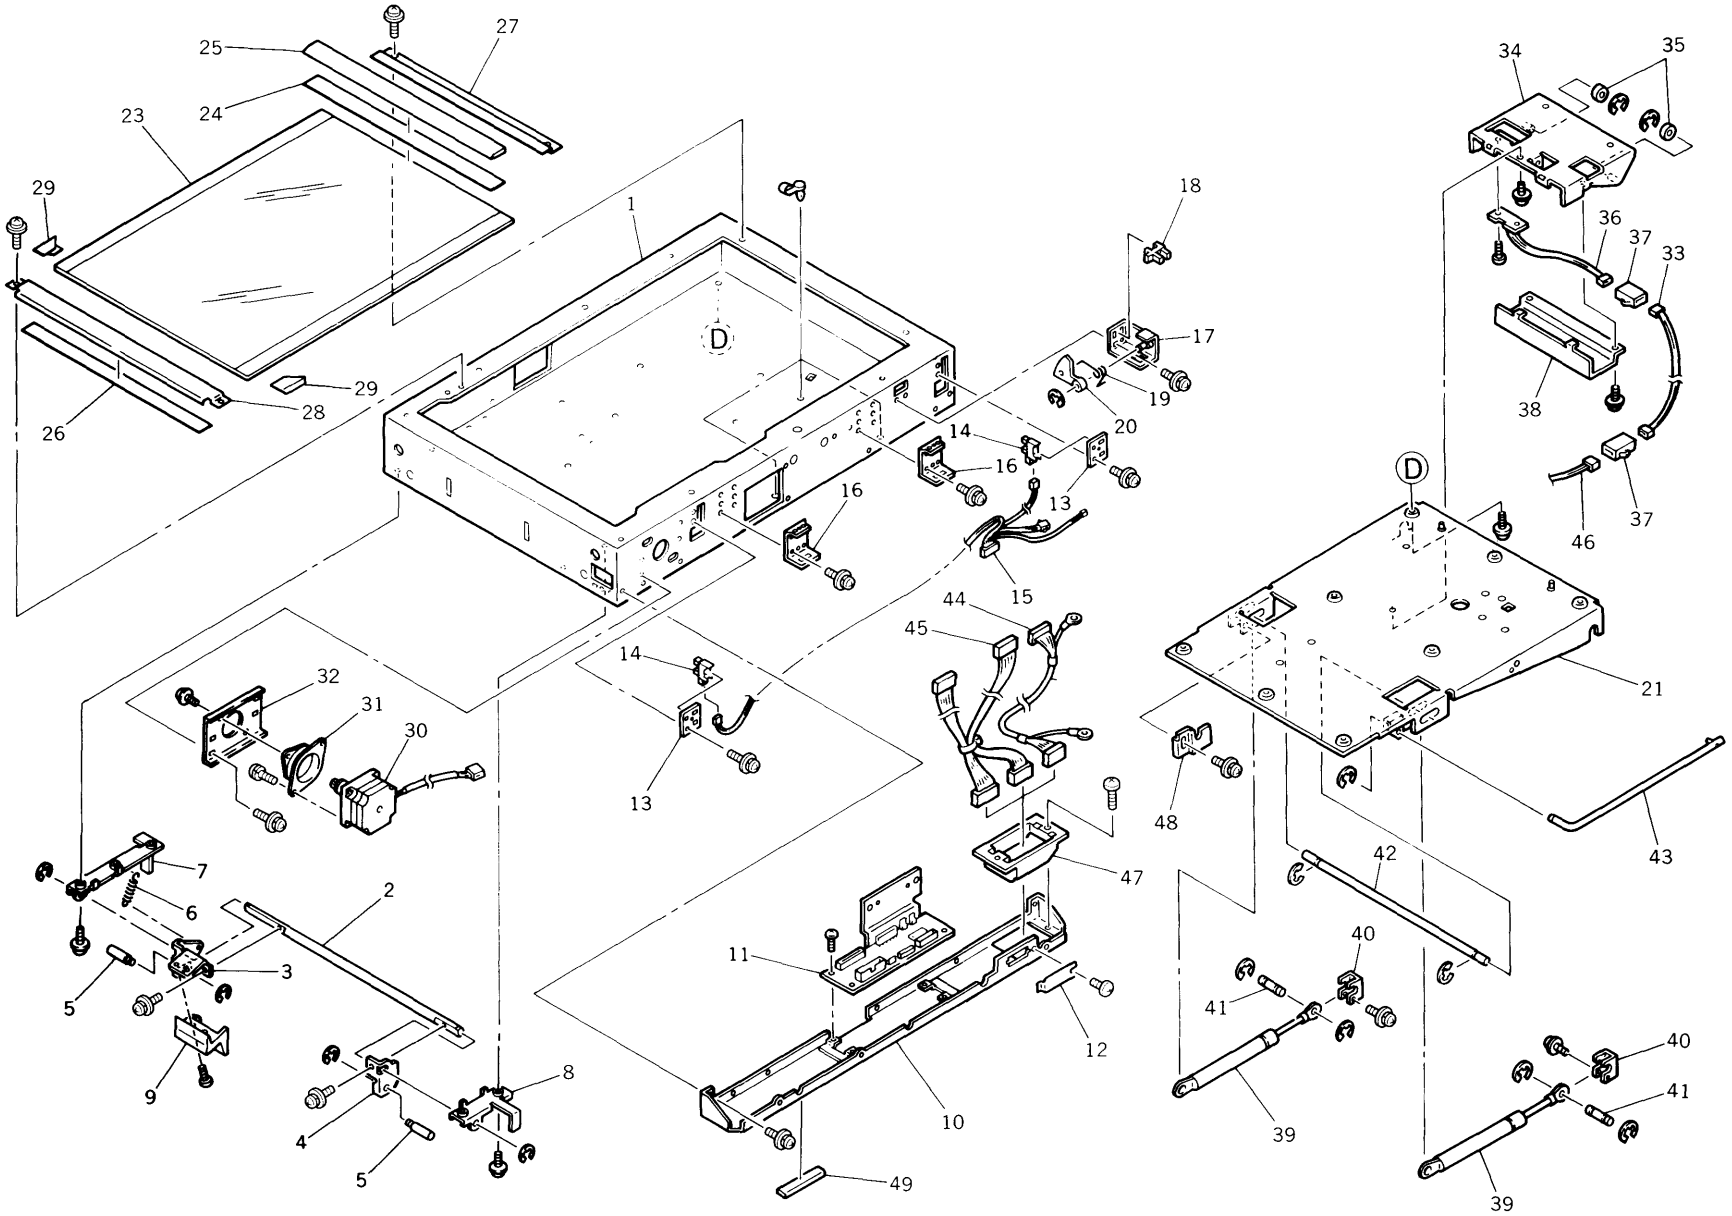

Fig. 21 Scanner Area (1)

No.	Part No.	Part Name	Q'ty	Remark
1	019-36050-200	Main Frame; FB-Scanner; CE	1	
2	018-16217-101	Hook Shaft; FB	1	
2	019-26214-000	Hook Shaft; FB; A3	1	A3
3	018-16220-200	Hook Base (F); FB-Hook Shaft	1	
4	018-16222-105	Hook Base (R); FB-Hook Shaft	1	
5	018-16218-000	Shaft; Hook Base	2	
6	018-16223-004	Spring; Hook Shaft	1	
7	018-16225-201	Bracket (F); Hook Shaft	1	
8	018-36227-103	Bracket (R); Hook Shaft; CE	1	
9	018-16224-000	Open Lever; Hook Shaft	1	
10	018-36060-209	Back Frame; FB-Scanner; CE	1	
11	019-96051-109	Flat Bed PCB II	1	
12	018-16064-003	Blind Plate; FB-Back Frame	1	
13	018-16031-105	Bracket; FB-Pos. Sensor	2	
14	443-31003-007	Sensor; OJ-620331	2	
15	018-55001-108	Wire Harness; FB	1	
16	018-36253-007	Hinge Bracket; FB-Scanner; CE	2	
17	018-16047-206	Bracket; Stage Cover Sensor	1	
18	443-31003-007	Sensor; OJ-620331	1	
19	018-16035-003	Actuator Spring; Stage Cover Sensor	1	
20	018-16032-101	Actuator Stage Cover Sensor	1	
21	018-26201-602	Bottom Plate; FB-Scanner; CE	1	
21	019-26202-800	Bottom Plate; FB-Scanner; CE	1	A3
23	018-16040-104	Stage Glass	1	
24	018-16066-006	Shading Plate (L)	1	
25	018-16042-107	Original Stopper	1	
26	018-16067-207	Shading Plate (R)	1	
27	018-16038-100	Glass Holder (L)	1	
28	018-16039-106	Glass Holder (R)	1	
29	018-16071-000	Protection Tape; Stage Glass	2	
30	018-65000-002	R Pulse Motor; FB	1	
31	018-16073-002	Shock-Absorbent Rubber	1	
32	018-16028-007	Bracket; R Pulse Motor	1	
33	019-55024-105	Wire Harness; Disposal Box Master Sensor	1	
34	017-24148-200	Disposal Box Guide; CE	1	

No.	Part No.	Part Name	Q'ty	Remark
35	017-24151-007	Guide Collar; Disposal Box Guide	2	
36	019-60000-001	Disposal Box Master Sensor	1	
37		*Junction Connector; 3P	2	Ref.Pg.II-36
38	017-24154-103	Sensor Cover; Disposal Box Guide; CE	1	
39	610-00010-005	Damper; FB	2	
40	019-16215-009	Damper Bottom Bracket	2	
41	019-16214-100	Shaft; Damper Bottom Bracket	2	
42	018-27240-008	Shaft; Damper	1	
42	019-27240-102	Shaft; Damper	1	A3
43	019-17255-004	Support Shaft Lock	1	
44	019-55011-003	Wire Harness; Image	1	
45	019-55076-105	Wire Harness; ADF(FB); CE	1	
46	019-55076-105	Wire Harness; ADF (FB); CE	1	
47	019-16066-003	Cap I; CE	1	
48	019-17241-305	Shaft Stopper; Damper; CE	1	
49	481-30004-000	Gasket; 80	1	

Fig. 22 SCANNER AREA (2)

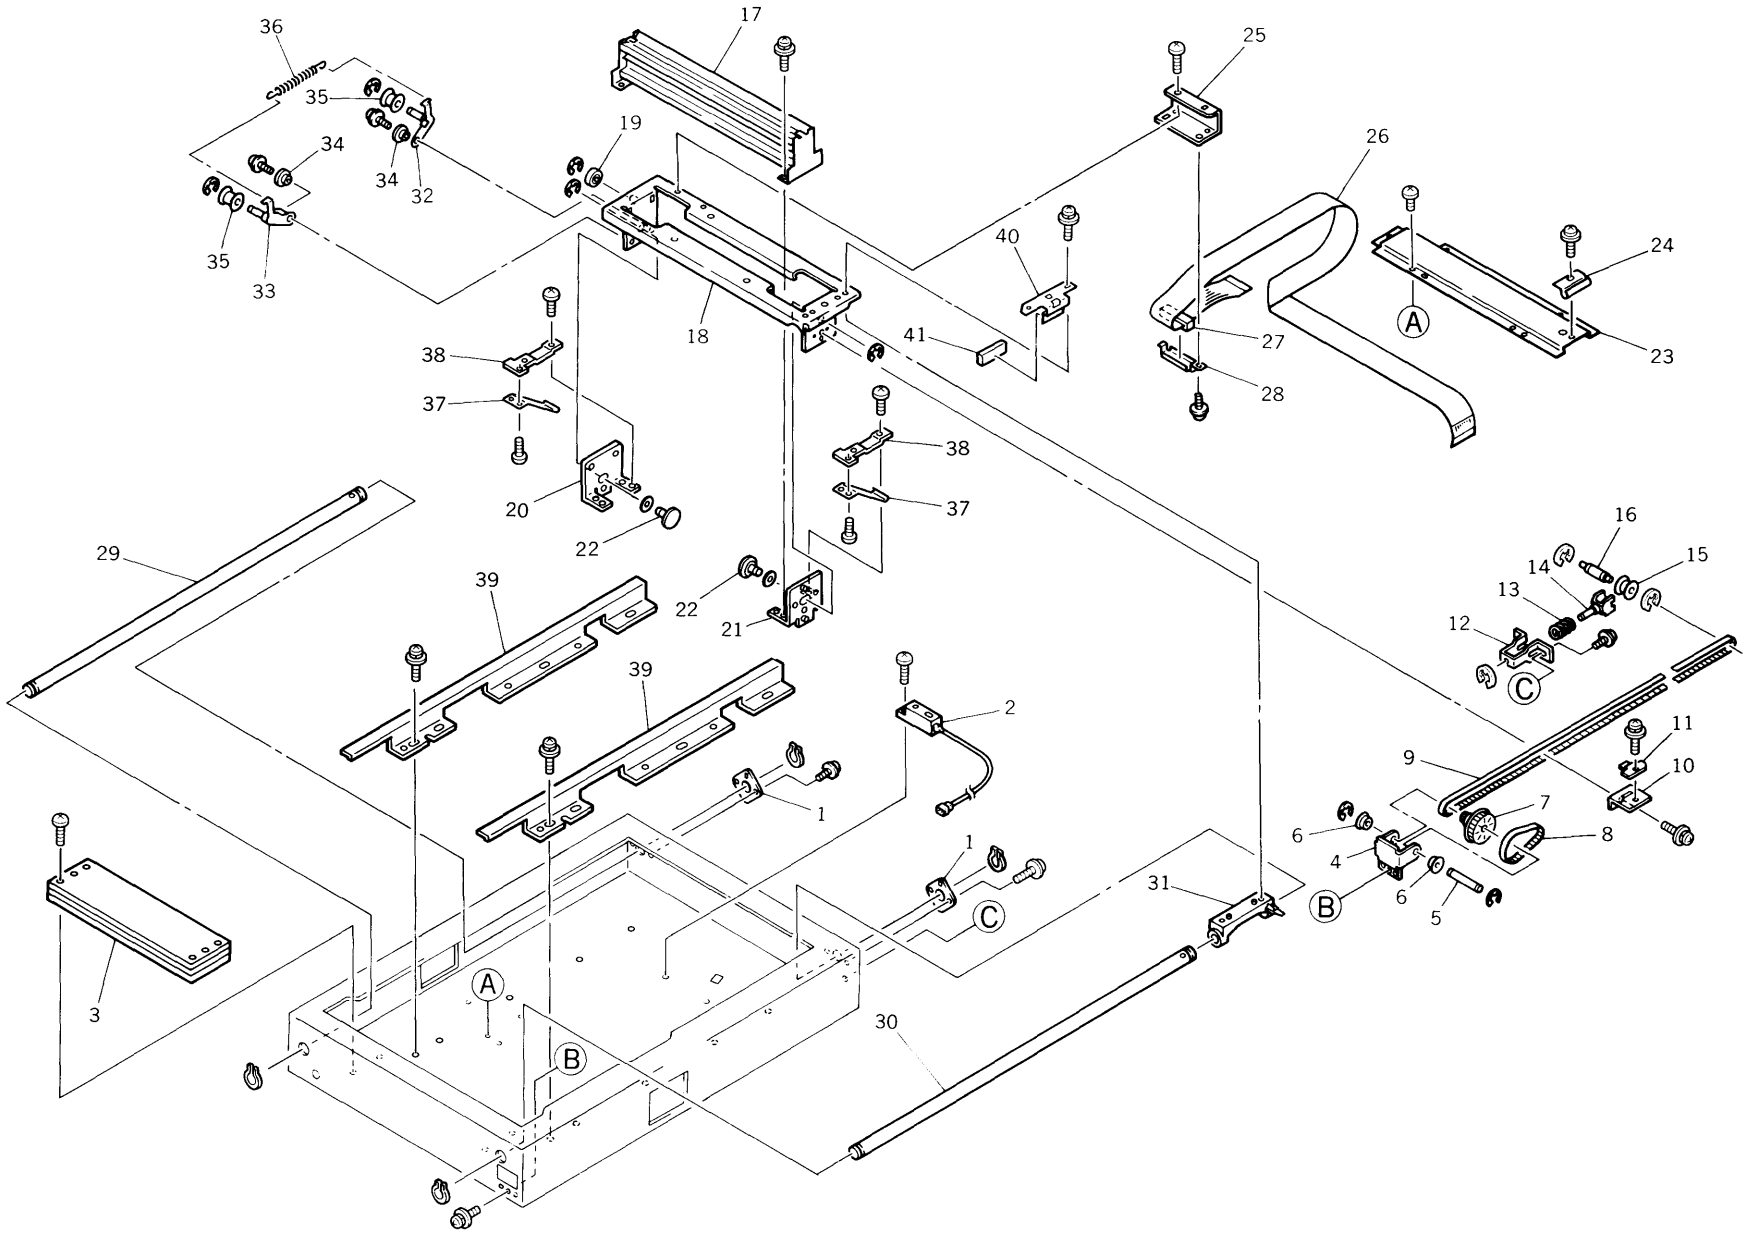

Fig. 22 Scanner Area (2)

No.	Part No.	Part Name	Q'ty	Remark
1	018-16037-006	Adj. Plate; FB-Slide Shaft	2	
2	018-60000-004	Original Det. Sensor; FB	1	
3	018-16255-208	Balance Weight; FB	7	
4	018-16018-001	Drive Pulley Holder; FB-Scanner	1	
5	018-16017-005	Drive Pulley Shaft; FB-Scanner	1	
6	600-50046-004	Bearing; FLAWBC6-12ZZA	2	
7	611-30090-000	Pulley; P63/20-2M-6; HTD	1	
8	620-82006-007	Belt; 106100 x 6 HTD	1	
9	620-89996-002	Belt; 106614 x 6 HTD	1	
10	018-16019-008	Belt Stand Plate; FB-Scanner	1	
11	018-16020-006	Belt Holder Plate; FB-Scanner	1	
12	018-16023-005	Tension Holder; FB-Scanner	1	
13	018-16027-000	Tension Spring; FB-Scanner	1	
14	018-16024-001	Tension Plate; FB-Scanner	1	
15	611-01420-000	Pulley; ϕ 14 x 8	1	
16	018-16022-009	Tension Shaft; FB-Scanner	1	
17	019-60018-105	Image Scanner 401-CE	1	
18	018-16013-506	Carriage; Image Scanner; CE	1	
19	600-06172-205	Bearing; F-606ZZ1	1	
20	018-16002-202	Scanner Holder (F)	1	
21	018-16003-306	Scanner Holder (R)	1	
22	018-16004-000	Adj. Pin; Scanner Holder	2	
23	018-36043-002	Cover Plate; Image Flexible Wire; CE	1	
24	018-16044-002	Ground Plate; FB-Scanner	1	
25	018-16030-109	Wire Stand; FB-Image; CE	1	
26	019-55103-005	Image Flexible Wire; CE3	1	
27	435-00018-004	TDK Core; HF70SH40 x 1.3 x 8	1	
28	018-16045-106	Core Holder	1	
29	018-16036-204	Slide Shaft; FB-Scanner	1	
30	019-16036-104	Slide Shaft B; FB-Scanner	1	
31	019-16070-205	Slide Guide; FB-Scanner	1	
32	019-16002-102	Arm (L); Carriage	1	
33	019-16004-105	Arm (R); Carriage	1	
34	018-16011-007	Boss; Carriage	2	
35	018-16005-007	Guide Wheel; Carriage	2	

No.	Part No.	Part Name	Q'ty	Remark
36	018-16012-003	Arm Spring; Carriage	1	
37	019-16020-003	Ground Spring; Scanner Holder	2	
38	019-16021-000	Base Plate; Ground Spring	2	
39	019-16019-005	Rail; FB-Scanner	2	
40	019-16072-100	Plate Spring 2K	1	
41	481-30006-003	Gasket; 38	1	

Fig. 23 MASTER-MAKING AREA (1) (FR2950)

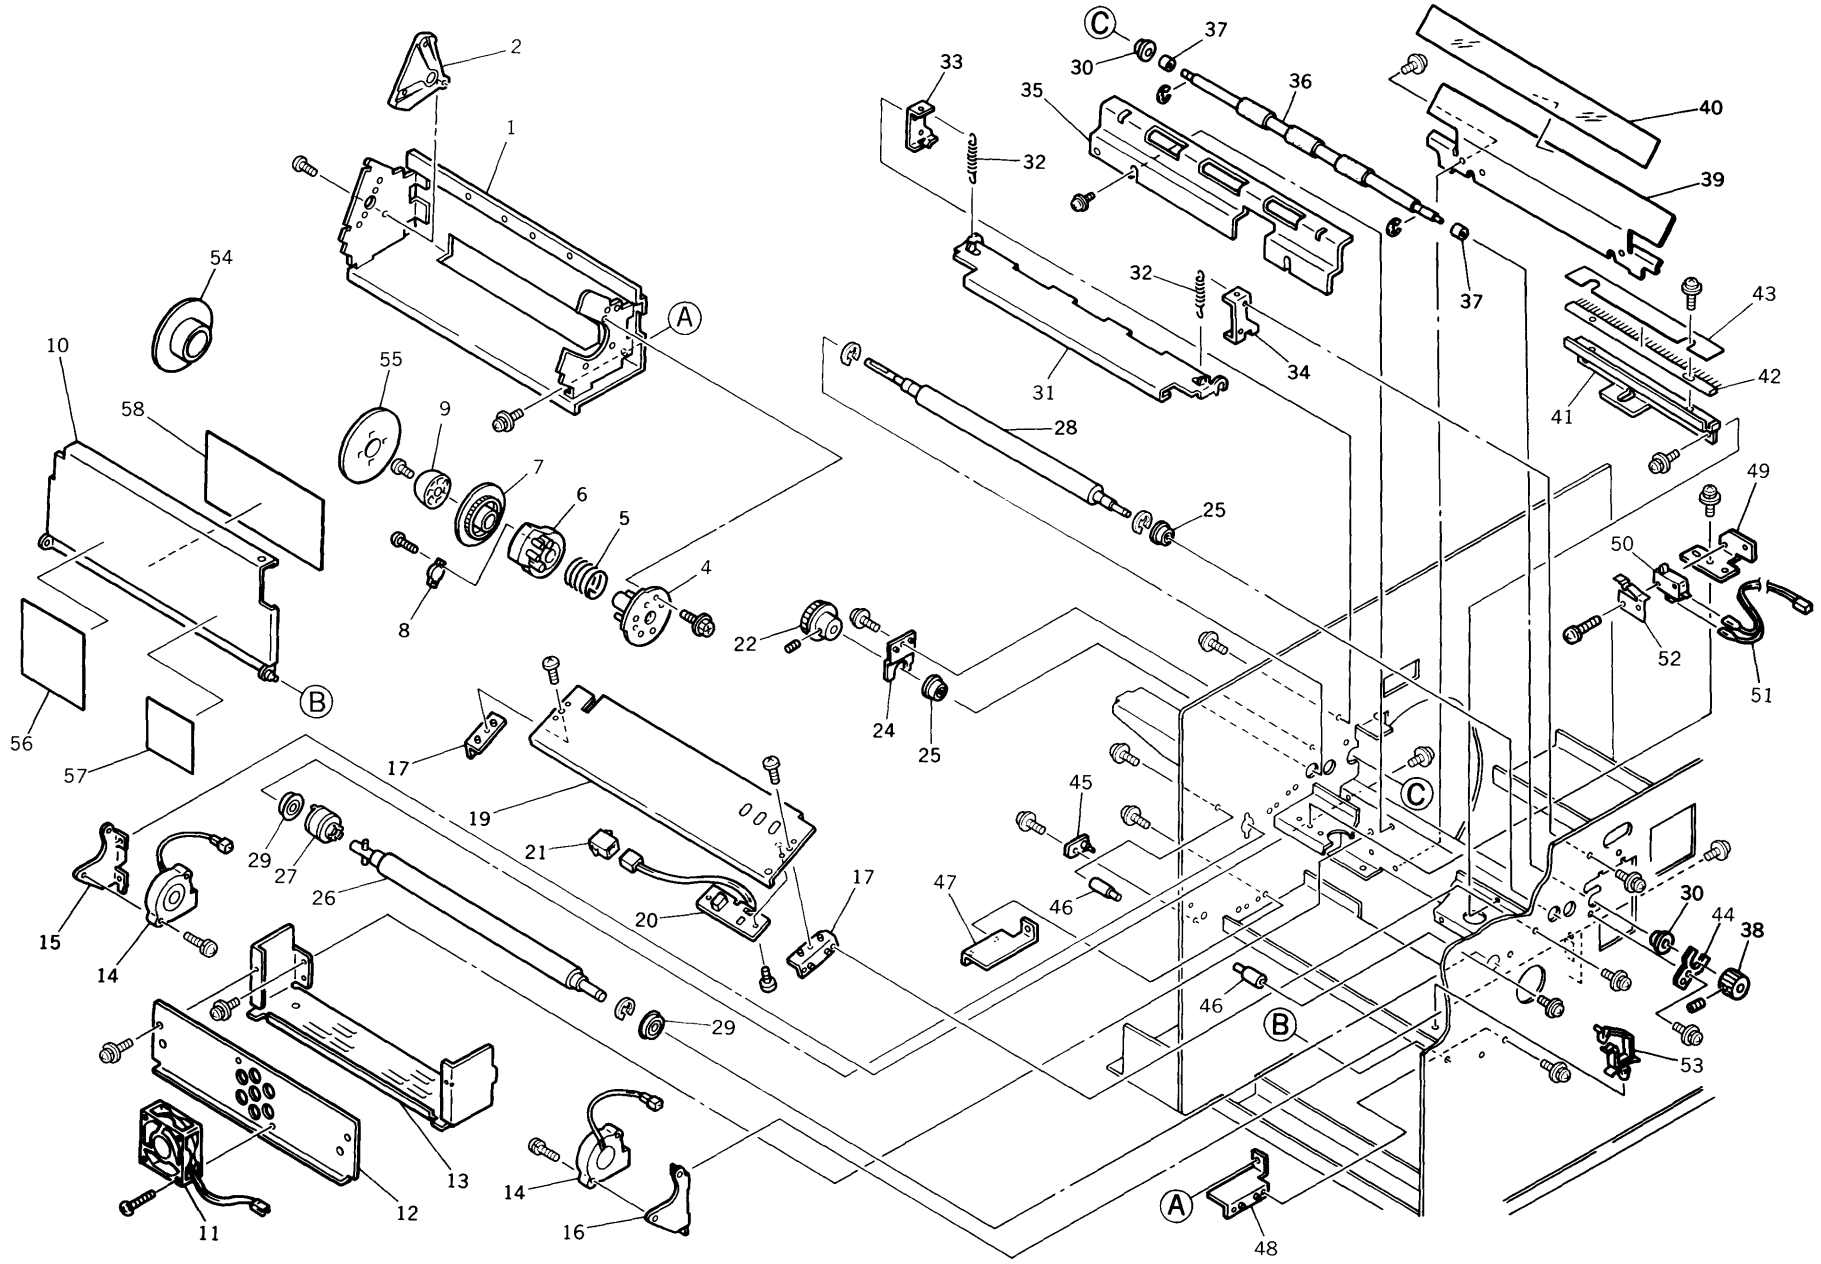

Fig. 23 Master-Making Area (1) (FR2950)

No.	Part No.	Part Name	Q'ty	Remark
1	018-35014-106	Master Roll Holder III; B4; CE	1	B4
1	018-35030-004	Master Roll Holder III; B4; CE	1	A4,L
2	018-35025-000	Guide Holder D; Master Holder	1	
	019-95211-005	Guide Flange Ass'y	1	
4	019-25539-100	*Shaft Flange; Master Holder	1	
5	019-15273-102	*Spring; Master Holder	1	
6	019-15270-006	*Damper Case	1	
7	019-15253-004	*Damper Gear	1	
8	610-00007-004	*HG Damper; 2G50-E	1	
9	019-15255-007	*Guide Flange; Master Holder	1	
10	018-35018-004	Cover; Master Roll Holder; CE	1	
	017-95096-007	Stocker Ass'y II		
11	017-65011-104	*Loading Fan; Stocker	1	
12	017-25017-002	*Plate A; Stocker	1	
13	017-25016-103	Stocker	1	
14	015-65041-009	Master Removal Fan	2	
15	017-24152-100	Bracket F; Master Removal Fan	1	
16	017-24153-107	Bracket R; Master Removal Fan	1	
17	017-15124-005	Stay; Set Guide Plate	2	
	018-95070-005	Set Guide Plate Ass'y III; B4		B4
	018-95071-001	Set Guide Plate Ass'y III; A4		A4,L
19	018-35009-005	*Set Guide Plate III; B4	1	B4
19	018-35032-007	*Set Guide Plate III; A4	1	A4,L
20	019-60015-106	*Master End Sensor (Send)	1	
21		**Junction Connector; 4P	1	Ref.Pg.II-36
22	000-10126-002	Pulley G; Original Feed Roller	1	
24	017-15108-000	Fixing Plate; Bearing	1	
25	600-50059-017	Bearing; FLW688ZZ	2	
26	018-35001-004	Tenshin Roller; B4	1	
27	019-25604-000	Torque Limiter; Tension Roller	1	
28	011-95077-106	Write Roller; 40	1	
29	600-06105-001	Bearing; DDLF-1060ZZH	2	
30	607-15000-809	Metal; F8 x 16 x 6; 18 x 2	2	
31	018-35002-000	Master Guide Plate	1	
32	014-15146-007	Spring; Master Guide Plate	2	

No.	Part No.	Part Name	Q'ty	Remark
33	014-15144-209	Spring Hanger L; Master Guide Plate; CE	1	
34	014-15145-205	Spring Hanger R; Master Guide Plate; CE	1	
35	017-15103-105	Guide Plate; Load	1	
36	017-15101-005	Load Roller (Lower); M. -M.	1	
37	607-50806-409	Liner; R-MLC0806M	2	
38	011-15110-000	Pulley; Loading Roller (Lower)	1	
39	017-24146-100	Bracket; Aero Guide Sheet; CE	1	
40	017-24147-000	Aero Guide Sheet	1	
41	018-35003-007	Plate; De-electricity Brush	1	
42	011-15041-106	De-electricity Brush	1	
43	018-35004-003	Bracket; De-electricity Brush	1	
44	017-15107-003	Metal Fixing Plate	1	
45	017-15234-005	Set Plate; Master Holder Cover	1	
46	011-15001-007	Support Shaft	2	
47	019-25540-001	Holder Stay F	1	
48	019-25541-008	Holder Stay R	1	
	017-95011-001	Master Loading Unit SW Ass'y		
49	017-25113-001	*Bracket; Micro-SW; M. -M.	1	
50	443-02008-008	*Micro-SW; AM50030C331	1	
51	019-55104-001	*Wire Harness; Master Loading Unit SW	1	
52	019-25533-005	Actuator Plate; Micro-SW	1	
53	665-02043-006	Wire Saddle; LWS-1316	1	
54	018-35026-007	Flange F; Master Roll	1	
55	018-35027-003	Flange R; Master Roll	1	
58	550-20987-005	Seal; Setting Master	1	
58	550-20988-109	Seal; Setting Master;Pic.	1	
56	550-21141-002	Seal; Paper Guide Set	1	
56	550-21142-009	Seal; Paper Guide Set; Pic.	1	
57	550-21073-007	Seal; P. -Rcv. -T.; Caution	1	

Fig. 24 MASTER-MAKING AREA (2) (FR2950)

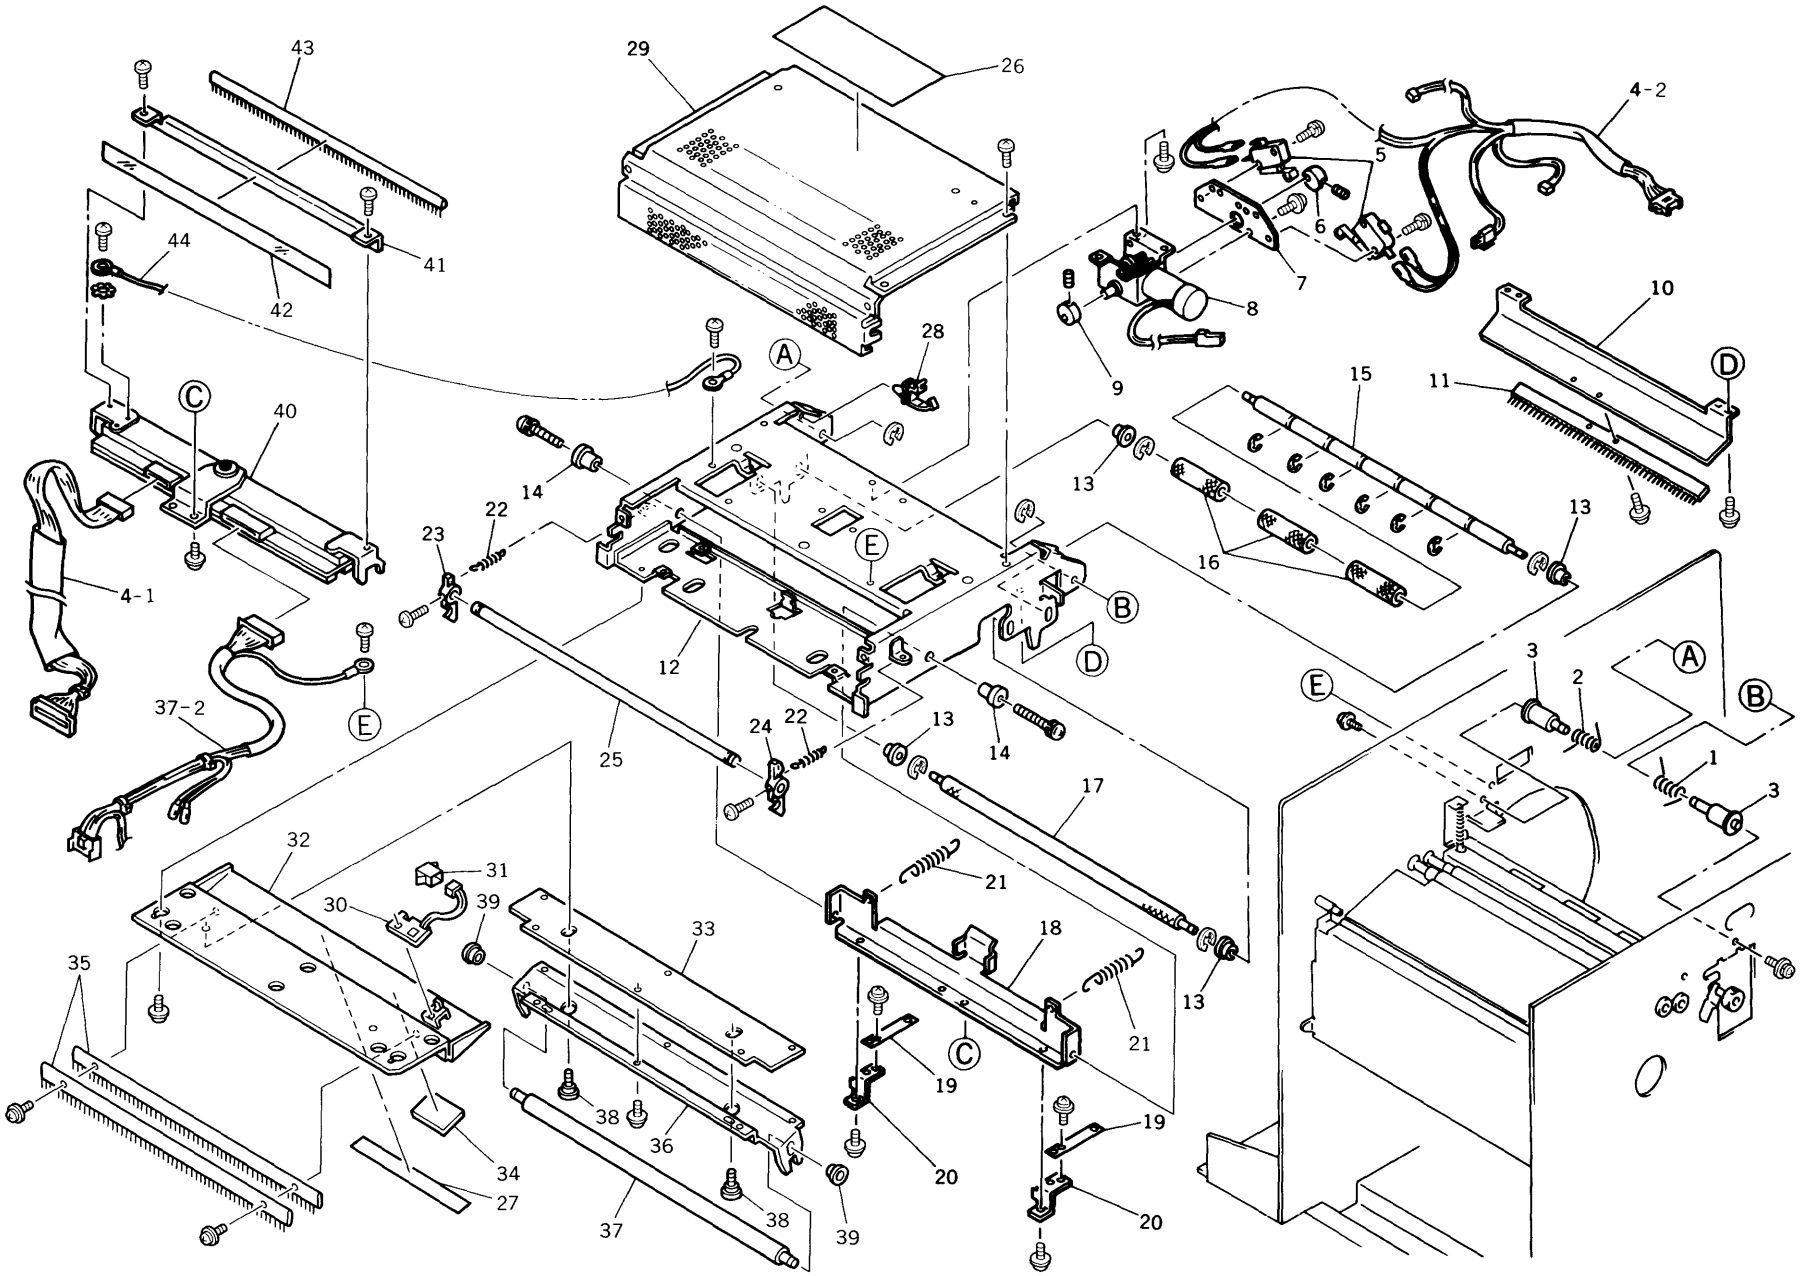

Fig. 24 Master-Making Area (2) (FR2950)

No.	Part No.	Part Name	Q'ty	Remark
	018-95000-007	Unit/Master Making; CE		
1	011-15056-006	*Spring (Right); M. -M.	1	
2	011-15055-000	*Spring (Left); M. -M.	1	
3	014-15021-107	*Fulcrum III; M. -M.; CE	2	
4-1	019-55063-305	Wire Harness; TPH Signal T	1	
4-2	019-55065-006	Wire Harness; M. -M. -Image; CE	1	
5	443-02007-001	*Micro-SW; AM50036C331	2	
6	011-15708-208	*Switch Cam	1	
7	011-15710-105	*Bracket; Micro-SW	1	
8	017-65000-005	*Thermal Pressure Motor III Ass'y	1	
9	011-15117-005	*Cam; Thermal Pressure Motor	1	
10	017-15006-100	*Bracket; De-electricity Brush	1	
11	011-15041-106	*De-electricity Brush	1	
12	018-35005-000	*Frame A; M. -M.; CE	1	
13	607-11000-200	*Metal; F4 x 7 x 6; 10 x 1.5	4	
14	011-15004-006	*Fulcrum; TPH	2	
15	017-15008-005	*Shaft; Load Roller	1	
16	017-15009-001	*Load Roller	3	
17	017-15007-106	*Catch Roller (Upper)	1	
18	011-15704-105	*Bracket; TPH	1	
19	011-15716-103	*Pressure Assist Plate	2	
20	011-15751-103	*Bracket; Pressure Assist Plate; T-TPH; CE	2	
21	011-15718-106	*Spring; TPH Pressure	2	
22	011-15098-000	*Hook Spring	2	
23	017-15015-001	*Open/Close Hook II	1	
24	011-15013-005	*Open/Close Hook	1	
25	011-15010-014	*Shaft; Open/Close Hook	1	
26	550-20671-105	Seal; M. -M.	1	
26	550-20672-101	Seal; M. -M.; Pic.	1	
26	550-20670-001	Seal; M. -M.; CH	1	
27	550-20118-104	TPH Seal	1	
27	550-20228-104	TPH Seal; Pic.	1	
27	550-20713-002	TPH Seal; CH	1	
28	665-02043-006	Wire Saddle; LWS-1316	1	
29	017-35010-006	Cover A; M. -M.; CE	1	

No.	Part No.	Part Name	Q'ty	Remark
	018-95020-008	Copy Guide Plate (Lower) Ass'y		B4
	018-95021-004	Copy Guide Plate (Lower); A4	1	A4,L
30	019-60022-005	*Master End Sensor (Receive)	1	
31		**Junction Connector;3P	1	Ref.Pg.II-36
32	018-35007-002	*Copy Guide Plate III (Lower)	1	B4
32	018-35031-000	*Copy Guide Plate III (Lower)	1	A4,L
33	018-35011-000	*Base A;Nip Roller	1	
34	014-15013-007	*Sheet;Light Absorber;M.-M.	1	
35	011-15051-004	*De-electricity Bar;M.-M.	2	
36	018-35012-006	*Base B;Nip Roller	1	
37	018-35013-002	*Nip Roller	1	
37-2	017-55070-102	Wire Harness; TPH Power B4; CE	1	
38	635-17614-000	*Stepped Screw;M4 x 4.5	2	
39	607-13003-002	*Metal; F6 x 8 x 3; 10 x 1	2	
	018-95035-056	TPH Ass'y; T400FR		
40		*TPH 260 R29 Ass'y	1	
41	011-15034-002	*Bracket; De-electricity Brush; T-TPH	1	
42	011-15035-009	*Protection Sheet A; TPH	1	
43	011-15733-008	*De-electricity Brush; K-TPH	1	
44	488-90027-000	*Ground Wire; RS3-100-RS3	1	

Fig. 25 MASTER-MAKING AREA (1) (FR3950)

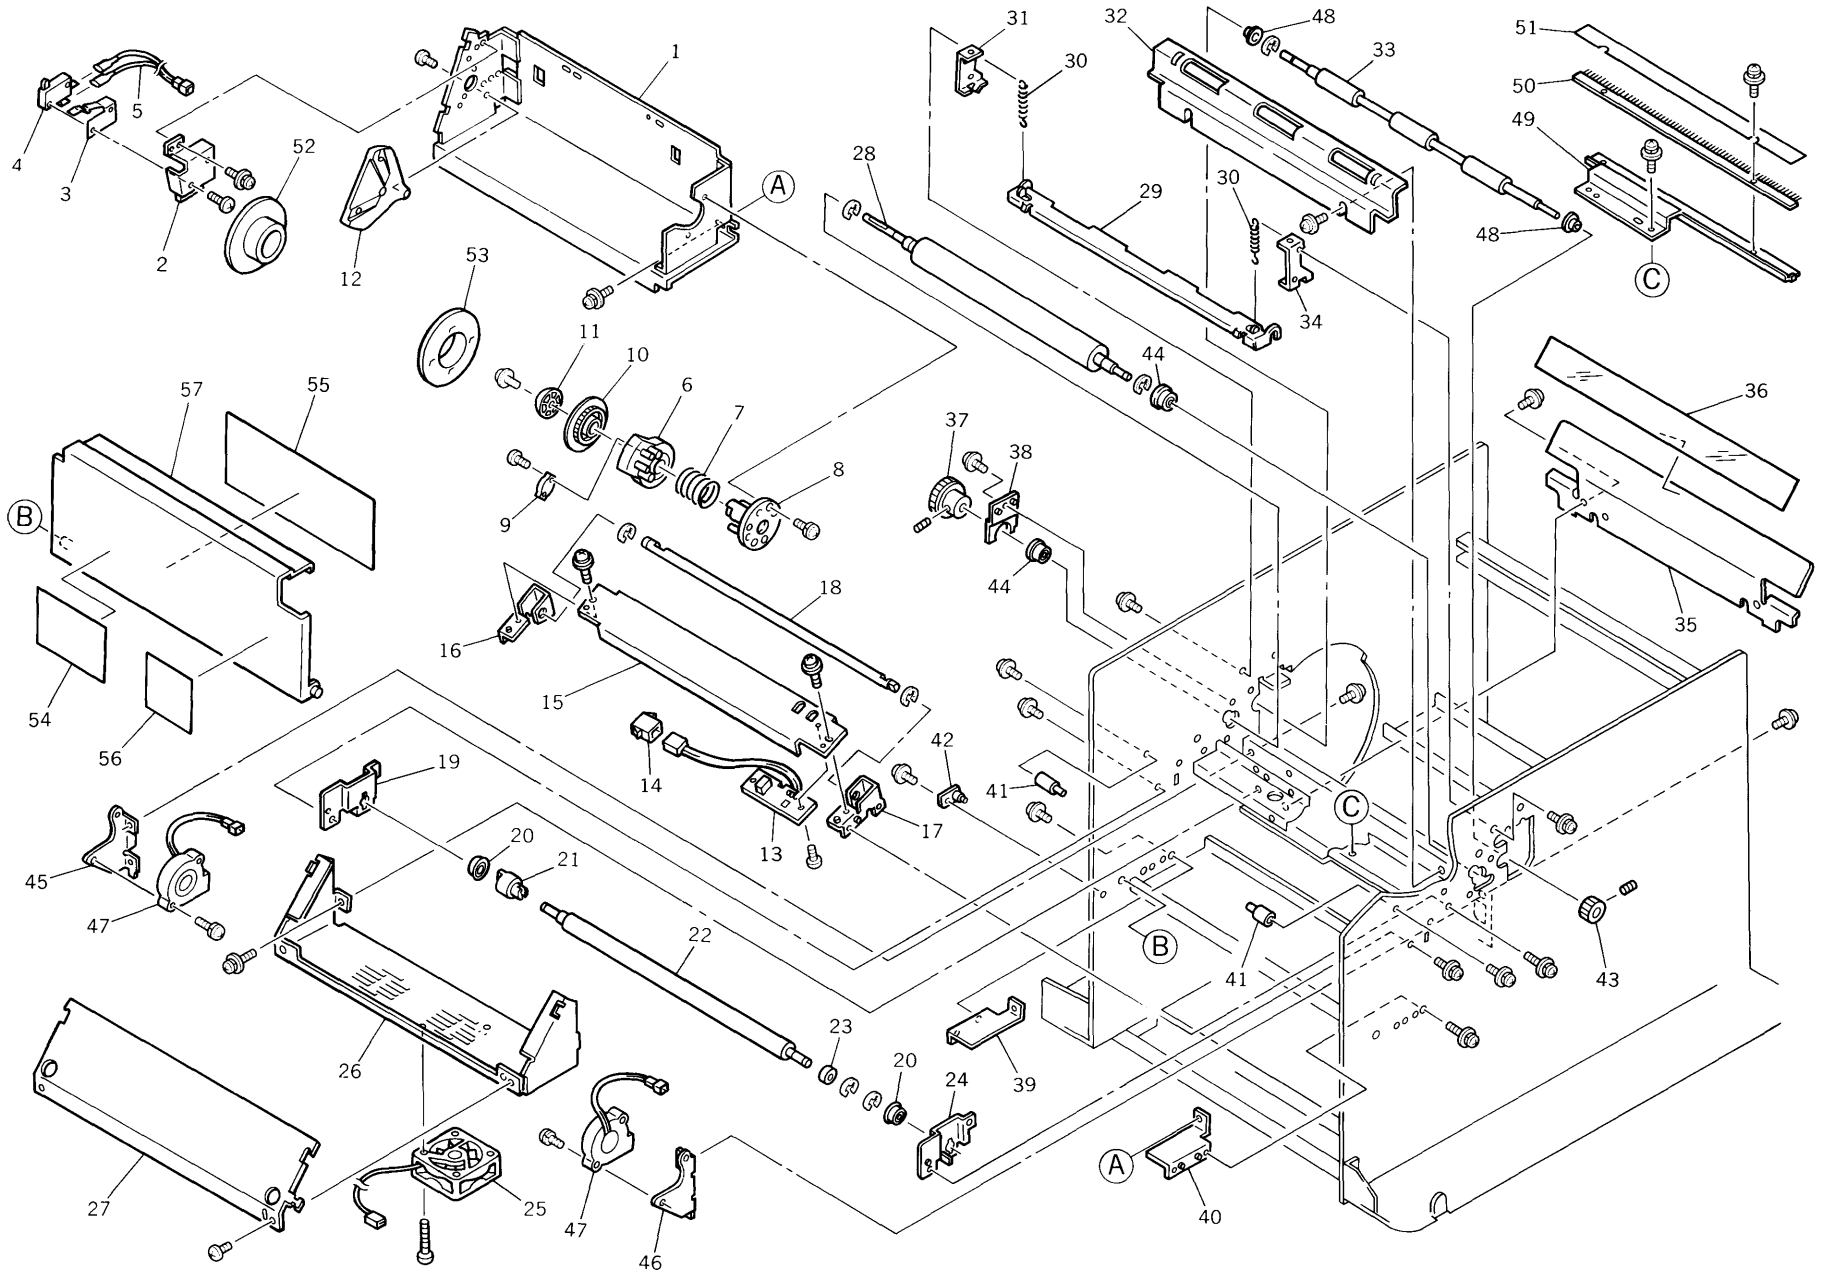

Fig. 25 Master-Making Area (1) (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
1	019-45501-002	Master Roll Holder; A3; CE	1	
2	019-45505-008	Bracket; Micro-SW; M.-M.	1	
3	019-25533-005	Actuator Plate; Micro-SW	1	
4	443-02008-008	Micro-SW; AM50030C331	1	
5	019-55004-104	Wire Harness; Master Loading Unit SW	1	
	019-95211-005	Guide Flange Ass'y		
6	019-15270-006	*Damper Case	1	
7	019-15273-102	*Spring; Master Holder	1	
8	019-25539-100	*Shaft Flange; Master Holder	1	
9	610-00007-004	*HG Damper; 2G50-E	1	
10	019-15253-004	*Damper Gear	1	
11	019-15255-007	*Stopper; Guide Flange	1	
12	018-35025-000	Guide Holder D; Master Holder	1	
	019-95070-100	Set Guide Plate Ass'y; A3		
13	019-60015-106	*Master End Sensor (Send)	1	
14		**Junction Connector; 4P	1	Ref.Pg.II-36
15	019-25519-002	*Set Guide Plate; A3	1	
16	019-25518-006	Stay L; Set Guide Plate	1	
17	019-25517-000	Stay R; Set Guide Plate	1	
18	019-25516-100	Set Guide Shaft	1	
19	019-25602-007	Base Plate F; Tension Roller	1	
20	600-06105-001	Bearing; DDLF - 1060ZZH	2	
21	019-25604-000	Torque Limiter; Tension Roller	1	
22	019-25601-000	Tension Roller	1	
23	607-05001-009	Metal; S6 x 10 x 6	1	
24	019-25603-003	Base Plate R; Tension Roller	1	
	019-95095-005	Stocker Ass'y;A3		
25	017-65011-104	*Loading Fan; Stocker	1	
26	019-25111-003	*Stocker	1	
27	019-25112-107	Stocker Cover	1	
28	014-95076-209	Write Roller; A3	1	
29	019-35024-109	Master Guide Plate; A3	1	
30	014-15146-007	Spring; Master Guide Plate	2	
31	014-15144-209	Spring Hanger L; Master Guide Plate; CE	1	
32	014-15191-100	Guide Plate; Load; A3	1	

No.	Part No.	Part Name	Q'ty	Remark
33	014-15102-000	Load Roller (Lower); M.-M.	1	
34	014-15145-205	Spring Hanger R; Master Guide Plate; CE	1	
35	019-24126-104	Bracket; Aero Guide Sheet; CE	1	
36	019-24127-100	Aero Guide Sheet; A3	1	
37	000-10126-002	Pulley G; Original Feed Roller	1	
38	014-15182-003	Fixing Plate; Pulley G	1	
39	019-25540-001	Holder Stay F	1	
40	019-25541-008	Holder Stay R	1	
41	011-15001-007	Support Shaft	2	
42	014-15214-002	Set Plate; Cover	1	
43	011-15110-000	Pulley; Loading Roller (Lower)	1	
44	600-50059-017	Bearing; FLW688ZZ	2	
45	017-24152-100	Bracket F; Master Removal Fan	1	
46	017-24153-107	Bracket R; Master Removal Fan	1	
47	015-65041-009	Master Removal Fan	2	
48	607-15000-809	Metal; F8 x 16 x 6; 18 x 2	2	
49	019-25102-101	Bracket; De-electricity Brush	1	
50	019-25101-105	De-electricity Brush	1	
51	019-25103-000	Protection Sheet; De-electricity Brush	1	
52	018-35026-007	Flange F; Master Roll	1	
53	018-35027-003	Flange R; Master Roll	1	
54	550-21141-002	Seal; Paper Guide Set	1	
54	550-21142-009	Seal; Paper Guide Set; Pic.	1	
54	550-21140-006	Seal; Paper Guide Set; CH	1	
55	550-20987-005	Seal; Setting Master	1	
55	550-20965-001	Seal; Setting Master; Pic.	1	
56	550-21073-007	Seal; P. -Rcv. -T.; Caution	1	
57	019-45506-004	Cover; Master Roll Holder	1	

Fig. 26 MASTER-MAKING AREA (2) (FR3950)

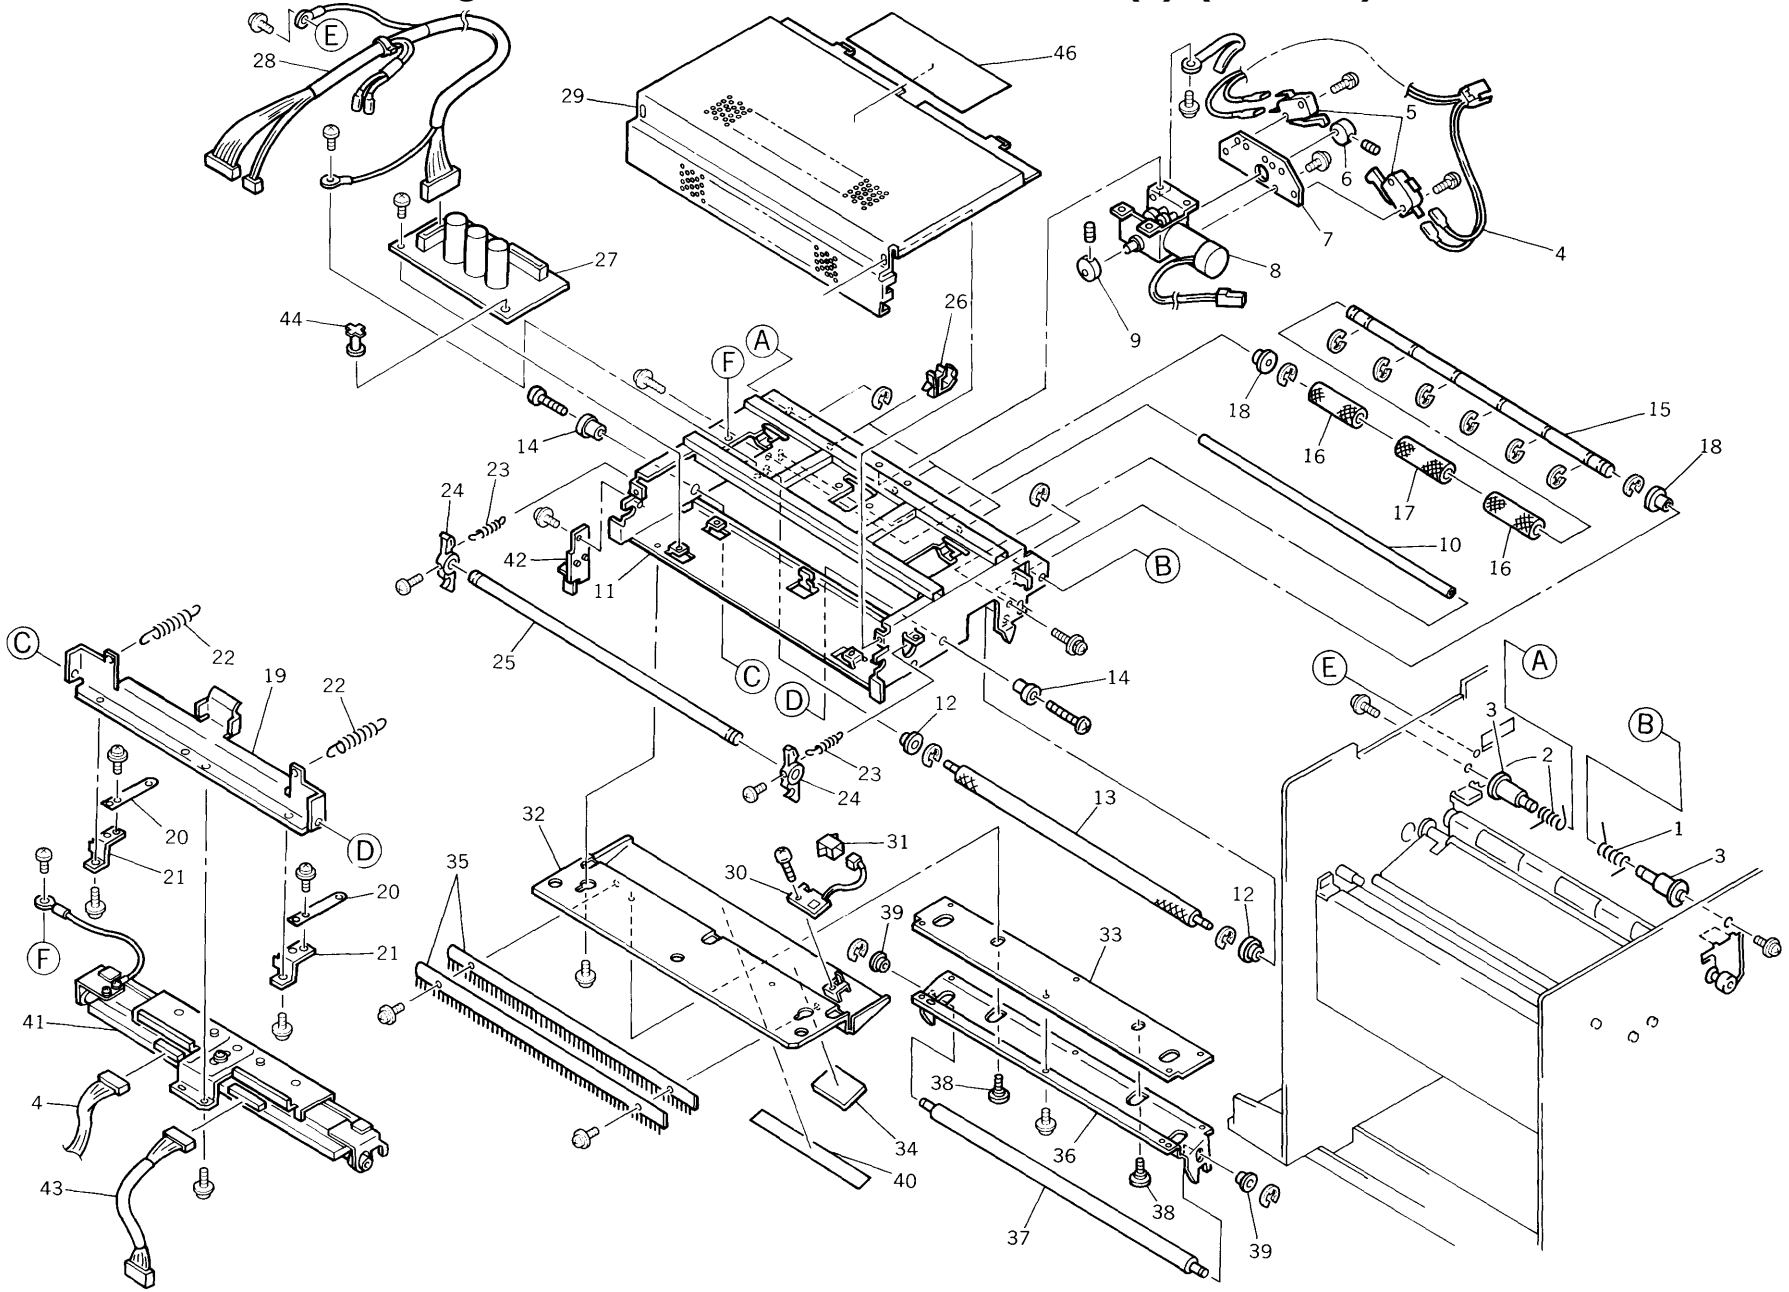

Fig. 26 Master-Making Area (2) (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
	019-95003-003	Unit/Master Making; A3; CE		
1	019-25532-009	*Spring (Right); M. -M.	1	
2	019-25531-002	*Spring (Left); M. -M.	1	
3	014-15021-107	*Fulcrum III; M. -M.; CE	2	
4	019-55065-006	*Wire Harness; M. -M.-Image; CE	1	
5	443-02007-001	*Micro-SW; AM50036C331	2	
6	011-15708-208	*Switch Cam	1	
7	019-25612-002	*Bracket; Micro-SW	1	
8	019-65016-100	*Thermal Pressure Motor III Ass'y	1	
9	011-15117-005	*Cam; Thermal Pressure Motor	1	
10	014-15028-004	*Reinforce Shaft	1	
11	019-25501-006	*Frame A; M. -M.	1	
12	607-11000-200	*Metal; F4 x 7 x 6; 10 x 1.5	2	
13	014-15018-009	*Catch Roller (Upper); A3	1	
14	011-15004-006	*Fulcrum; TPH	2	
15	019-25007-001	*Shaft; Load Roller	1	
16	017-15009-001	*Load Roller	2	
17	014-15007-007	*Load Roller	1	
18	607-13000-607	*Metal; F6 x 9 x 7; 11 x 1	2	
19	019-25512-105	*Bracket; TPH; A3	1	
22	019-25511-001	*Spring; TPH Pressure	2	
23	011-15098-000	*Hook Spring	2	
24	011-15013-005	*Open/Close Hook	2	
25	014-15008-003	*Shaft; Open/Close Hook; A3	1	
20	014-15022-200	Pressure Assist Plate	2	
21	014-15020-208	Bracket; Pressure Assist Plate; CE	2	
26	665-04014-003	Snap Bushing; SB-2000-26	1	
27	019-51031-000	Sub-Power Supply PCB; CE	1	
28	019-55080-200	Wire Harness; TPH Power A3; CE	1	
29	019-25526-009	Cover A; M. -M.	1	
	019-95050-052	Copy Guide Plate (Lower) Ass'y		
30	019-60022-005	*Master End Sensor (Receive)	1	
31		*Junction Connector; 3P	1	Ref.Pg.II-36
32	019-25605-006	*Copy Guide Plate (Lower)	1	
33	019-25608-005	*Base A; Nip Roller	1	

No.	Part No.	Part Name	Q'ty	Remark
34	014-15013-007	*Sheet; Light Absorber; M. -M.	1	
35	014-15011-004	*De-electricity Bar; M. -M.; A3	2	
36	019-25609-001	*Base B; Nip Roller	1	
37	019-25610-000	*Nip Roller	1	
38	635-17614-000	*Stepped Screw; M4 x 4.5	2	
39	607-13003-002	*Metal; F6 x 8 x 3; 10 x 1	2	
40	550-20118-104	TPH Seal	1	
40	550-20228-104	TPH Seal; Pic.	1	
40	550-20713-002	TPH Seal; CH	1	
41	019-95030-051	TPH Ass'y; K400A3	1	
42	019-35037-006	Actuator Plate; Micro-SW; M.-M.	1	
43	019-55027-007	Wire Harness; TPH Power	1	
44	505-00350-005	Cap Spacer	1	
46	550-20671-105	Seal; M. -M.	1	
46	550-20672-101	Seal; M. -M.; Pic.	1	
46	550-20670-001	Seal; M. -M.; CH		

Fig. 27 CUTTER UNIT

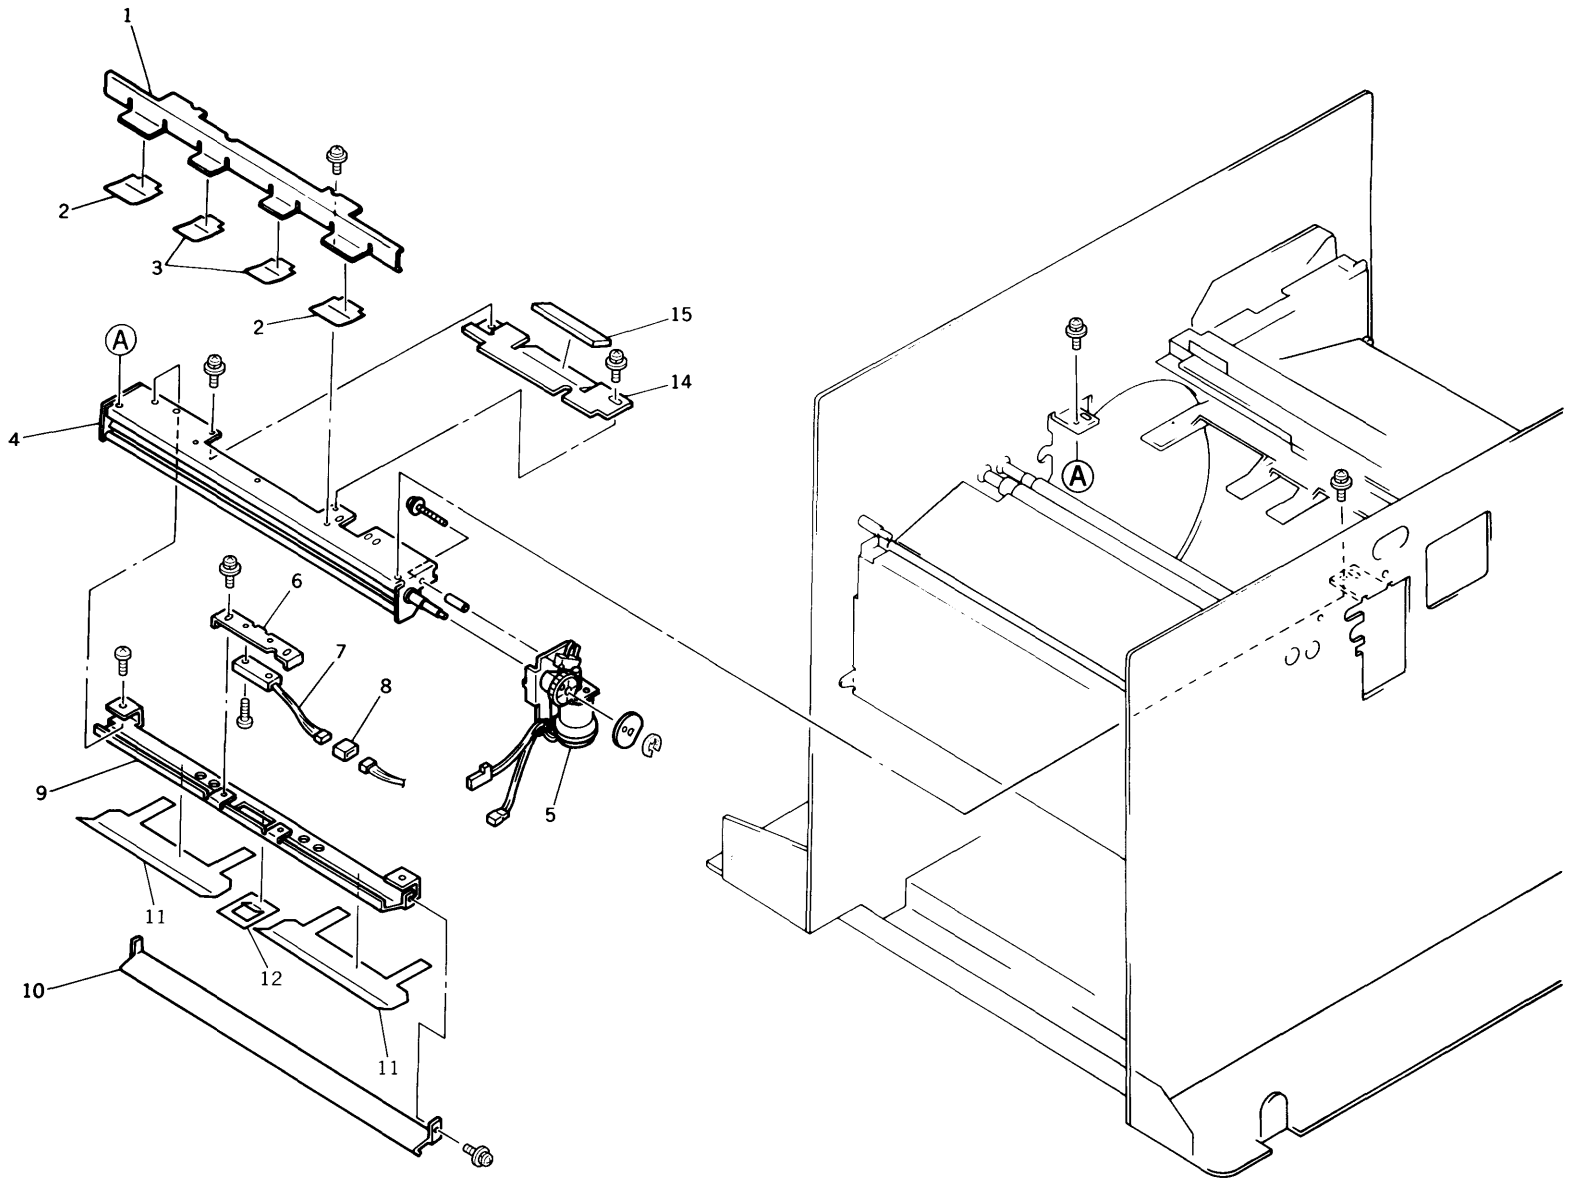

Fig. 27 Cutter Unit

No.	Part No.	Part Name	Q'ty	Remark
	011-95111-010	Cutter Cover A Ass'y		
1	011-15047-104	*Cutter Cover A	1	
2	011-15049-000	*Set Sheet B	2	
3	011-15048-003	*Set Sheet A	2	
	019-95100-009	Set Sheet Plate Ass'y; A3		A3
1	019-25115-009	*Set Sheet Plate; A3	1	
2	019-25116-005	*Set Sheet	2	
3	014-15116-205	*Set Sheet E	2	
	017-95302-200	Unit/Cutter II; B4; CE		
	017-95303-100	Unit/Cutter II; A4; CE		
	019-95300-202	Unit/Cutter ; A3; CE		
4		*Cutter Body	1	
5	019-65008-302	**Cutter Motor Ass'y; CE	1	
	019-25309-008	**Gear; Cutter Motor	1	
6	017-15306-006	*Bracket; Master Positioning Sensor	1	
7	019-60019-101	*Master Positioning Sensor II	1	
8		*Junction Connector; 3P	1	Ref.Pg.II-36
9	017-15303-406	*Cutter Cover	1	
9	019-25301-309	*Cutter Cover	1	A3
10	011-15176-206	*Cutter Guide IV	1	
10	019-25307-102	*Cutter Guide	1	A3
11	017-25306-101	*Cutter Guide Sheet (B4)	2	B4
11	017-25307-108	*Cutter Guide Sheet (A4)	2	A4,L
11	019-25311-100	*Cutter Guide Sheet (A3)	2	A3
12	017-25305-202	*Cutter Center Guide Sheet II	1	
12	019-25312-300	*Cutter Center Guide Sheet	1	A3
14	017-15310-003	*Master Guide Stopper Plate	1	
14	019-25305-002	*Master Guide Stopper Plate	1	A3
15	017-15311-107	*Master Guide Stopper Cushion	1	
15	019-25306-009	*Master Guide Stopper Cushion	1	A3

No.	Part No.	Part Name	Q'ty	Remark

Fig. 28 MASTER REMOVAL UNIT (FR2950)

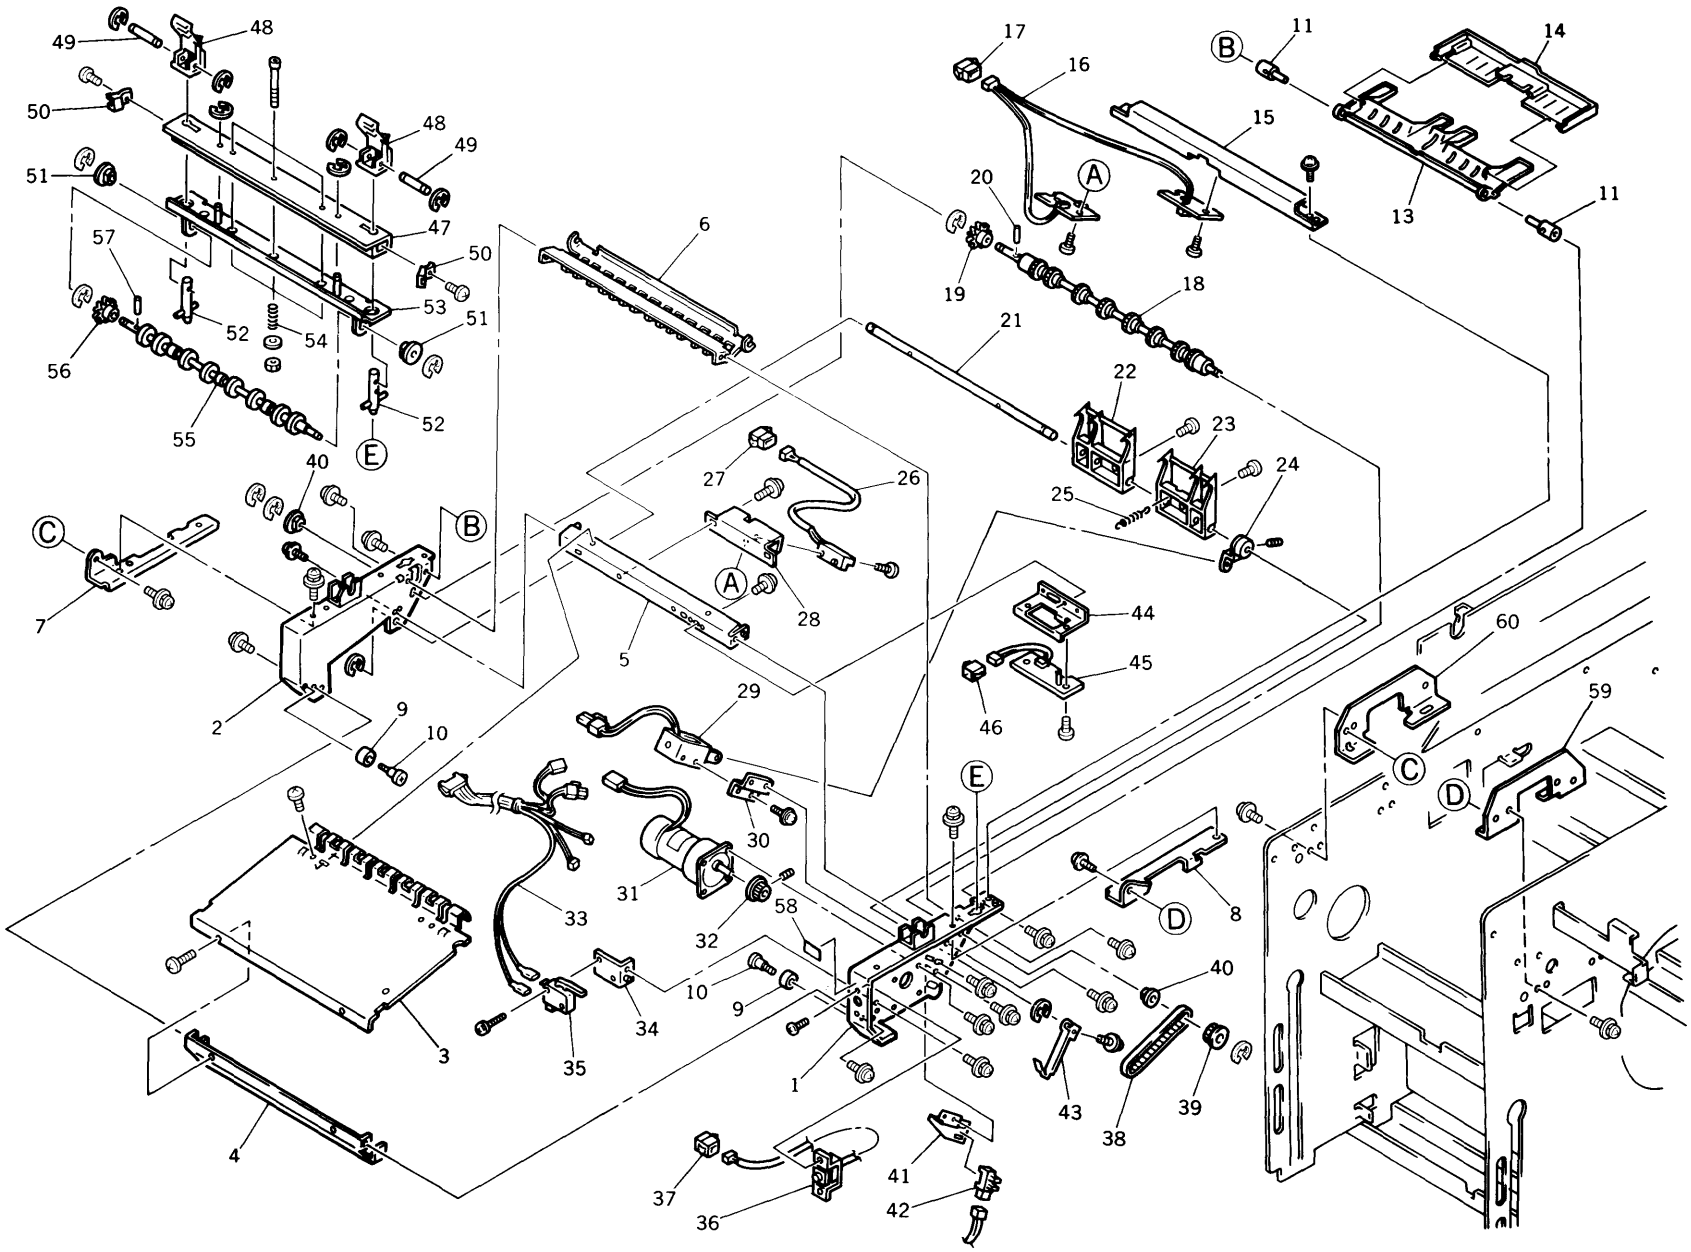

Fig. 28 Master Removal Unit (FR2950)

No.	Part No.	Part Name	Q'ty	Remark
	017-94105-100	Unit/Master Removal II; CE		B4
	017-94106-106	Unit/Master Removal II; A4		A4,L
1	017-44101-103	*Right-Side Frame; M. -Rmv.; CE	1	
2	017-44104-102	*Left-Side Frame; M. -Rmv.; CE	1	
3	017-34105-003	*Base Plate; M. -Rmv.; B4; CE	1	B4
3	017-34126-000	*Base Plate; M. -Rmv.; A4; CE	1	A4,L
4	017-34104-007	*Stay B; M. -Rmv.; CE	1	
5	017-24106-001	*Stay A; M. -Rmv.	1	
6	017-14106-208	*Guide Plate; M. -Rmv.; B4; CE	1	B4
6	017-14127-108	*Guide Plate; M. -Rmv.; A4	1	A4,L
7	017-44112-008	*Set Plate R; M. -Rmv.; CE	1	
8	017-44111-001	*Set Plate F; M. -Rmv.; CE	1	
9	017-14114-006	*Set Collar; M. -Rmv.	2	
10	017-14115-002	*Screw; M. -Rmv.	2	
11	017-14116-009	*Fulcrum; Master Guide; M. -Rmv.	2	
13	017-14120-200	*Master Guide; M. -Rmv.	1	
14	017-14172-200	*Guide Plate; M. -Rmv.	1	
15	017-34124-105	*Upper Stay; M. -Rmv.; CE	1	
16	017-60001-208	*Master Removal Sensor	1	
17		**Junction Connector; 5P	1	Ref.Pg.II-36
18	017-14107-301	*Vertical Transport Roller (Down)	1	B4
18	017-14128-309	*Vertical Transport Roller (Down);A4	1	A4,L
19	612-03103-009	*Gear B; 1.25 x 14	1	
20		*Pin; ϕ 2.5 x 8	1	Ref.Pg.II-36
21	017-24115-000	*Shaft II; M. -Rmv. Hook; B4	1	B4
21	017-24116-007	*Shaft II; M. -Rmv. Hook; A4	1	A4,L
22	011-14169-001	*Master Removal Hook (Right); B4	1	B4
23	011-14168-005	*Master Removal Hook (Left); B4	1	B4
23	007-17121-104	*Master Removal Hook	2	A4,L
24	011-14115-009	*Linking Plate; M. -Rmv. Hook	1	
25	000-10148-030	*Spring B	1	
26	017-60037-105	*Master Sensor II	1	
27		**Junction Connector; 3P	1	Ref.Pg.II-36
28	017-14111-309	*Sensor Bracket; M. -Rmv.	1	
29	019-65015-007	*Master Removal Solenoid; T	1	

No.	Part No.	Part Name	Q'ty	Remark
30	017-14122-106	*Bracket; M. -Rmv. Solenoid	1	
31	017-65003-004	*M. -Rmv. Vertical Transport Motor	1	
32	002-14517-000	*Pulley; Duct	1	
33	019-55005-003	*Wire Harness; M. -Rmv.	1	
34	011-14408-006	*Bracket; Disposal Box SW	1	
35	443-00121-109	*Micro-SW; 21-52N	1	
36	017-60010-002	*Switch A	1	
37		**Junction Connector; 2P	1	Ref.Pg.II-36
38	620-32916-002	*Belt; 291-3M-6	1	
39	011-14121-106	*Pulley B; M. -Rmv.	1	
40	607-13000-402	*Metal; F6 x 10/9 x 6; 12 x 1.5	2	
41	017-24110-009	*Bracket; M. -Rmv. Hook Sensor	1	
42	443-30005-006	*Sensor; GP1A71A	1	
43	017-24109-108	*Actuator; M. -Rmv. Hook Sensor	1	
44	017-24108-101	*Bracket; Disposal Box Master Sensor	1	
45	019-60001-008	*Disposal Box Master Sensor (Rcv.)	1	
46		**Junction Connector; 3P	1	Ref.Pg.II-36
	017-94115-202	Holder Ass'y II; V.-Transport Roller; CE		B4
	017-94116-101	Holder Ass'y II; V.-Transport Roller; A4		A4,L
47	017-44135-105	*Upper Holder A; V.-Transport Roller; CE	1	
48	017-24139-104	*Knob; M. -Rmv.	2	
49	017-24140-005	*Knob Shaft; M. -Rmv.	2	
50	017-24141-001	*Lock Plate	2	
51	607-13000-020	*Metal; F6 x 10/9 x 4; 12 x 1.5	2	
52	017-24138-000	*Guide Boss; M. -Rmv.	2	
53	017-44131-002	*Upper Holder B; V.-Transport Roller; CE	1	
54	007-14113-100	*Spring; Vertical Transport	3	
55	017-14138-207	*Vertical Transport Roller (UP); B4	1	B4
55	017-14141-208	*Vertical Transport Roller (UP); A4	1	A4,L
56	612-03103-009	*Gear B; 1.25 x 14	1	
57		*Pin; ϕ 2.5 x 8	1	Ref.Pg.II-36
58	550-20059-108	Seal; P. -F. -T. Down	1	
59	017-44113-101	Fixing Plate F; M. -Rmv.; CE	1	
60	017-44114-000	Fixing Plate R; M. -Rmv.; CE	1	

Fig. 29 MASTER REMOVAL UNIT (FR3950)

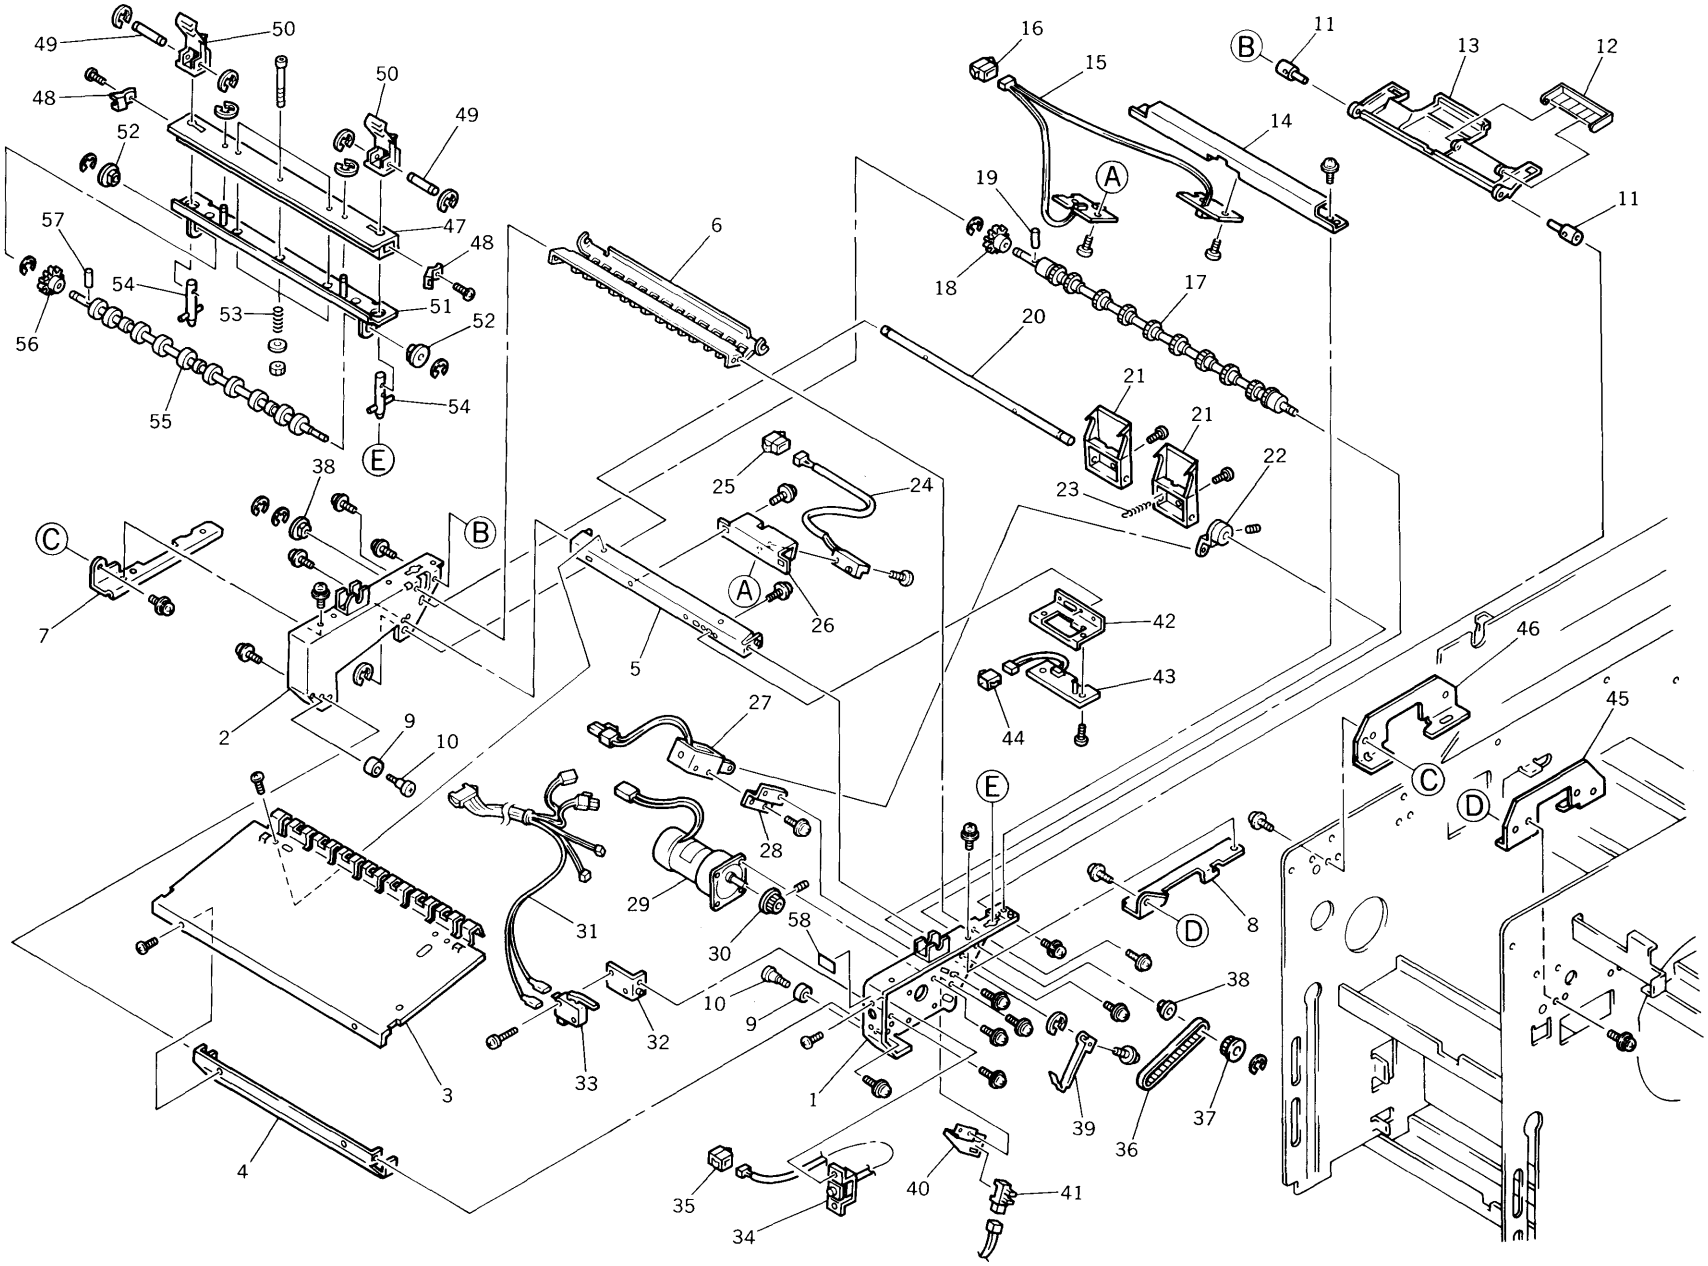

Fig. 29 Master Removal Unit (FR3950)

No.	Part No.	Part Name	Q'ty	Remark
	019-94100-102	Unit/Master Removal; A3; CE		
1	017-44101-103	*Right-Side Frame; M. -Rmv.; CE	1	
2	017-44104-102	*Left-Side Frame; M. -Rmv.; CE	1	
3	019-44103-003	*Base Plate; M. -Rmv; A3; CE	1	
4	019-44102-007	*Stay B; M. -Rmv.; CE	1	
5	019-24101-004	*Stay A; M. -Rmv.	1	
6	019-24104-208	*Guide Plate; M. -Rmv.; A3; CE	1	
7	017-44112-008	*Set Plate R; M. -Rmv.; CE	1	
8	017-44111-001	*Set Plate F; M. -Rmv.; CE	1	
9	017-14114-006	*Set Collar; M. -Rmv.	2	
10	017-14115-002	*Screw; M. -Rmv.	2	
11	017-14116-009	*Fulcrum; Master Guide; M. -Rmv.	2	
12	019-24111-000	*Guide Plate; M. -Rmv.; A3	1	
13	019-24110-100	*Master Guide; M. -Rmv.; A3	1	
14	019-44108-102	*Upper Stay; M. -Rmv.; CE	1	
15	017-60001-208	*Master Removal Sensor	1	
16		**Junction Connector; 5P	1	Ref.Pg.II-36
17	019-24105-000	*Vertical Transport Roller (Down); A3	1	
18	612-03103-009	*Gear B; 1.25 x 14	1	
19		*Pin; ϕ 2.5 x 8	1	Ref.Pg.II-36
20	019-24107-002	*Shaft; M. -Rmv. Hook; A3	1	
21	007-17121-104	*Master Removal Hook	2	
22	011-14115-009	*Linking Plate; M. -Rmv. Hook	1	
23	000-10148-030	*Spring B	1	
24	017-60037-105	*Master Sensor II	1	
25		**Junction Connector; 3P	1	Ref.Pg.II-36
26	017-14111-309	*Sensor Bracket; M. -Rmv.	1	
27	019-65015-007	*Master Removal Solenoid	1	
28	017-14122-106	*Bracket; M. -Rmv. Solenoid	1	
29	017-65003-004	*M. -Rmv. Vertical Transport Motor	1	
30	002-14517-000	*Pulley; Duct	1	
31	019-55005-003	*Wire Harness; M. -Rmv.	1	
32	011-14408-006	*Bracket; Disposal Box SW	1	
33	443-00121-109	*Micro-SW; 21-52N	1	
34	017-60010-002	*Switch A	1	

No.	Part No.	Part Name	Q'ty	Remark
35		**Junction Connector; 2P	1	Ref.Pg.II-36
36	620-32916-002	*Belt; 291-3M-6	1	
37	011-14121-106	*Pulley B; M. -Rmv.	1	
38	607-13000-402	*Metal; F6 x 10/9 x 6; 12 x 1.5	2	
39	017-24109-108	*Actuator; M. -Rmv. Hook Sensor	1	
40	017-24110-009	*Bracket; M. -Rmv. Hook Sensor	1	
41	443-30005-006	*Sensor; GP1A71A	1	
42	017-24108-101	*Bracket; Disposal Box Master Sensor	1	
43	019-60001-008	*Disposal Box Master Sensor (Rcv.)	1	
44		**Junction Connector; 3P	1	Ref.Pg.II-36
45	017-44113-101	Fixing Plate F; M. -Rmv.; CE	1	
46	017-44114-000	Fixing Plate R; M. -Rmv.; CE	1	
	019-94115-207	Holder Ass'y; V. - Transport Roller; A3; CE		
47	019-44116-105	*Upper Holder A; V. - Transport Roller; A3; CE	1	
48	017-24141-001	*Lock Plate	2	
49	017-24140-005	*Knob Shaft; M. -Rmv.	2	
50	017-24139-104	*Knob; M. -Rmv.	2	
51	019-44112-002	*Upper Holder B; V. - Transport Roller; A3; CE	1	
52	607-13000-003	*Metal; F6 x 10/9 x 4; 12 x 1.5	2	
53	007-14113-100	*Spring; Vertical Transport	3	
54	017-24138-000	*Guide Boss; M. -Rmv.	2	
55	019-24119-108	*Vertical Transport Roller (UP); A3	1	
56	612-03103-009	*Gear B; 1.25 x 14	1	
57		*Pin; ϕ 2.5 x 8	1	Ref.Pg.II-36
58	550-20059-108	Seal; P. -F. -T. Down	1	

Fig. 30 MASTER DISPOSAL BOX

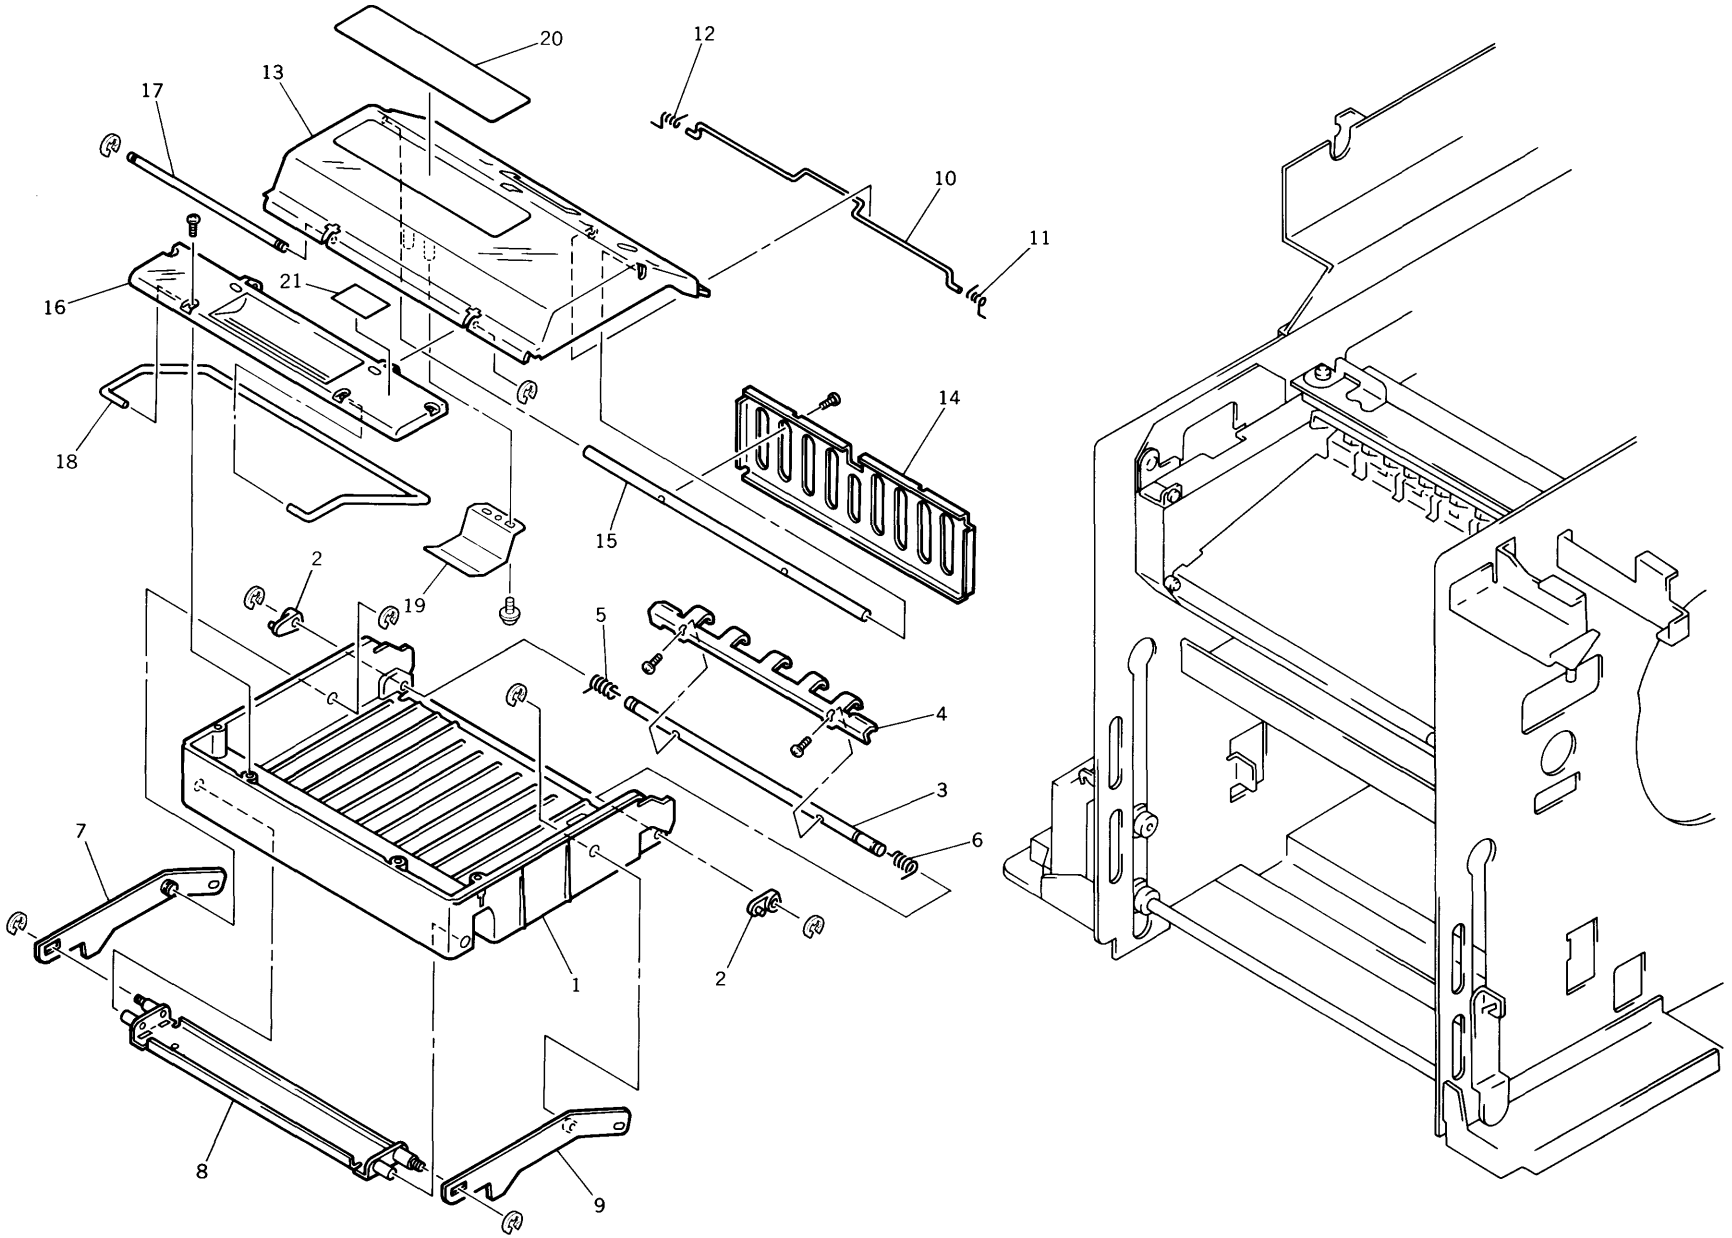

Fig. 30 Master Disposal Box

No.	Part No.	Part Name	Q'ty	Remark
	017-94130-317	Unit/Master Disposal Box; B4; CE		B4
	017-94135-319	Unit/Master Disposal Box; A4; CE		A4,L
	019-94130-109	Unit/Master Disposal Box; A3; CE		A3
1	017-34151-102	*Disposal Box; CE	1	
1	019-44131-104	*Disposal Box; A3; CE	1	A3
2	011-14421-207	*Guide Cam; Disposal Box	2	
3	017-14162-000	*Guide Shaft; Disposal Box	1	
3	019-24137-009	*Guide Shaft; Disposal Box; A3	1	A3
4	017-14154-008	*Guide Plate; Disposal Box; B4	1	B4
4	017-14171-000	*Guide Plate; Disposal Box; A4	1	A4,L
4	019-24134-000	*Guide Plate; Disposal Box; A3	1	A3
5	011-14422-203	*Guide Spring; Disposal Box	1	
6	017-14167-002	*Guide Spring B; Disposal Box	1	
7	017-14161-101	*H. -Lever (R); Disposal Box	1	
8	017-14155-004	*Lever Frame; Disposal Box	1	
8	019-24135-006	*Lever Frame; Disposal Box; A3	1	A3
9	017-14159-107	*H. -Lever (F); Disposal Box	1	
10	011-14427-000	*Lock Shaft; Disposal Box	1	
10	014-14465-001	*Lock Shaft; Disposal Box; A3	1	A3
11	011-14428-007	*Lock Spring (Right)	1	
12	011-14429-003	*Lock Spring (Left)	1	
13	017-14152-307	*Disposal Box Cover	1	
13	019-24132-104	*Disposal Box Cover; A3	1	A3
14	017-14166-103	*Compression Plate; Disposal Box	1	
15	017-14165-107	*Shaft; Compression Plate	1	
15	019-24138-005	*Shaft; Compression Plate; A3	1	A3
16	017-14153-109	*Disposal Box Cover B	1	
16	019-24133-003	*Disposal Box Cover B; A3	1	A3
17	014-14469-007	*Shaft; Disposal Box Cover; A3	1	
18	017-14163-007	*Disposal Shaft	1	
19	019-14231-007	*Hinge Reinforcement; Disposal Box	1	
20	550-20690-002	Seal; Master Disposal	1	
20	550-20691-009	Seal; Master Disposal; Pic.	1	
21	550-20693-001	Seal; Set Disposal Box	1	
21	550-20694-008	Seal; Set Disposal Box; Pic.	1	

No.	Part No.	Part Name	Q'ty	Remark

Fig. 31 ELECTRICAL COMPONENT AREA (1)

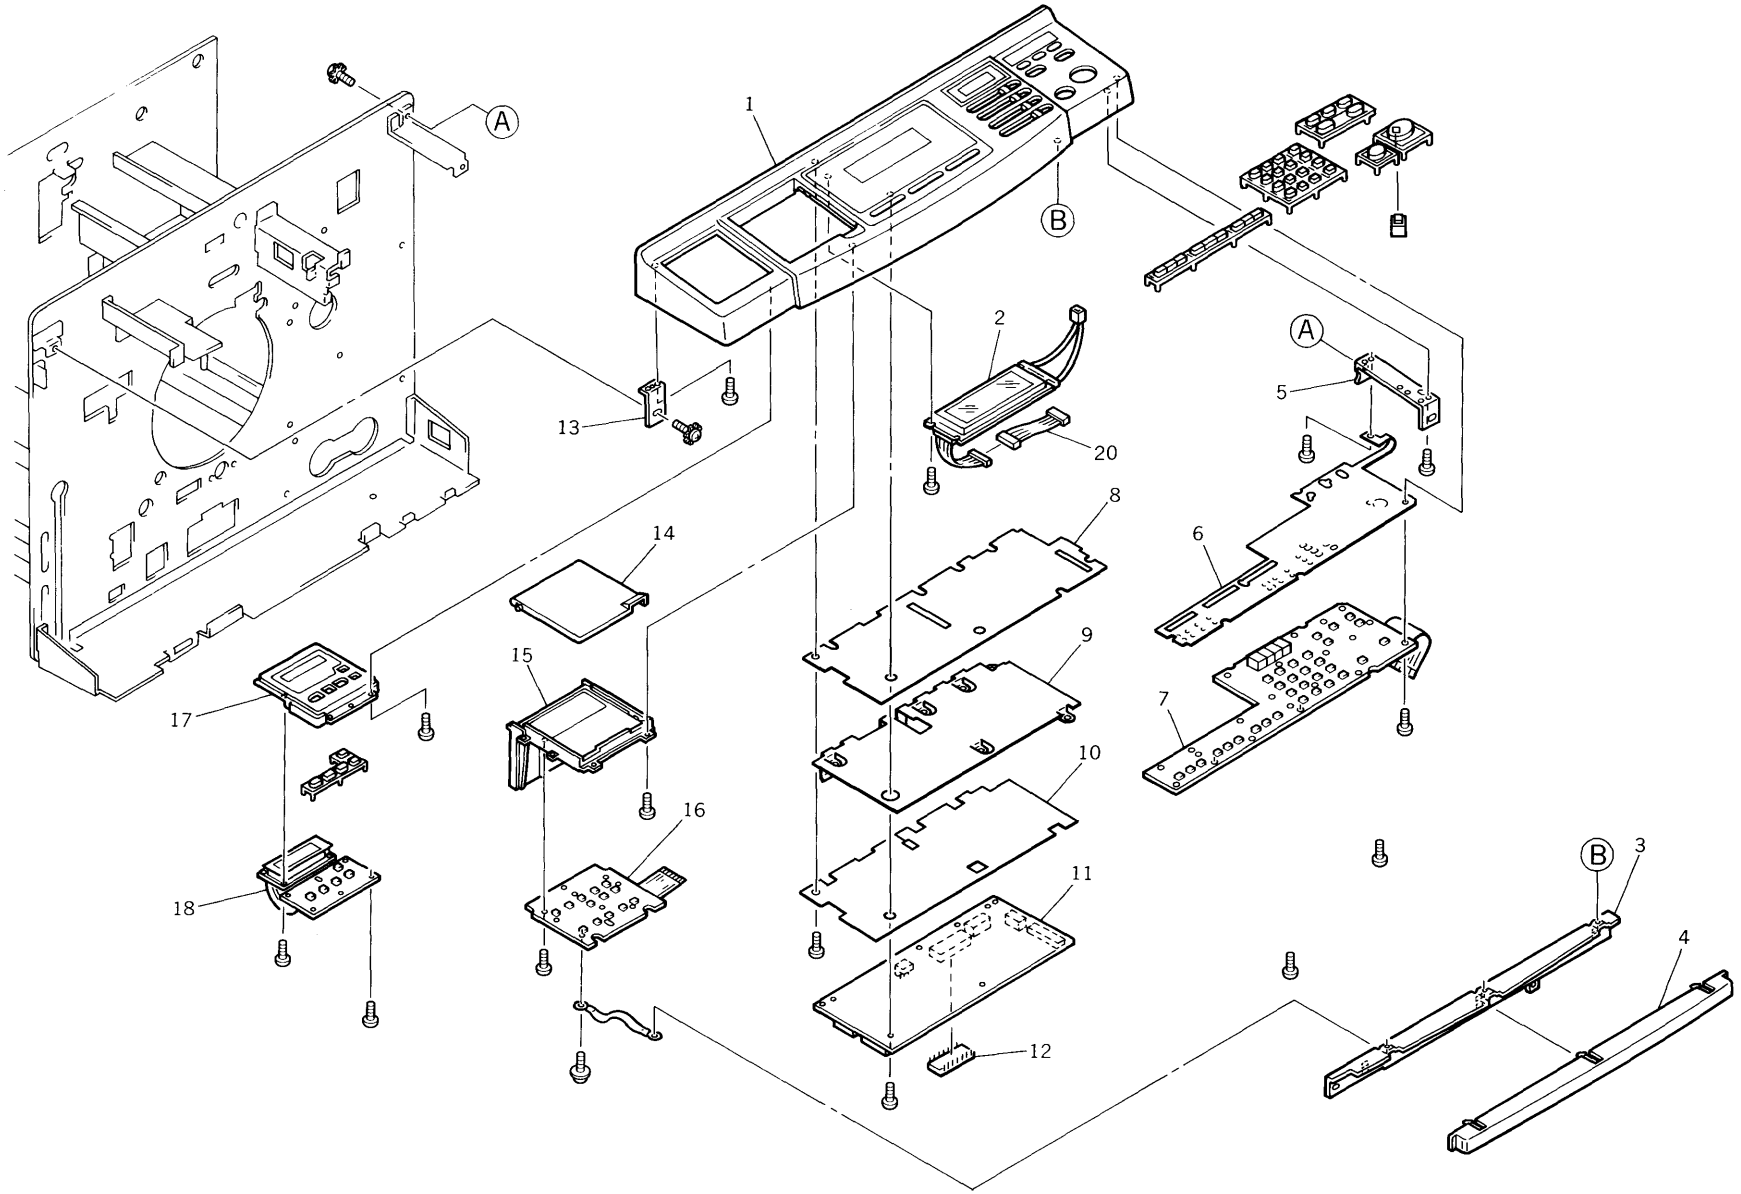

Fig. 31 Electrical Component Area (1)

No.	Part No.	Part Name	Q'ty	Remark
	018-97310-054	Unit/Operation Panel; 2950		
	018-97312-057	Unit/Operation Panel; 2950 Pic.		
	018-97311-050	Unit/Operation Panel; 2950 US		
	019-97309-053	Unit/Operation Panel; 3950		
	019-97322-050	Unit/Operation Panel; 3950		FR3950-α
	019-97311-058	Unit/Operation Panel; 3950 Pic.		
	019-97324-001	Unit/Operation Panel; 3950 Pic.		FR3950-α
	019-97310-051	Unit/Operation Panel; 3950 US		
	019-97323-056	Unit/Operation Panel; 3950 US		FR3950-α
1	018-97315-005	*Key Board Cover; 2950	1	
1	018-97317-008	*Key Board Cover; 2950 Pic.	1	
1	018-97316-001	*Key Board Cover; 2950 US	1	
1	019-97314-006	*Key Board Cover; 3950	1	
1	019-97316-009	*Key Board Cover; 3950 Pic.	1	
1	019-97315-002	*Key Board Cover; 3950 US	1	
2	019-97090-000	*LCD; Panel	1	
5	017-17051-005	*Bracket B; Keyboard	1	
6	018-37010-000	*Mylar Sheet; Panel SW	1	
6	019-47003-000	*Mylar Sheet; Panel SW; A3	1	A3
7	018-51015-007	*Main SW PCB; Panel	1	
7	019-51051-000	*Main SW PCB; Panel; A3	1	A3
8	018-37011-007	*Sheet; Panel 1	1	
9	018-37132-009	*Main Ground Plate; Panel	1	
10	018-37020-006	*Sheet; Panel 2	1	
11	018-51014-000	*Panel Control PCB	1	
11	019-51050-004	*Panel Control PCB; A3	1	A3
13	018-37115-007	*Bracket A; Keyboard	1	
14	018-37012-003	*Door; Panel	1	
14	019-47004-006	*Door; Panel; A3	1	A3
15	018-97318-004	*Sub-Panel Ass'y; 2950	1	
15	018-97320-009	*Sub-Panel Ass'y; 2950 Pic.	1	
15	018-97319-000	*Sub-Panel Ass'y; 2950 US	1	
15	019-97317-005	*Sub-Panel Ass'y; 3950	1	
15	019-97319-008	*Sub-Panel Ass'y; 3950 Pic.	1	
15	019-97318-001	*Sub-Panel Ass'y; 3950 US	1	

No.	Part No.	Part Name	Q'ty	Remark
16	019-51052-007	**SUB-SW-A3	1	FR3950
16	018-51016-003	**SUB-SW-B4	1	
17	019-97333-000	*Unit/SC Panel	1	FR3950-α
17	019-97334-007	*Unit/SC Panel; Pic.	1	FR3950-α
18	018-97324-004	*SC LCD Ass'y	1	FR3950-α
20	019-55111-008	Wire Harness; Panel LCD	1	
3	018-37116-003	Reinforce Plate; Panel	1	
4	018-37150-007	Mole; 2950 EPB	1	
4	018-37143-000	Mole; 2950 UI	1	
4	018-37145-003	Mole; 2950 EPA	1	
4	018-37144-007	Mole; 2950 UP	1	
4	018-37146-000	Mole; 2950 EN	1	
4	018-37147-006	Mole; 2950 AW	1	
4	018-37148-002	Mole; 2950 AN	1	
4	018-37149-009	Mole; 2950 C	1	
4	019-47107-000	Mole; 3950 EP	1	
4	019-47114-006	Mole; 3950 EP-α	1	
4	019-47105-007	Mole; 3950 UI	1	
4	019-47112-003	Mole; 3950 UI-α	1	
4	019-47106-003	Mole; 3950 UP	1	
4	019-47113-000	Mole; 3950 UP-α	1	
4	019-47108-006	Mole; 3950 EN	1	
4	019-47115-002	Mole; 3950 EN-α	1	
4	019-47109-002	Mole; 3950 AW	1	
4	019-47116-009	Mole; 3950 AW-α	1	
4	019-47110-000	Mole; 3950 AN	1	
4	019-47117-005	Mole; 3950 AN-α	1	
4	019-47111-007	Mole; 3950 C	1	
4	019-47118-001	Mole; 3950 C-α	1	
12	018-80008-	FRPU	1	FR2950 U.S.A
12	018-80010-	FRPE	1	FR2950 Europe
12	018-80009-	FRPA	1	FR2950 Asia
12	019-80040-	FRDU	1	FR3950 U.S.A.
12	019-80041-	FRDE	1	FR3950 Europe
12	019-80042-	FRDA	1	FR3950 Asia

Fig. 32 ELECTRICAL COMPONENT AREA (2)

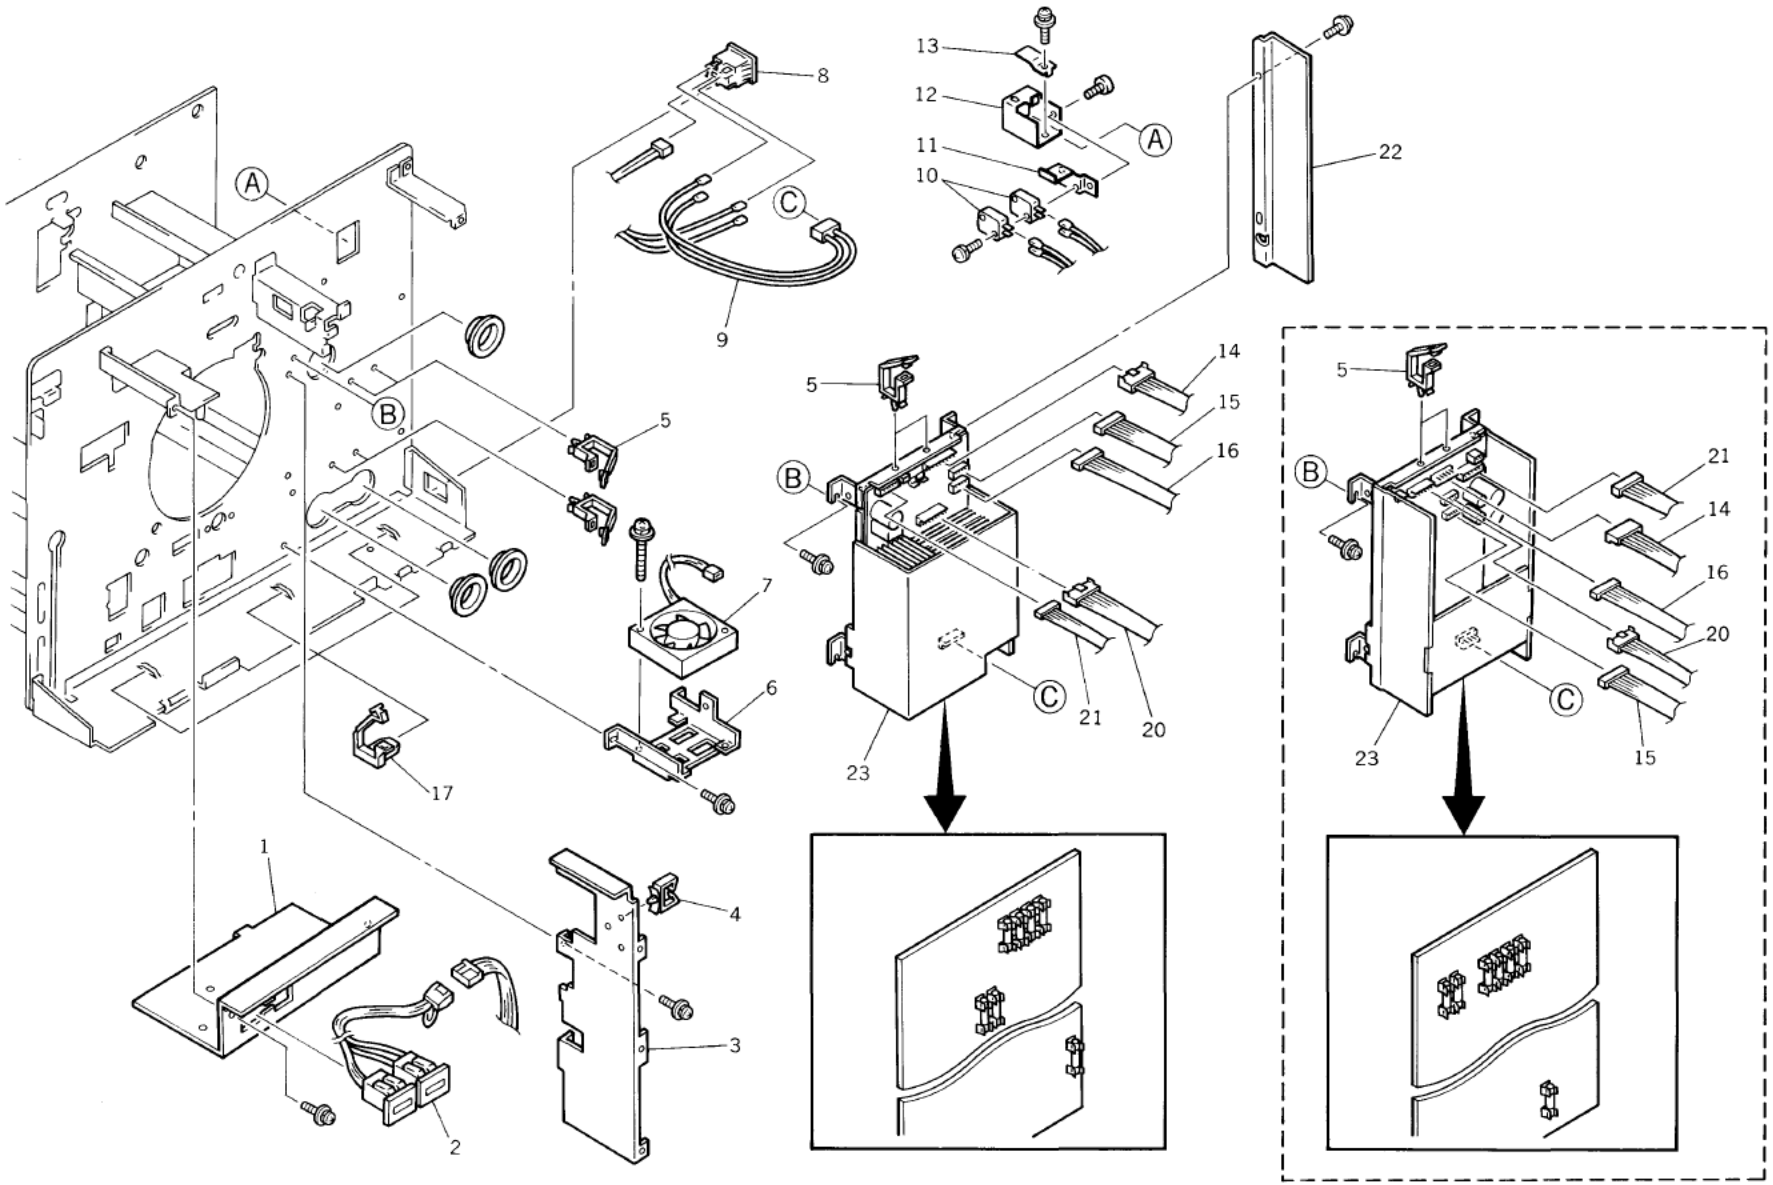

Fig. 32 Electrical Component Area (2)

No.	Part No.	Part Name	Q'ty	Remark
1	018-37120-108	Bracket; Counter; En; Pic.	1	
1	018-37119-100	Bracket; Counter; En	1	
2	011-65022-307	Counter	1	
3	019-18121-001	Cover Plate; Power Supply	1	
4	665-02025-504	Wire Saddle; WS-4W	1	
5	665-02043-006	Wire Saddle; LWS-1316	2	
6	019-17242-107	Bracket; Power Supply Fan	1	
7	019-65003-106	Fan; Power Supply	1	
7	019-65020-000	Fan; Power Supply;II	1	A3
8	443-11108-007	Power Switch; RS31-AJAJ	1	
9	018-55031-104	Inlet Terminal 2	1	
	019-96105-101	Interlock Switch; FB		
10	443-00210-004	*Micro-SW; DDIL-AIAA	2	
11	018-16239-105	*Bracket B; Interlock Switch FB	1	
12	019-16236-103	*Bracket; Interlock Switch FB	1	
13	018-16254-007	*Plate Spring; Interlock Switch FB	1	
	019-55060-101	Wire Harness; Power; CE	1	
14		*Wire Harness; System - Power	1	
15		*Wire Harness; Image - Power	1	
20		*Wire Harness; Motor Con. - Power	1	
16	019-55007-103	Wire Harness; Panel - Power	1	
21	017-55070-102	Wire Harness; TPH Power B4; CE	1	B4
21	019-55080-200	Wire Harness; TPH Power A3: CE	1	A3
17	665-02045-009	Wire Saddle; LWSS-1N	1	
22	017-17232-204	Side Cover; Power Supply	1	100V
23	019-51023-309	Power Supply PCB VI N200; CE	1	200V
23	019-51038-306	Power Supply PCB VI 100	1	100V
		[For Power Supply PCB 100]		
	485-00001-600	Fuse 10A 125V 6.3 CES6	1	
	485-00001-804	Fuse 8A 125V5.2 ULTSC	1	
	485-00003-408	Fuse 3.15A 125 V ULTSC	8	
		[For Power Supply PCB 200]		
	485-00003-300	5A 250V 5.2 MM DIA.SET FUSE	1	
	485-02520-000	6.3A 250V 5.2MM DIA.FUSE	1	
	485-00003-203	3.15A 250V 5.2 MM DIA.SET FUSE	8	

No.	Part No.	Part Name	Q'ty	Remark

Fig. 33 ELECTRICAL COMPONENT AREA (3)

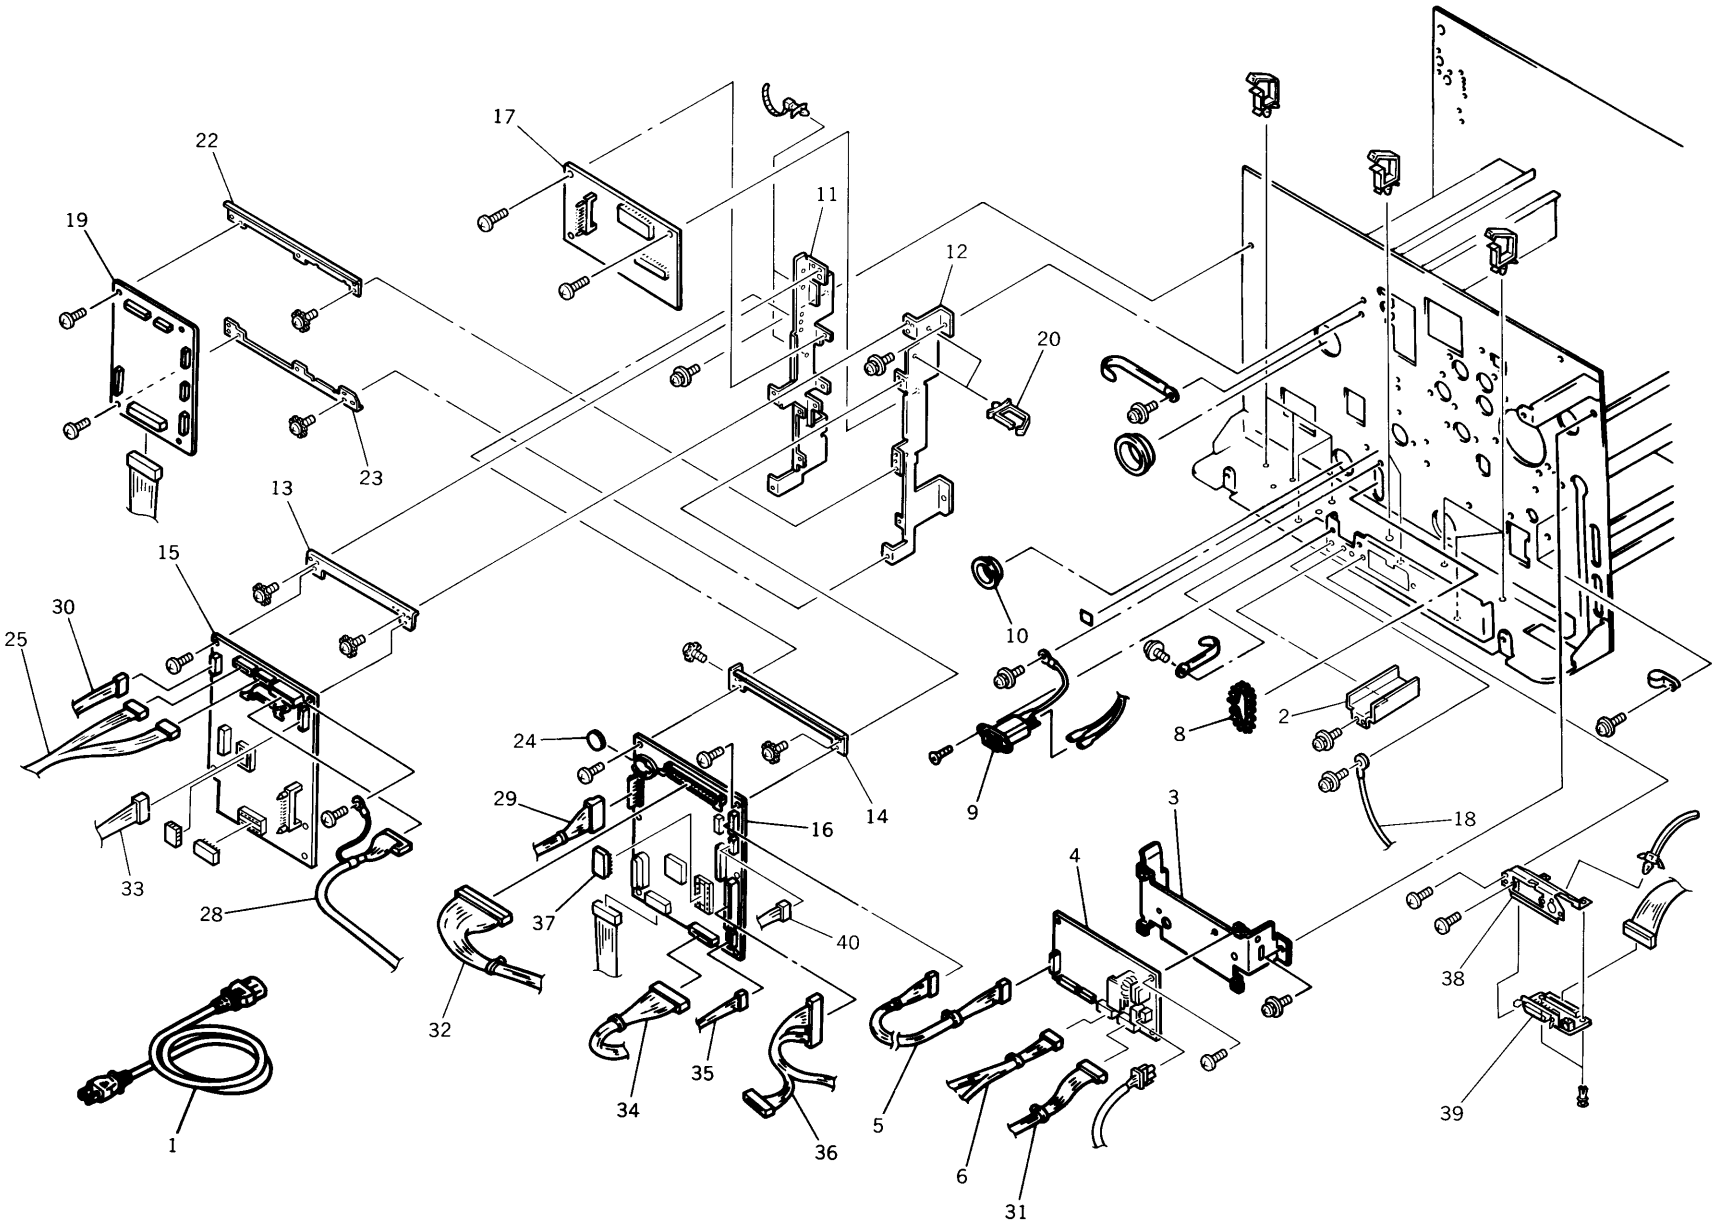

Fig. 33 Electrical Component Area (3)

No.	Part No.	Part Name	Q'ty	Remark
1	488-00013-103	Power Cord; 100V	1	
1	488-00014-100	Power Cord; US	1	
1	488-00015-106	Power Cord; 200V	1	
1	488-00033-007	Power Cord; Ch	1	China
2	018-37207-009	Cover; Inlet	1	
3	019-17236-204	Bracket; Motor Control PCB	1	
4	019-51040-408	Motor Control PCB2	1	
5	017-55017-007	Wire Harness; Motor Con.-System	1	
6	017-55031-301	Wire Harness; Elevator Motor	1	
8	665-04037-003	Free Bushing; NJ-23	1	
9	018-55025-007	Inlet Terminal 1	1	
10	665-04014-003	Snap Bushing; SB-2000-26	2	
11	019-18125-201	Bracket (R); System PCB; CE	1	
12	019-18126-100	Bracket (L); System PCB; CE	1	
13	019-18128-006	Reinforce Plate; Image PCB; CE	1	
14	019-18127-107	Reinforce Plate; System PCB; CE	1	
15	018-51022-402	Image Processing PCB; IPDF	1	
16	018-51017-107	System PCB 2	1	FR2950
16	019-51053-003	System PCB 4	1	FR3950
17	018-51000-107	Trimming PCB II	1	
18	488-90021-002	Ground Wire; U3-1000-R4		
19	019-51047-003	Option PCB A III	1	
20	665-02043-006	Wire Saddle; LSW-1316	2	
22	019-18129-002	Bracket E; Option PCB; CE	1	
23	019-18130-000	Bracket F; Option PCB; CE	1	
24	408-02301-008	Battery; CR-2450	1	
25	019-55076-105	Wire Harness; ADF (FB); CE	1	
28	019-55011-003	Wire Harness; Image	1	
	019-55060-101	Wire Harness; Power; CE		
29		*Wire Harness; System-Power	1	
30		*Wire Harness; Image-Power	1	
31		*Wire Harness; Motor Con.-Power	1	
32	019-55066-207	Wire Harness; CN7; CE	1	
33	019-55063-305	Wire Harness; TPH Signal T	1	
34	019-55028-100	Wire Harness; CN15	1	

No.	Part No.	Part Name	Q'ty	Remark
35	019-55078-108	Wire Harness; CN14; CE	1	
36	019-55014-509	Wire Harness; CN9	1	FR2950
36	019-55105-008	Wire Harness; CN9 II	1	FR3950
37	018-80002-	System ROM; FR	1	FR2950
37	019-80038-	System ROM; FR	1	FR3950
	018-97205-005	CN-TRS-PCB ASS'Y		FR3950-
38	018-37205-006	*Connecter Cover	1	
39	018-51013-004	*CN-TRS-PCB	1	
40	019-55105-008	Wire Harness II; CN9	1	FR3950

Fig. 34 EXTERIOR COVER AREA

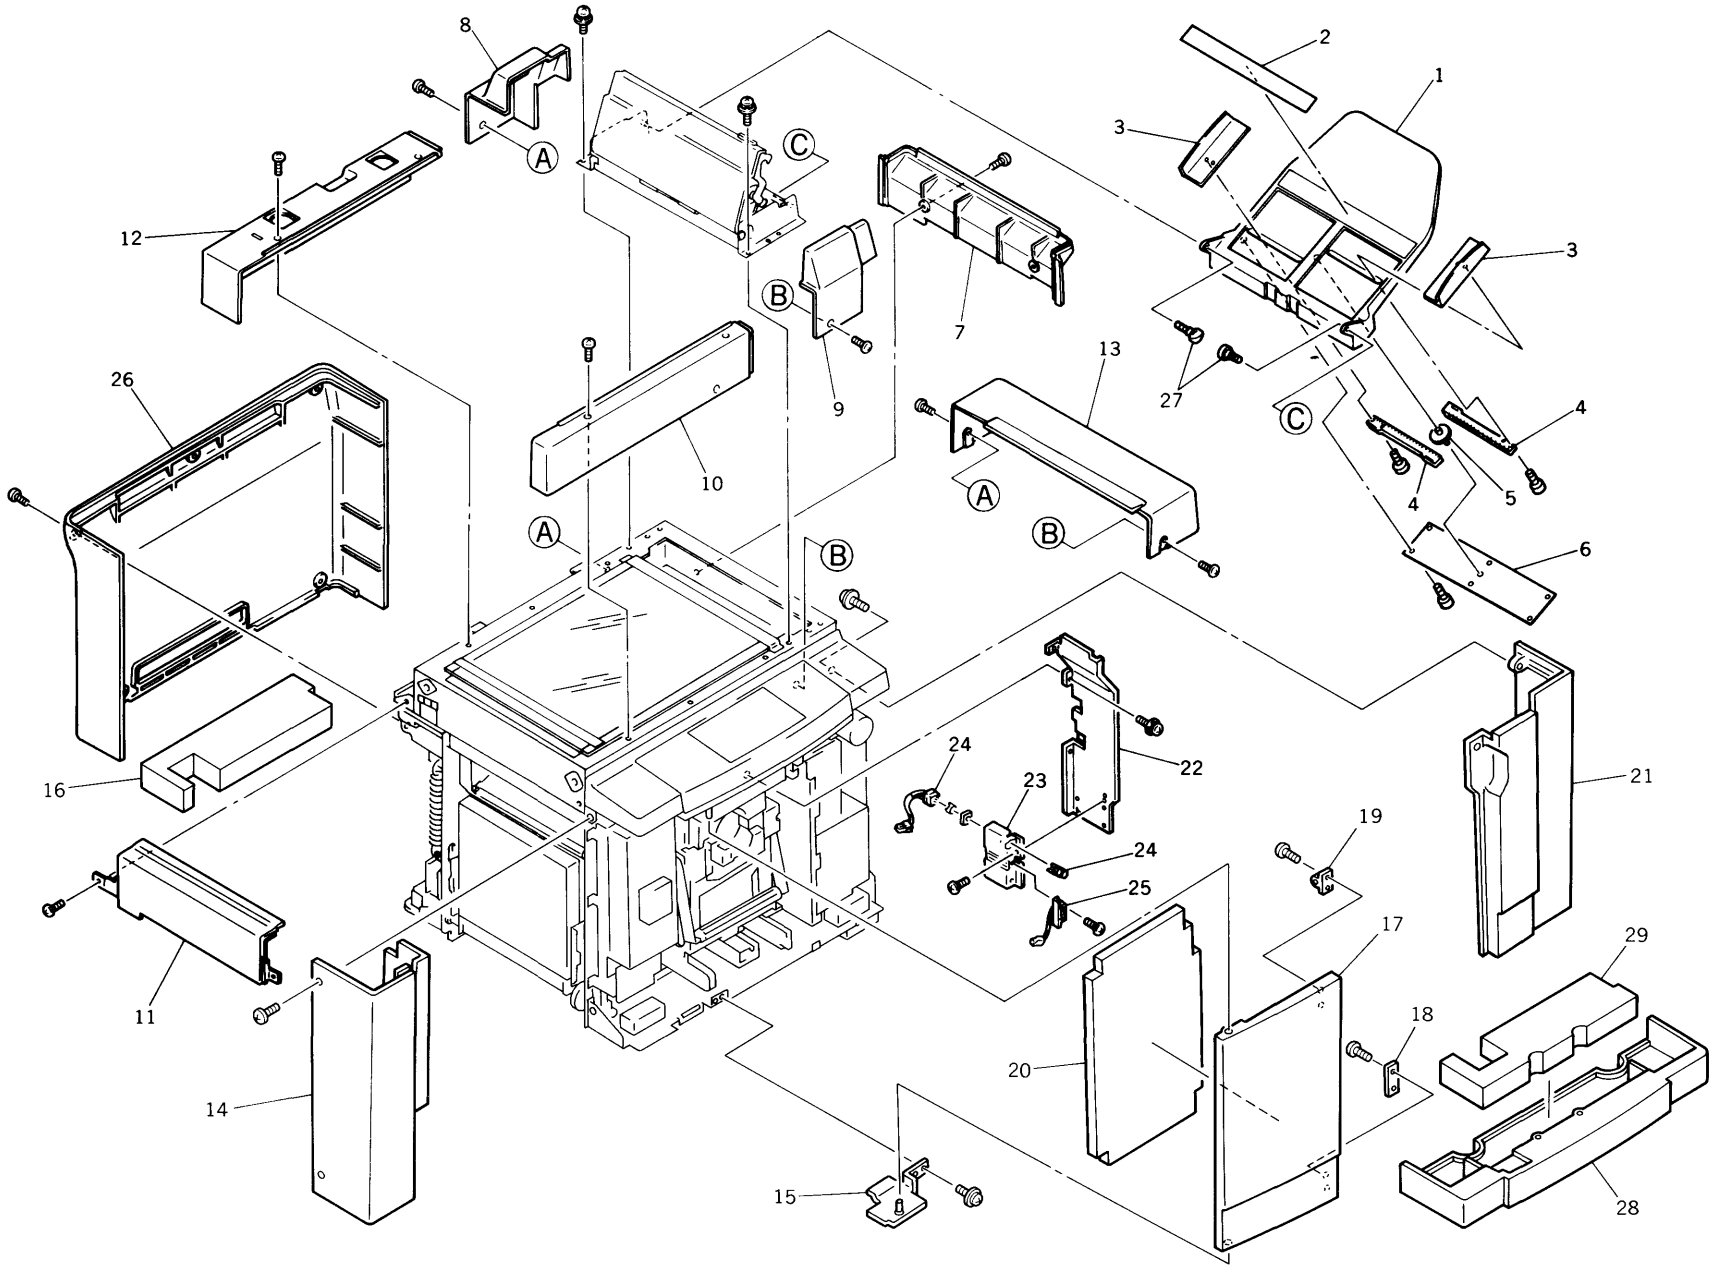

Fig. 34 Exterior Cover Area

No.	Part No.	Part Name	Q'ty	Remark
	018-96600-008	Original Tray Ass'y; FB		
1	018-16309-200	*Original Tray; FB	1	
2	550-20682-204	*Seal; Original Size	1	
3	018-16310-101	*Original Side Guide	2	
4	017-17105-008	*Slide Rack; Original Holder	2	
5	005-24114-003	*Shaft Gear; Original Holder	1	
6	017-16021-005	*Rack Cover; ADF Cover	1	
7	018-16308-107	ADF Cover (Right); FB	1	
8	018-16307-100	ADF Cover (R); FB	1	
9	018-16306-104	ADF Cover (F); FB	1	
10	018-16301-404	Scanner Cover (F); FB	1	
11	018-16303-504	Scanner Cover (Left); FB	1	
12	018-16302-508	Scanner Cover (R); FB	1	
13	018-16304-306	Scanner Cover (Right); FB	1	
14	018-37103-009	Front Left Cover	1	
15	018-37122-003	Lower Hinge; Front	1	
16	018-37131-002	Sound-Proof Sponge;R	1	
	018-97200-054	Front Cover Ass'y		
17	018-37101-006	*Front Cover	1	
18	011-17102-005	*Magnet Catch Plate; Front	1	
19	002-17016-002	*Cover Catch A; Front	1	
20	018-37130-006	*Sound-Proof Sponge;F	1	
21	018-37102-002	Front Right Cover	1	
22	018-37117-107	Inner Cover A; CE	1	
23	018-37125-002	Switch Box; CE	1	
24	011-60007-008	Rotation SW; A Position	1	
25	011-60020-004	Front Cover Set SW	1	
26	012-17001-206	Back Cover; FB	1	
26	014-17101-108	Back Cover; A3	1	A3
27	018-16312-007	Shaft; Original Tray	2	
28	018-37303-008	Mole; Stand	1	
29	018-37301-005	Mole; Sound Absorber (Front)	1	

No.	Part No.	Part Name	Q'ty	Remark

Fig. 35 STAGE COVER

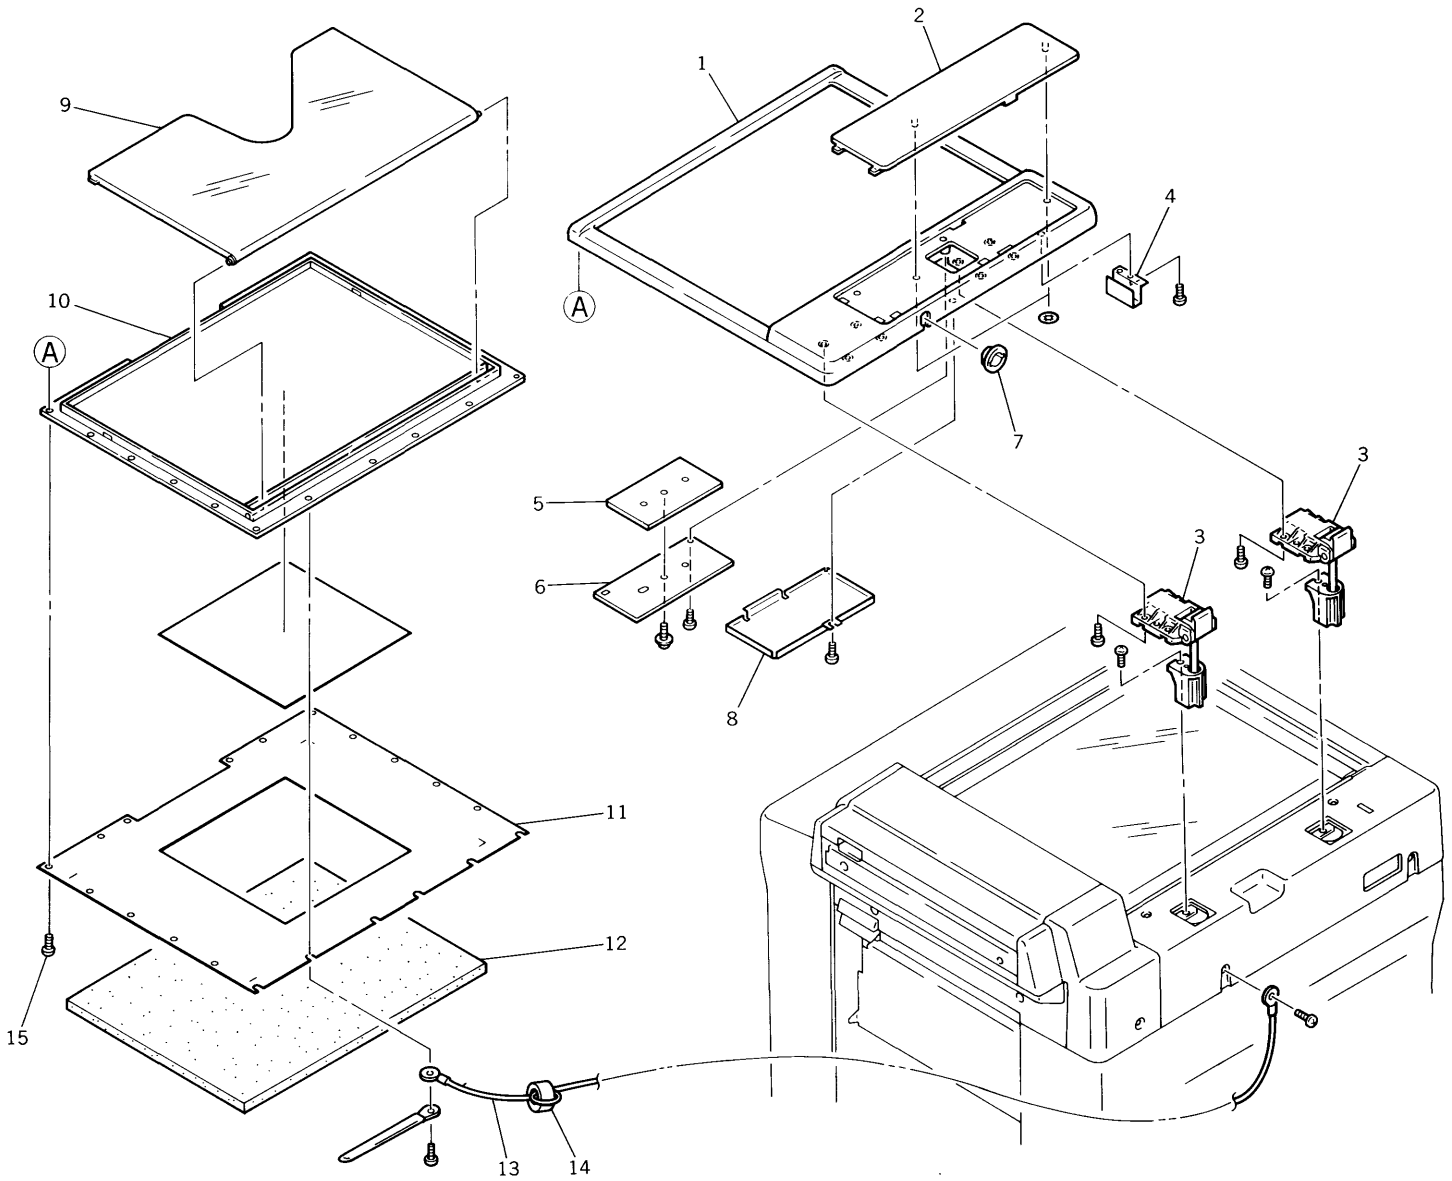

Fig. 35 Stage Cover

No.	Part No.	Part Name	Q'ty	Remark
	018-96200-115	Unit/Stage Cover		
1	018-16401-301	*Stage Cover; FB	1	
2	018-16413-008	*Cover B; Stage Cover	1	
3	018-96210-005	*Stage Cover Hinge Ass'y	2	
4	018-16420-004	*Actuator Plate; Stage Cover	1	
5	018-16417-100	*Balance Weight C; Stage Cover	1	
6	018-16416-104	*Balance Weight B; Stage Cover	1	
7	018-16418-000	*Cord Cap; Stage Cover	1	
8	018-16406-206	*PCB Cover; Stage Cover	1	
9	018-16411-102	*Original Holder Cover (Upper); Stage Cover	1	
10	018-16412-508	*Original Holder Cover (Lower); Stage Cover	1	
11	018-16415-809	*Balance Weight A; Stage Cover	1	
12	018-16425-006	*Stage Pad (W); Stage Cover	1	
13	488-90019-105	*Ground Wire; R4-440-R4	1	
14	435-00020-009	*Core; TR-23-11-14	1	
15	635-11307-106	*Stepped Screw; 3 x 7	10	

No.	Part No.	Part Name	Q'ty	Remark

Fig. 36 DIGITIZER

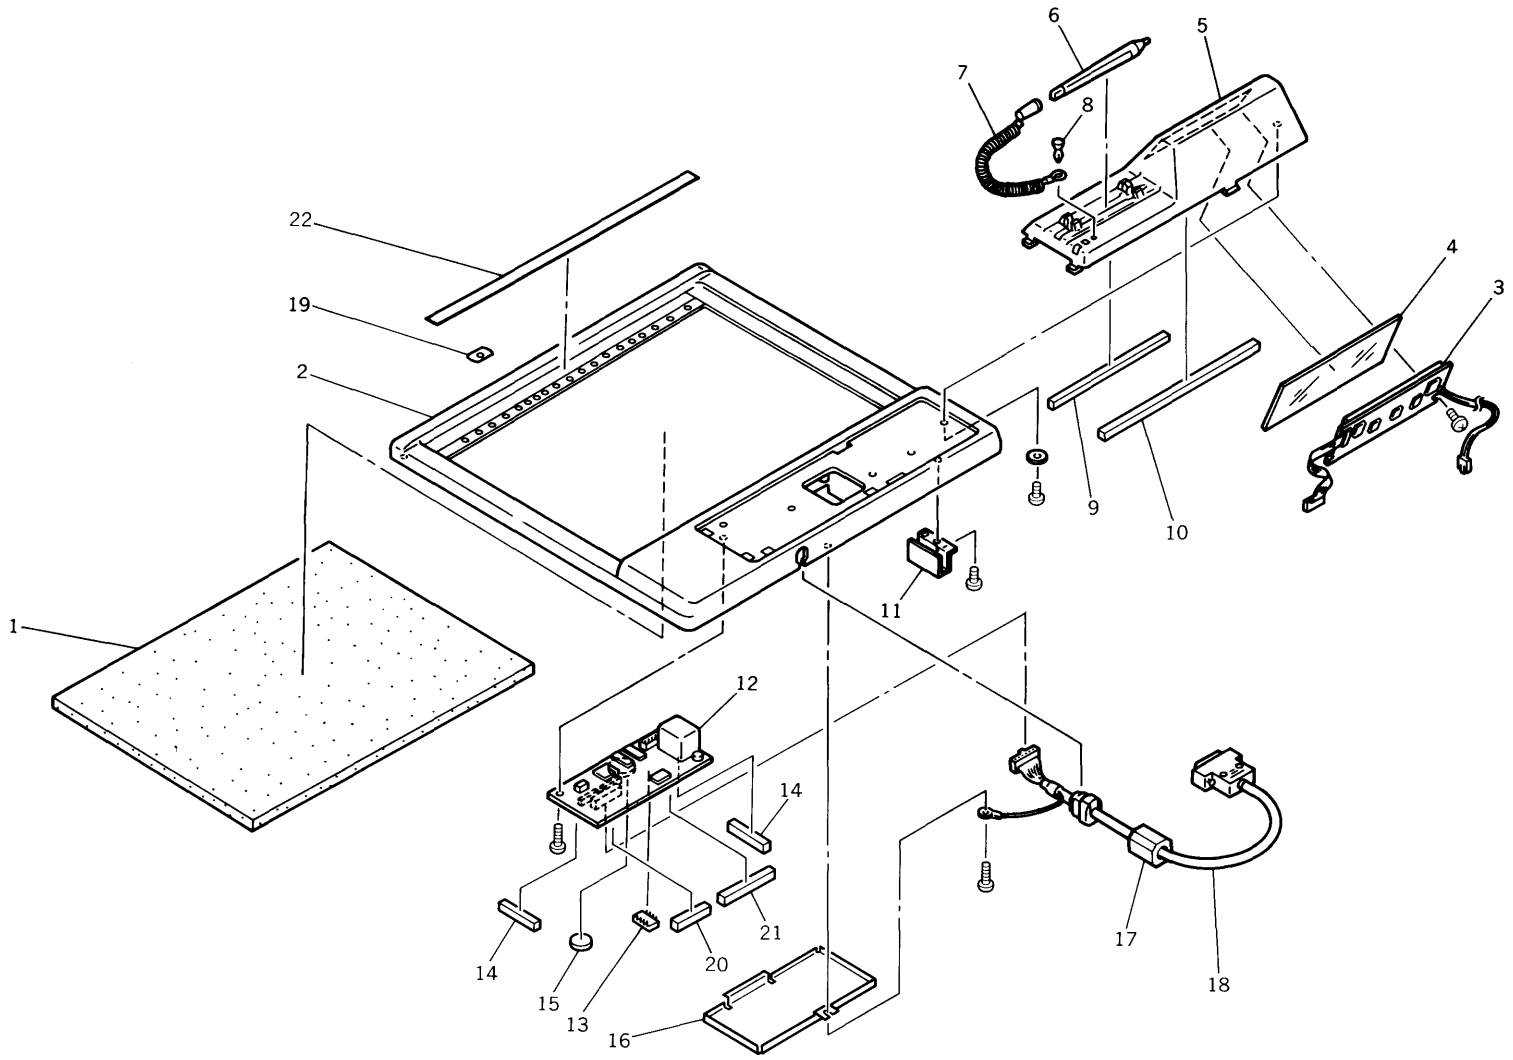

Fig. 36 Digitizer

No.	Part No.	Part Name	Q'ty	Remark
1	018-16425-006	Stage Pad (W); Stage Cover	1	
2	018-96230-200	Ass'y/Digitizer Stage Cover; FB; CE	1	Europe
2	019-96220-008	Ass'y/Digitizer Stage Cover; FB	1	
3	011-70508-005	LCD; DMF5005N	1	
4	018-16431-006	LCD Filter; Digitizer	1	
5	018-16435-001	LCD Cover; Digitizer; CE	1	Europe
5	018-16403-100	LCD Cover; Digitizer	1	
6	018-16427-203	Stylus Pen III	1	
7	665-09004-006	Stylus Pen Holder	1	
8	665-04951-104	Clip; Stylus Pen Holder	1	
9	481-30012-003	Gasket; LCDF	1	Europe
10	481-30013-000	Gasket; LCDR	1	Europe
11	018-16420-004	Actuator Plate; Stage Cover	1	
12	018-51004-803	Digitizer PCB III	1	
13	018-70018-009	INF ROM (ST); Digitizer	1	Ja, US
13	018-70019-005	INF ROM (OP1); Digitizer	1	Gr, Fr
13	018-70020-003	INF ROM (OP2); Digitizer	1	It, Sp
14	481-30010-000	Gasket; PCB2	2	Europe
15	408-02300-001	Battery	1	
16	018-16406-206	PCB Cover; Stage Cover	1	
17	435-00027-003	Ferrite Core; SFC-10	1	Europe
18	018-55015-001	Wire Harness; Digitizer III ; CE	1	
19		SW Guide; Digitizer	1	
20	481-30009-002	Gaslet; PCB1	1	Europe
21	481-30011-007	Gaslet; PCB3	1	Europe
22	550-20764-006	Digitizer Seal; Ja, US	1	
22	550-20861-001	Digitizer Seal; Gr	1	
22	550-20862-008	Digitizer Seal; Fr	1	
22	550-20863-004	Digitizer Seal; It	1	
22	550-20864-000	Digitizer Seal; Sp	1	
22	550-20865-007	Digitizer Seal; In	1	
22	550-20866-003	Digitizer Seal; Ch	1	
22	550-20867-000	Digitizer Seal; Kr	1	

No.	Part No.	Part Name	Q'ty	Remark

Fig. 37 SC UNIT

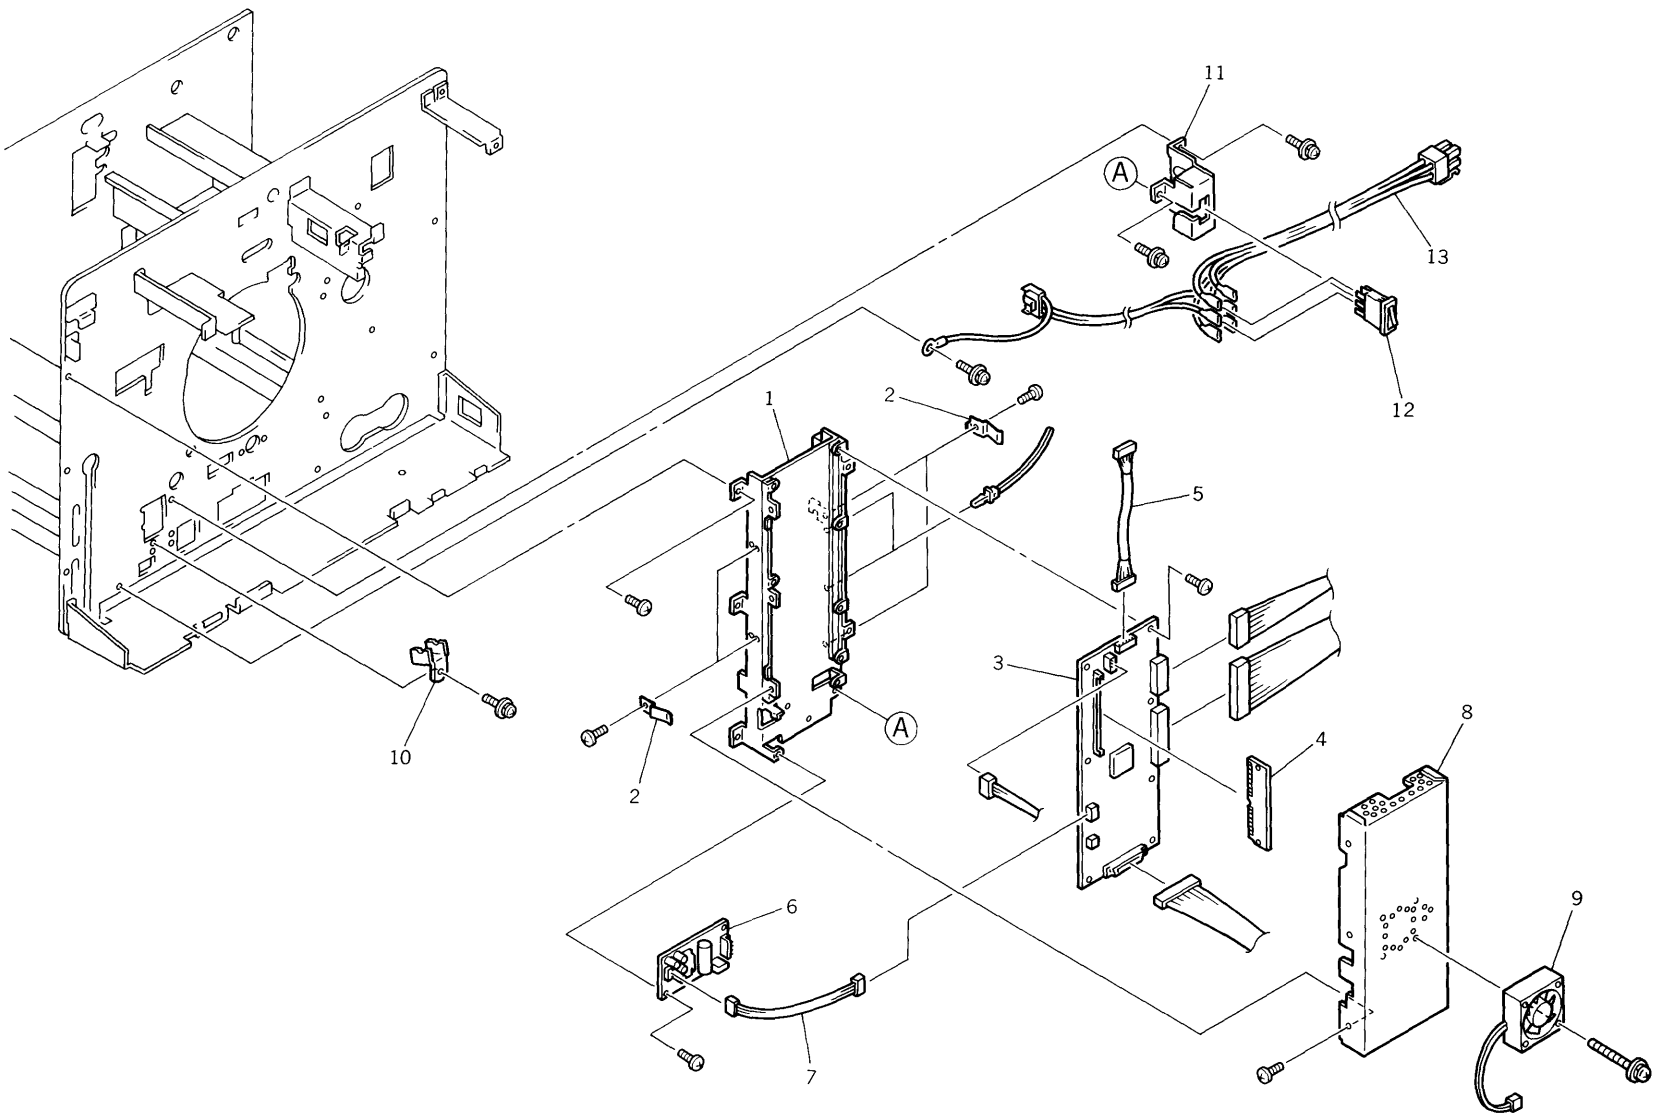

Fig. 37 SC Unit

No.	Part No.	Part Name	Q'ty	Remark
1	018-38107-105	Bracket; SC Unit	1	
2	018-38108-004	Ground Plate; SC Unit	4	
3	018-51010-200	SC-MAIN-PCB	1	
4	101-51015-005	32MB SIMM RAM	1	*Option
5	018-55022-008	Wire Harness; Panel; SC Unit	1	
6	101-51001-004	Power Supply PCB	1	
7	018-55020-102	Wire Harness;Power Supply; SC Uni	1	
8	018-38105-102	Bracket Plate; SC Unit	1	
9	018-65001-009	Fan; SC Unit	1	
10	018-37203-003	Plate; Wire Harness; SC Unit	1	
11	018-38106-001	Switch Plate	1	
12	443-10802-007	Power-SW; AJ921100B3	1	
13	018-55032-208	Inlet Terminal; SC	1	

No.	Part No.	Part Name	Q'ty	Remark

II. INDEX

[NOTICE]

★ When you order spare parts, please never fail to order the parts listed in this Index after making sure of what is the spare parts you want.

★ For modified or added parts, please refer to the technical information issued by our technical department.

★ What the part No. means;

Ex.)

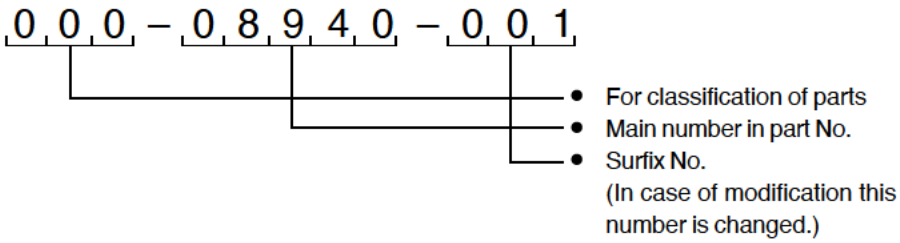
0 0 0 – 0 8 9 4 0 – 0 0 1
For classification of parts
Main number in part No.
Surfix No.
(In case of modification this number is changed.)

★ When you order spare parts, please never fail to inform us all of this part No. (the number of eleven figures).

Part No.	Part Name	Q'ty	Page	Unit Value
000-01169-114	Support Roller; Drum	3	25,29	
000-01327-100	Adj. Plate; Guide Roller; CE	1	21,23	
000-01328-107	Adj. Eccentric; Guide Roller; CE	1	21,23	
000-01515-004	Collar; Separator	1	41,43	
000-02211-017	Spring; Squeegee Gap	2	25,29	
000-02254-514	Ink Blocking Plate (Front)	1	25,29	
000-02255-510	Ink Blocking Plate (Back)	1	25,29	
000-06123-007	Stopper; Paper Guide Roller	2	7	
000-07119-100	Coil Spring; Inking Pump	1	26,30	
000-10126-002	Pulley G; Original Feed Roller	1	59,63	
000-10148-030	Spring B	1	69,71	
002-11210-109	Load Spring; Guide Roller	1	21,23	
002-11220-015	Cam; Guide Roller	1	13,17	
002-11225-009	Support Block; Slide Plate	2	13,17	
002-11227-001	Spacer; Slide Plate	6	13,17	
002-11291-109	Sector Gear	1	13,17	
002-11402-008	Adjuster; Press. -Roll. Support	2	21,23	
002-11404-108	Roller Holder; Pressure	4	21,23	
002-11405-007	Center Shaft; Pressure	1	21,23	
002-11412-003	Shaft Catch; Guide Roller	1	21,23	
002-11421-100	Adj. Plate; Timing Lever	1	39	
002-11717-009	Collar; Elevator	2	7	
002-11719-303	Rack; Elevator	2	7	
002-12110-205	Clamp Magnet A; B4	1	33	
002-12134-104	Sticker Sheet; Drum	1	33	
002-12209-007	Adj. Collar A; Squeegee	1	25,29	
002-12210-005	Adj. Collar B; Squeegee	1	25,29	
002-12213-101	Sector Adjustor; Squeegee	1	25,29	
002-12219-002	Adj. Boss; Ink Blocking	2	25,29	
002-12229-105	Tensioner; Squeegee	1	25,29	
002-12233-005	Spring; Tensioner; Squeegee	1	25,29	
002-12234-001	Spring; Adj. Plate (Front)	2	25,29	
002-12238-104	Axis; Drive Shaft; Squeegee	1	25,29	
002-12240-001	Shaft Catch; Drive; Squeegee	1	25,29	
002-12303-305	Bracket; Inking Motor	1	26,30	
002-12304-107	Piston Inking Pump	1	26,30	
002-12307-203	Linking Disc; Inking Pump	1	26,30	
002-12308-005	Linking Plate; Inking Pump	1	26,30	
002-12309-001	Collar; Inking Pump	2	26.3	
002-12310-107	Collar Holder; Inking Pump	2	26,30	
002-12407-003	Boss A; Drum Lever	2	25,29	
002-12409-103	Support Shaft; Support Roller	2	25,29	
002-12410-004	Adj. Plate; Support Roller	1	25,29	
002-12418-102	Spacer; Drum Lever	2	25,29	
002-12537-403	Protection Sheet	1	39	

Part No.	Part Name	Q'ty	Page	Unit Value
002-13352-202	Spring; Separator	1	41,43	
002-14517-000	Pulley; Duct	1	69,71	
002-17016-002	Cover Catch A; Front	1	81	
002-17017-203	Cover Catch B; Front	1	3	
005-24114-003	Shaft Gear; Original Holder	1	81	
006-11216-106	Bearing House A; Main Shaft	1	13,17	
006-11224-109	Slide Plate (Front)	1	13,17	
006-11301-502	Timing Roller	1	21	
006-11303-009	Gear; Guide Roller	1	21,23	
006-11304-005	Guide Shaft	1	21,23	
006-11305-109	One-Way Spring	1	21,23	
006-11306-008	Gear A; Guide Roller	1	21,23	
006-11307-004	Gear B; Timing Roller	1	21,23	
006-11308-205	Timing Lever	1	39	
006-11311-206	Spring; Timing Lever; R3	1	39	
006-11312-008	Support Collar; R3	2	21	
006-11332-009	Core; Pickup Roller	2	7	
006-91440-001	Unit/Adj. Plate; Timing Lever		39	
007-13121-100	Spring; Release Lever	1	41,43	
007-13124-109	Base Block; Paper Guide; Rcv.	3	47	
007-14113-100	Spring; Vertical Transport	3	69,71	
007-17121-104	Master Removal Hook	2	69,71	
009-35214-017	Pulley PM (16); Exit Roller	1	39	
011-11113-315	Bottom Cover; CE	1	3	
011-11208-103	Base Shaft Plate; Slide Plate	1	13,17	
011-11220-006	Shaft Base Block; Slide Plate	1	13,17	
011-11227-000	Reinforce Plate; Slide Plate	1	13,17	
011-11230-001	Shaft; Slide Plate	1	13,17	
011-11231-008	Shaft Block; Slide Plate	1	13,17	
011-11232-004	Gear; Slide Plate	1	13,17	
011-11234-201	Main Bracket; Face Plate	2	14,18	
011-11240-309	Cam; Timing Roller	1	13,17	
011-11254-202	Tension Pulley	1	14,18	
011-11280-106	Pressure Hook	1	13,17	
011-11289-006	Bracket; Hook Lever Spring	1	13	
011-11296-002	Spring; Sector Gear	1	13,17	
011-11301-103	Guide Roller	1	21	
011-11403-305	Pressure Roller Support	1	21	
011-11404-301	De-electricity Brush; B4	2	21	
011-11409-206	Guide Cover; Pressure; B4	1	21	
011-11502-109	Shaft A; P. -F. -T.	1	9	
011-11503-008	Shaft B; P. -F. -T.	1	9	
011-11509-200	Side Guide R; P. -F. -T.	1	9,11	
011-11510-209	Side Guide L; P. -F. -T.	1	9,11	
011-11513-003	Collar; Slide Rack; P. -F. -T	2	9,11	

Part No.	Part Name	Q'ty	Page	Unit Value
011-11514-000	Gear; Slide Rack; P. -F. -T.	1	9,11	
011-11516-002	L. O. Sheet	1	9,11	
011-11522-002	Paper Guide Roller	2	7	
011-11523-106	Adj. Nut; P. -F. -T.	1	9	
011-11524-005	Adj. Dial	1	9	
011-11529-309	Feed Board Cover	1	9	
011-11713-002	L Plate; Guide Plate	2	21,23	
011-11810-105	P.-F. Pressure Adj. Lever	1	7	
011-11815-000	Spring: P.-F. Pressure Adj. Lever	1	7	
011-12104-000	Seal Tape	1	33	
011-12105-200	Screen A	1	33	
011-12107-106	Screen B	1	33	
011-12114-005	Shaft; Clamp Plate	1	33,35	
011-12116-202	Drum Cover R	1	33,35	
011-12120-200	Clamp Plate Base	1	33	
011-12124-108	Compensator	1	33,35	
011-12129-100	Clamp Sub-Plate	1	33	
011-12130-000	Clamp Magnet B	1	33,35	
011-12131-007	Hanger Plate	2	33	
011-12132-801	Sheet; Clamp Plate	1	33	
011-12134-006	Sheet; Drum; B4	2	33	
011-12136-009	Spring; Screen	2	33	
011-12139-008	Drum Seal	2	33,35	
011-12140-006	Ink Blocking Sheet; B4	1	33	
011-12141-100	Screw; Spring Hanger	2	33	
011-12142-106	Ink Blocking Sheet; A4	1	33	
011-12147-205	Coil Spring; Inking Pump; RC	1	26,30	
011-12151-008	Valve; Inking Pump	2	26,30	
011-12153-000	Ink Distributor II	1	26,30	
011-12154-104	Plate II; Angular Magnet	1	33,35	
011-12155-208	Screw; Angular Magnet	1	33,35	
011-12201-200	Inking Pump Body	1	30	
011-12205-000	Pulley; Squeegee Roller	1	25,29	
011-12206-406	Ass'y; Shaft Joint	1	25,29	
011-12208-107	Bottle Guide (Over)	1	26,30	
011-12211-302	Side Frame; Squeegee	1	25,29	
011-12213-100	Drum Cover F (Upper)	1	25,29	
011-12218-102	Boss; Bottle Set SW	1	30	
011-12220-204	Drum Cover F (Lower)	1	29	
011-12221-006	Fulcrum; Tensioner; Squeegee	1	25,29	
011-12222-401	Bracket R; Drum Cover F	1	25,29	
011-12223-408	Bracket L; Drum Cover F	1	25,29	
011-12224-005	Drum Cover F (Lower)	1	25	
011-12241-007	Shaft Support II; Squeegee	1	25,29	
011-12306-117	Rail; Drum	2	37	

Part No.	Part Name	Q'ty	Page	Unit Value
011-12311-005	Drum Catch (L)	1	37	
011-12402-108	Spring; Clamp Solenoid	1	39	
011-12405-107	Bracket; Compensator Plate	1	39	
011-12410-003	Plunger Pin; Clamp Solenoid	1	39	
011-12411-000	Gear; Clamp Motor	1	39	
011-12412-006	Spacer; Compensator Plate	2	39	
011-13122-109	Bracket; Magnet Catch; P. -Rcv.-T.	1	3	
011-13204-008	Pulley; Suction Motor	1	45	
011-13206-205	Suction Fan Cover	1	45	
011-13220-003	Transfer Belt	3	45	
011-13301-208	Lever; Separator	1	41,43	
011-13304-207	Shaft; Separator; CE	1	41	
011-13306-005	Collar A; Separator	2	41,43	
011-13307-206	Adj. Stopper; Separator	1	41,43	
011-13310-002	Hook Plate	2	41,43	
011-13311-106	Release Lever	1	41,43	
011-14115-009	Linking Plate; M. -Rmv. Hook	1	69,71	
011-14120-304	Front Cover; M. -Rmv.; CE	1	3	
011-14121-106	Pulley B; M. -Rmv.	1	69,71	
011-14168-005	Master Removal Hook (Left); B4	1	69	
011-14169-001	Master Removal Hook (Right); B4	1	69	
011-14408-006	Bracket; Disposal Box SW	1	69,71	
011-14421-207	Guide Cam; Disposal Box	2	73	
011-14422-203	Guide Spring; Disposal Box	1	73	
011-14427-000	Lock Shaft; Disposal Box	1	73	
011-14428-007	Lock Spring (Right)	1	73	
011-14429-003	Lock Spring (Left)	1	73	
011-15001-007	Support Shaft	2	59,63	
011-15004-006	Fulcrum; TPH	2	61,65	
011-15010-014	Shaft; Open/Close Hook	1	61	
011-15013-005	Open/Close Hook	1	61,65	
011-15018-007	Pulley; Write Pulse Motor	1	39	
011-15034-002	Bracket; De-electricity Brush; T-TPH	1	61	
011-15035-009	Protection Sheet A; TPH	1	61	
011-15037-109	Bracket; Loading Pulse Motor	1	39	
011-15041-106	De-electricity Brush	1	59,61	
011-15047-104	Cutter Cover A	1	67	
011-15048-003	Set Sheet A	2	67	
011-15049-000	Set Sheet B	2	67	
011-15051-004	De-electricity Bar;M.-M.	2	61	
011-15055-000	Spring (Left); M. -M.	1	61	
011-15056-006	Spring (Right); M. -M.	1	61	
011-15098-000	Hook Spring	2	61,65	
011-15110-000	Pulley; Loading Roller (Lower)	1	59,63	
011-15117-005	Cam; Thermal Pressure Motor	1	61,65	

Part No.	Part Name	Q'ty	Page	Unit Value
011-15146-102	Bracket; Write Pulse Motor	1	39	
011-15176-206	Cutter Guide IV	1	67	
011-15704-105	Bracket; TPH	1	61	
011-15708-208	Switch Cam	1	61,65	
011-15710-105	Bracket; Micro-SW	1	61	
011-15716-103	Pressure Assist Plate	2	61	
011-15718-106	Spring; TPH Pressure	2	61	
011-15733-008	De-electricity Brush; K-TPH	1	61	
011-15751-103	Bracket; Pressure Assist Plate; T-TPH; CE	2	61	
011-17102-005	Magnet Catch Plate; Front	1	81	
011-17206-005	Bracket E; Keyboard	1	3	
011-17209-012	Set Plate; Front Right Cover	1	3	
011-17231-000	Set Plate Upper; Front Right Cover	1	3	
011-41404-101	De-electricity Brush; A4	1	21	
011-60007-008	Rotation SW; A Position	1	81	
011-60020-004	Front Cover Set SW	1	81	
011-60027-106	Photoelectron Disc.	1	13,17	
011-65004-503	Clamp Solenoid	1	39	
011-65022-307	Counter	1	77	
011-70508-005	LCD; DMF5005N	1	85	
011-91320-103	Guide Roller Ass'y		21	
011-91410-315	Pressure Shaft Ass'y; B4		21	
011-91411-109	Pressure Shaft Ass'y; A4		21	
011-91412-008	Pressure Shaft	1	21	
011-91420-019	Pressure Roller Ass'y; B4	1	21	
011-91421-007	Pressure Roller Ass'y; A4	1	21	
011-92106-008	Ass'y; Angular Magnet Plate		33,35	
011-93110-017	Magnet Catch Ass'y; P. -Rcv.-T.		3	
011-95077-106	Write Roller; 40	1	59	
011-95111-010	Cutter Cover A Ass'y		67	
012-17001-206	Back Cover; FB	1	81	
014-11114-100	Bottom Cover; A3; CE	1	3	
014-11301-202	Guide Roller; A3	1	23	
014-11303-108	Timing Roller; A3	1	23	
014-11404-206	Guide Cover; Pressure; A3	1	23	
014-11405-008	De-electricity Brush; A3	1	23	
014-11406-209	Pressure Roller Support; A3; CE	1	23	
014-11410-001	Support Collar; A3	2	23	
014-11529-203	Feed Board Cover	1	11	
014-11533-006	Spring; Slide Rack	1	9,11	
014-12101-002	Drum Body; A3	1	35	
014-12103-102	Drum Body Support (Left); A3	1	35	
014-12114-007	Seal Tape; A3	1	35	
014-12115-003	Clamp Sub-Plate	1	35	
014-12116-301	Ink Blocking Sheet; A3	1	35	

Part No.	Part Name	Q'ty	Page	Unit Value
014-12121-607	Sheet; Clamp Plate; A3	1	35	
014-12201-104	Squeegee Stay; A3	1	25,29	
014-12211-002	Inking Pump Body; A3	1	30	
014-12213-005	Ink Distributor; A3	1	26,30	
014-12216-209	Bottle Guide II Ass'y		26,30	
014-12217-108	Bottle Guide II (Base)	1	26,30	
014-12221-504	Squeegee Roller; A3	1	25,29	
014-12226-000	Doctor Roller II; A3	1	25,29	
014-12227-103	Reverse Rotation Stopper AII	1	25,29	
014-12251-004	Adj. Shaft; Squeegee; A3	1	25,29	
014-12252-000	Drive Shaft; Squeegee; A3	1	25,29	
014-12295-001	Lever; Bottle Stopper	1	25,29	
014-12297-004	Spring; Stopper Lever	1	25,29	
014-12301-109	Rail; Drum; A3	2	37	
014-12310-108	Rail Bracket; Drum	1	37	
014-12311-007	Shaft; Lock	1	37	
014-12322-106	Lock Hook; Drum Lock	1	37	
014-12324-109	Bracket; Drum Lock	1	37	
014-12326-004	Spring; Lock	1	37	
014-12401-103	Base Plate; Clamp Solenoid	1	39	
014-12402-401	Bracket; Clamp Solenoid	1	39	
014-13310-004	Nozzle (Lower); Separation	1	43	
014-13311-108	Nozzle (Upper); Separation	1	43	
014-13312-007	Bracket; Separation Fan	1	43	
014-14119-405	Front Cover; M.-Rmv.; A3; CE	1	3	
014-14465-001	Lock Shaft; Disposal Box; A3	1	73	
014-14469-007	Shaft; Disposal Box Cover; A3	1	73	
014-15007-007	Load Roller	1	65	
014-15008-003	Shaft; Open/Close Hook; A3	1	65	
014-15011-004	De-electricity Bar; M. -M.; A3	2	65	
014-15013-007	Sheet;Light Absorber;M.-M.	1	61,65	
014-15018-009	Catch Roller (Upper); A3	1	65	
014-15020-208	Bracket; Pressure Assist Plate; CE	2	65	
014-15021-107	Fulcrum III; M. -M.; CE	2	61,65	
014-15022-200	Pressure Assist Plate	2	65	
014-15028-004	Reinforce Shaft	1	65	
014-15102-000	Load Roller (Lower); M.-M.	1	63	
014-15116-205	Set Sheet E	2	67	
014-15144-209	Spring Hanger L; Master Guide Plate; CE	1	59,63	
014-15145-205	Spring Hanger R; Master Guide Plate; CE	1	59,63	
014-15146-007	Spring; Master Guide Plate	2	59,63	
014-15155-006	Mount; Loading Pulse Motor	1	39	
014-15182-003	Fixing Plate; Pulley G	1	63	
014-15191-100	Guide Plate; Load; A3	1	63	
014-15214-002	Set Plate; Cover	1	63	

Part No.	Part Name	Q'ty	Page	Unit Value
014-17101-108	Back Cover; A3	1	81	
014-91320-008	Guide Roller Ass'y; A3		23	
014-91410-309	Pressure Shaft Ass'y; A3; CE		23	
014-91412-000	Pressure Shaft; A3	1	23	
014-91420-002	Pressure Roller Ass'y; A3	1	23	
014-92351-004	Unit/Drum Lock		37	
014-95076-209	Write Roller; A3	1	63	
015-35223-102	Slide Base; P. -Rcv. -T.	3	47	
015-35225-300	Plate Spring; P. -Rcv. -T.	3	47	
015-35226-012	Slide Plate; P. -Rcv. -T.	3	47	
015-35244-312	Flap Adj. Plate; P. -Rcv. -T.	4	47	
015-35246-013	Adj. Lever; P. -Rcv. -T.	4	47	
015-65041-009	Master Removal Fan	2	59,63	
017-11201-200	Bracket A; Sensor	1	13,17	
017-11202-001	Bracket B; Sensor	2	13	
017-11208-000	Base Shaft Plate; Pressure	1	14,18	
017-11209-405	Face Plate; Main Shaft	1	13,17	
017-11214-000	Pressure Link; Top	1	13,17	
017-11216-002	Link Boss A	1	13,17	
017-11217-009	Link Boss B	1	13,17	
017-11223-009	Linking Plate; Drive Base	1	13,17	
017-11224-005	Link Spacer	1	13,17	
017-11226-008	Spring B; Pressure Link	1	13	
017-11229-007	Bracket; Pressure Control Motor	1	39	
017-11234-108	Spring; Linking Plate	1	13,17	
017-11237-000	Cam; Pressure Roller; B4	1	13	
017-11238-006	Cam; Pressure Roller; B4	1	13	
017-11240-108	Print Positioning Motor	1	39	
017-11301-107	Shaft; Timing Roller	1	21	
017-11302-103	Bracket; Timing Roller	1	21	
017-11401-004	Guide Cover; Pressure; A4	1	21	
017-11512-205	Slide Rack; P. -F. -T.; CE	1	9	
017-11513-406	Actuater Plate; P. -F. -T.; CE	1	9	
017-11516-103	Size Gear; P. -F. -T.	1	9,11	
017-11518-505	Bracket; Size VR; P. -F. -T.; CE	1	9	
017-11519-102	Lead SW Cover; P. -F. -T.; CE	1	9,11	
017-11602-301	Link Plate; Elevator	1	7	
017-11640-009	Bracket; Elevator Spring	1	7	
017-11641-005	Spring; Elevator	2	7	
017-11648-000	Bracket; Lower Limit Sensor	1	7	
017-11649-006	Gear; Elevator	1	7	
017-11805-008	Bracket; P.-F. Pressure Adj. Lever	1	7	
017-11808-007	Hook; P.-F. Pressure Adj.	1	7	
017-11811-300	Shaft; Pickup Roller	1	7	
017-11812-004	Shaft; Scraper	1	7	

Part No.	Part Name	Q'ty	Page	Unit Value
017-11818-002	Scraper Collar	1	7	
017-11819-009	Spring F; Safety SW	1	7	
017-11820-007	Spring B; Safety SW	1	7	
017-12001-204	Drum Body Support (Right)	1	33	
017-12004-009	Drum Body (E);A4	1	33	
017-12006-001	Drum Body (E);100 US	1	33	
017-12008-004	Drum Body E; OW	1	33	
017-12011-005	Drum Body Support (Left); OW	1	33	
017-12014-004	Ink Blocking Sheet; B4	1	33	
017-12101-900	Squeegee Stay; OW	1	25.29	
017-12105-204	Side Frame; Squeegee; OW	1	25,29	
017-12111-506	Squeegee Roller; OW	1	25,29	
017-12114-203	Doctor Roller II; OW	1	25,29	
017-12115-005	Reverse Rotation Stopper B	1	25,29	
017-12121-005	Drive Shaft; Squeegee; OW	1	25,29	
017-12122-001	Shaft Support; Squeegee	1	25,29	
017-12123-008	Adj. Shaft; Squeegee; OW	1	25,29	
017-12124-403	Ass'y; Shaft Joint	1	25,29	
017-12201-700	Frame; Drum	1	25,29	
017-12203-109	Bracket B; Connector; Drum	1	37	
017-12205-101	Position A Plate	1	33,35	
017-12211-004	Bracket; Stopper Lever	1	29	
017-12213-007	Inner Cover; Drum	1	25,29	
017-12215-107	PCB Cover; Drum	1	26,30	
017-12228-004	Drum Lever	1	25,29	
017-12409-009	Bracket; Angular Sensors	1	39	
017-12604-103	Lever; Drum Holder	1	37	
017-12605-100	Lever Base; Drum Holder	1	37	
017-12606-009	Shaft; Drum Holder	1	37	
017-12607-005	Spring; Drum Holder	1	37	
017-13201-800	Face Cover W; Suction	1	45	
017-13205-202	Shaft; Jump Wing	2	45	
017-13208-007	Wing Plate; Suction	2	45	
017-13210-001	Spring; Belt Roller; Suction	1	45	
017-13211-008	Shaft Plate; Belt Roller; Suction	1	45	
017-13216-000	Belt Roller; Suction	1	45	
017-13219-300	Suction Cover W (Upper)	1	45	
017-13220-201	Cover; Paper Rcv. Sensor 1	1	45	
017-13221-305	Cover; Paper Rcv. Sensor 2	1	45	
017-13222-204	Shaft; Wing Cam; Suction	1	45	
017-13223-006	Cam Gear; Suction	1	45	
017-13224-207	Wing Cam (F); Suction	1	45	
017-13225-106	Roller Cam; Suction	1	45	
017-13226-102	Wing Cam (R); Suction	1	45	
017-13228-105	SW Cam; Suction	1	45	

Part No.	Part Name	Q'ty	Page	Unit Value
017-13229-209	Adj. SW Plate; Suction	1	45	
017-13232-102	Bracket; Suction Fan	1	45	
017-13233-001	Seal	1	45	
017-13235-004	Idler Shaft; Suction	1	45	
017-13236-205	Belt Idler; Suction	1	45	
017-13237-104	Fulcrum Plate II; Gear Pulley; Suction	1	45	
017-13239-000	Spring; Jump Wing (F)	1	45	
017-13240-008	Stay; Suction	1	45	
017-13241-004	Spring; Jump Wing (R)	1	45	
017-13242-000	Shaft Plate; Wing Gear	1	45	
017-13246-006	Wing Gear; Suction	1	45	
017-13247-002	Drive Shaft; Suction	1	45	
017-13248-009	Pulley; Wing Motor	1	45	
017-13252-006	Side Flap (F); Suction	1	45	
017-13255-005	Side Flap (R); Suction	1	45	
017-13257-008	Spring; Side Flap; Suction	2	45	
017-13258-004	De-electricity Brush; Suction	1	45	
017-13301-007	Release Lever; Separator	1	41,43	
017-14106-208	Guide Plate; M. -Rmv.; B4; CE	1	69	
017-14107-301	Vertical Transport Roller (Down)	1	69	
017-14111-309	Sensor Bracket; M. -Rmv.	1	69,71	
017-14114-006	Set Collar; M. -Rmv.	2	69,71	
017-14115-002	Screw; M. -Rmv.	2	69,71	
017-14116-009	Fulcrum; Master Guide; M. -Rmv.	2	69,71	
017-14120-200	Master Guide; M. -Rmv.	1	69	
017-14122-106	Bracket; M. -Rmv. Solenoid	1	69,71	
017-14127-108	Guide Plate; M. -Rmv.; A4	1	69	
017-14128-309	Vertical Transport Roller (Down);A4	1	69	
017-14138-207	Vertical Transport Roller (UP); B4	1	69	
017-14141-208	Vertical Transport Roller (UP); A4	1	69	
017-14152-307	Disposal Box Cover	1	73	
017-14153-109	Disposal Box Cover B	1	73	
017-14154-008	Guide Plate; Disposal Box; B4	1	73	
017-14155-004	Lever Frame; Disposal Box	1	73	
017-14159-107	H. -Lever (F); Disposal Box	1	73	
017-14161-101	H. -Lever (R); Disposal Box	1	73	
017-14162-000	Guide Shaft; Disposal Box	1	73	
017-14163-007	Disposal Shaft	1	73	
017-14165-107	Shaft; Compression Plate	1	73	
017-14166-103	Compression Plate; Disposal Box	1	73	
017-14167-002	Guide Spring B; Disposal Box	1	73	
017-14171-000	Guide Plate; Disposal Box; A4	1	73	
017-14172-200	Guide Plate; M. -Rmv.	1	69	
017-15006-100	Bracket; De-electricity Brush	1	61	
017-15007-106	Catch Roller (Upper)	1	61	

Part No.	Part Name	Q'ty	Page	Unit Value
017-15008-005	Shaft; Load Roller	1	61	
017-15009-001	Load Roller	3	61,65	
017-15015-001	Open/Close Hook II	1	61	
017-15101-005	Load Roller (Lower); M. -M.	1	59	
017-15103-105	Guide Plate; Load	1	59	
017-15107-003	Metal Fixing Plate	1	59	
017-15108-000	Fixing Plate; Bearing	1	59	
017-15113-305	Bracket; Wire Harness	1	3	
017-15124-005	Stay; Set Guide Plate	2	59	
017-15234-005	Set Plate; Master Holder Cover	1	45,59	
017-15303-406	Cutter Cover	1	67	
017-15306-006	Bracket; Master Positioning Sensor	1	67	
017-15310-003	Master Guide Stopper Plate	1	67	
017-15311-107	Master Guide Stopper Cushion	1	67	
017-16021-005	Rack Cover; ADF Cover	1	81	
017-16121-000	Bracket; Upper Cover Set SW	1	3	
017-16122-006	Shaft A; Upper Cover Set SW	1	3	
017-16123-002	Shaft B; Upper Cover Set SW	1	3	
017-16124-106	Spring; Upper Cover Set SW	1	3	
017-16530-007	Pulley A; ADF	2	51	
017-16538-008	Gear; ADF	1	51	
017-16542-005	Roller (Lower); ADF	3	49	
017-16546-000	De-electricity Brush B; ADF	1	51	
017-16555-000	Roller (Spring); ADF	3	49	
017-16562-006	Spring; Read Roller	2	51	
017-16588-005	Betl; 44	1	51	
017-16595-001	Mount; Read Pulse Motor	1	51	
017-17051-005	Bracket B; Keyboard	1	75	
017-17105-008	Slide Rack; Original Holder	2	81	
017-17217-400	Bottom Plate (Left); CE	1	3	
017-17220-109	Carrying Grasp	4	3	
017-17221-105	Mount; Connector	1	3	
017-17222-101	Blind Plate C; Connector	2	3	
017-17223-108	Blind Plate D; Connector	1	3	
017-17232-204	Side Cover; Power Supply	1	77	
017-21108-208	Bracket; Wire Harness	1	37	
017-21507-200	Slide Rack F; P. -F. -T.; CE	1	9	
017-21716-003	Guide Plate (Upper)	1	21	
017-22107-108	Light Absorber Strip; B4	1	33	
017-22108-007	Clamp Plate Ass'y	1	33	
017-22206-106	Bracket; Bottle SW	1	30	
017-22301-001	Bracket II; Drum Control PCB2	1	25,29	
017-23201-000	Bracket FII; Suction	1	3	
017-23202-104	Bracket RII; Suction	1	3	
017-23206-002	Jump Wing (F); Suction	1	45	

Part No.	Part Name	Q'ty	Page	Unit Value
017-23207-009	Jump Wing (R); Suction	1	45	
017-23311-108	Nozzle; Separation	2	41	
017-23312-104	Bracket II; Separation Fan	1	41	
017-23313-208	Cover II; Separation Fan	1	41	
017-23314-000	Bracket II; P. -Rcv. Sensor II (Receive)	1	41,43	
017-23405-307	Bracket D; Magnet Catch; P. -Rcv.-T.; CE	1	4	
017-23601-203	Bracket; Suction Drive	1	39	
017-23604-300	Shaft; Clutch	1	39	
017-23605-500	Clutch Cover	1	39	
017-24106-001	Stay A; M. -Rmv.	1	69	
017-24108-101	Bracket; Disposal Box Master Sensor	1	69,71	
017-24109-108	Actuator; M. -Rmv. Hook Sensor	1	69,71	
017-24110-009	Bracket; M. -Rmv. Hook Sensor	1	69,71	
017-24115-000	Shaft II; M. -Rmv. Hook; B4	1	69	
017-24116-007	Shaft II; M. -Rmv. Hook; A4	1	69	
017-24138-000	Guide Boss; M. -Rmv.	2	69,71	
017-24139-104	Knob; M. -Rmv.	2	69,71	
017-24140-005	Knob Shaft; M. -Rmv.	2	69,71	
017-24141-001	Lock Plate	2	69,71	
017-24146-100	Bracket; Aero Guide Sheet; CE	1	59	
017-24147-000	Aero Guide Sheet	1	59	
017-24148-200	Disposal Box Guide; CE	1	55	
017-24151-007	Guide Collar; Disposal Box Guide	2	55	
017-24152-100	Bracket F; Master Removal Fan	1	59,63	
017-24153-107	Bracket R; Master Removal Fan	1	59,63	
017-24154-103	Sensor Cover; Disposal Box Guide; CE	1	55	
017-25016-103	Stocker	1	59	
017-25017-002	Plate A; Stocker	1	59	
017-25113-001	Bracket; Micro-SW; M. -M.	1	59	
017-25305-202	Cutter Center Guide Sheet II	1	67	
017-25306-101	Cutter Guide Sheet (B4)	2	67	
017-25307-108	Cutter Guide Sheet (A4)	2	67	
017-31503-008	Bracket; P. -F. -T.; CE	1	9	
017-31517-106	Feed Board II; CE	1	9	
017-31530-102	Feed Board II;US	1	9	
017-31801-106	Cover; Pickup Roller; CE	1	7	
017-33250-301	Cover Plate W; Suction; CE	1	45	
017-34104-007	Stay B; M. -Rmv.; CE	1	69	
017-34105-003	Base Plate; M. -Rmv.; B4; CE	1	69	
017-34124-105	Upper Stay; M. -Rmv.; CE	1	69	
017-34126-000	Base Plate; M. -Rmv.; A4; CE	1	69	
017-34151-102	Disposal Box; CE	1	73	
017-35010-006	Cover A; M. -M.; CE	1	61	
017-41501-100	Paper Feed Tray; CE	1	9	
017-44101-103	Right-Side Frame; M. -Rmv.; CE	1	69,71	

Part No.	Part Name	Q'ty	Page	Unit Value
017-44104-102	Left-Side Frame; M. -Rmv.; CE	1	69,71	
017-44111-001	Set Plate F; M. -Rmv.; CE	1	69,71	
017-44112-008	Set Plate R; M. -Rmv.; CE	1	69,71	
017-44113-101	Fixing Plate F; M. -Rmv.; CE	1	69,71	
017-44114-000	Fixing Plate R; M. -Rmv.; CE	1	69,71	
017-44131-002	Upper Holder B; V.-Transport Roller; CE	1	69	
017-44135-105	Upper Holder A; V.-Transport Roller; CE	1	69	
017-51000-207	ADF PCB	1	51	
017-55017-007	Wire Harness; Motor Con.-System	1	79	
017-55028-203	Wire Harness; Drum (R)	1	26,30	
017-55029-102	Wire Harness; Drum (L)	1	26,30	
017-55031-301	Wire Harness; Elevator Motor	1	79	
017-55039-205	Wire Harness; Guide Plate; 49	1	21,23	
017-55046-201	Wire Harness; EXE-I/F	1	89	
017-55049-006	Wire Harness; RA-RC Sorter Inner	1	89	
017-55054-000	Inner COM Wire Harness; SF	1	89	
017-55070-102	Wire Harness; TPH Power B4; CE	1	61,77	
017-60001-208	Master Removal Sensor	1	69,71	
017-60003-200	Paper Sensor	1	21,23	
017-60007-001	Upper Limit Sensor	1	7	
017-60010-002	Switch A	1	69,71	
017-60011-009	Clamp Safety Switch	1	39	
017-60016-000	Angular Sensor	1	39	
017-60020-407	Drum PCB	1	26,30	
017-60025-000	Micro-SW Ass'y 3	1	7	
017-60031-000	Encoder Sensor	1	13,17	
017-60037-105	Master Sensor II	1	69,71	
017-65000-005	Thermal Pressure Motor III Ass'y	1	61	
017-65003-004	M. -Rmv. Vertical Transport Motor	1	69,71	
017-65004-205	Clamp Motor	1	39	
017-65005-406	Pressure Control Motor	1	39	
017-65006-003	Wing Motor; Suction	1	45	
017-65011-104	Loading Fan; Stocker	1	59,63	
017-65015-207	Loading Pulse Motor	1	39	
017-65016-700	Inking Motor	1	26,30	
017-65019-008	Separation Fan	2	41	
017-91206-100	Pressure Det. Ass'y		14,17	
017-91230-302	Pressure Link Ass'y		13	
017-91240-103	Unit/Print Positioning Motor		39	
017-91266-102	Pressure Control Motor Ass'y	1	39	
017-91310-209	Timing Roller Ass'y		21	
017-91510-216	Unit/Paper-Feed Tray II; CE		9	
017-91512-219	Unit/Paper-Feed Tray II; US		9	
017-91610-008	Shaft; Elevator	1	7	
017-91620-003	Unit/Elevator Motor	1	7	

Part No.	Part Name	Q'ty	Page	Unit Value
017-91805-100	Feed Tray Safety SW Ass'y II; CE		7	
017-91813-405	Scraper Ass'y; CE		7	
017-92117-003	Unit/Drum Screen; US		33	
017-92118-000	Unit/Drum Screen; A4		33	
017-92119-006	Unit/Drum Screen; B4		33	
017-92121-000	Drum Body Ass'y; US	1	33	
017-92122-007	Drum Body Ass'y; A4	1	33	
017-92123-100	Drum Body Ass'y; B4	1	33	
017-92220-009	Unit/Ink Pump		30	
017-92231-000	Unit/Squeegee III; OW		25,29	
017-92300-002	Unit/Drum Frame		25,29	
017-92400-201	Unit/Clamp		39	
017-93110-100	Magnet Catch Ass'y D; P. -Rcv.-T.; CE		4	
017-93205-208	Suction Unit W; CE		45	
017-93220-002	Angular Sensor Ass'y		39	
017-93301-002	Separation Fan Ass'y II		41	
017-93310-109	Separator Ass'y; CE		41	
017-93602-100	Unit/Clutch		39	
017-94105-100	Unit/Master Removal II; CE		69	
017-94106-106	Unit/Master Removal II; A4		69	
017-94115-202	Holder Ass'y II; V.-Transport Roller; CE		69	
017-94116-101	Holder Ass'y II; V.-Transport Roller; A4		69	
017-94130-317	Unit/Master Disposal Box; B4; CE		73	
017-94135-319	Unit/Master Disposal Box; A4; CE		73	
017-95011-001	Master Loading Unit SW Ass'y		59	
017-95050-007	Unit/Loading Pulse Motor		39	
017-95096-007	Stocker Ass'y II		59	
017-95302-200	Unit/Cutter II; B4; CE		67	
017-95303-100	Unit/Cutter II; A4; CE		67	
017-97240-008	Mount Conncector Ass'y		3	
017-97300-108	Wire Harness; JS III; CE	1	89	
018-16002-202	Scanner Holder (F)	1	57	
018-16003-306	Scanner Holder (R)	1	57	
018-16004-000	Adj. Pin; Scanner Holder	2	57	
018-16005-007	Guide Wheel; Carriage	2	57	
018-16011-007	Boss; Carriage	2	57	
018-16012-003	Arm Spring; Carriage	1	57	
018-16013-506	Carriage; Image Scanner; CE	1	57	
018-16017-005	Drive Pulley Shaft; FB-Scanner	1	57	
018-16018-001	Drive Pulley Holder; FB-Scanner	1	57	
018-16019-008	Belt Stand Plate; FB-Scanner	1	57	
018-16020-006	Belt Holder Plate; FB-Scanner	1	57	
018-16022-009	Tension Shaft; FB-Scanner	1	57	
018-16023-005	Tension Holder; FB-Scanner	1	57	
018-16024-001	Tension Plate; FB-Scanner	1	57	

Part No.	Part Name	Q'ty	Page	Unit Value
018-16027-000	Tension Spring; FB-Scanner	1	57	
018-16028-007	Bracket; R Pulse Motor	1	55	
018-16030-109	Wire Stand; FB-Image; CE	1	57	
018-16031-105	Bracket; FB-Pos. Sensor	2	55	
018-16032-101	Actuator Stage Cover Sensor	1	55	
018-16035-003	Actuator Spring; Stage Cover Sensor	1	55	
018-16036-204	Slide Shaft; FB-Scanner	1	57	
018-16037-006	Adj. Plate; FB-Slide Shaft	2	57	
018-16038-100	Glass Holder (L)	1	55	
018-16039-106	Glass Holder (R)	1	55	
018-16040-104	Stage Glass	1	55	
018-16042-107	Original Stopper	1	55	
018-16044-002	Ground Plate; FB-Scanner	1	57	
018-16045-106	Core Holder	1	57	
018-16047-206	Bracket; Stage Cover Sensor	1	55	
018-16064-003	Blind Plate; FB-Back Frame	1	55	
018-16066-006	Shading Plate (L)	1	55	
018-16067-207	Shading Plate (R)	1	55	
018-16071-000	Protection Tape; Stage Glass	2	55	
018-16073-002	Shock-Absorbent Rubber	1	55	
018-16201-000	Fulcrum Shaft; FB	1	3	
018-16202-007	Stepped Screw; M6 x 10	2	3	
018-16217-101	Hook Shaft; FB	1	55	
018-16218-000	Shaft; Hook Base	2	55	
018-16220-200	Hook Base (F); FB-Hook Shaft	1	55	
018-16222-105	Hook Base (R); FB-Hook Shaft	1	55	
018-16223-004	Spring; Hook Shaft	1	55	
018-16224-000	Open Lever; Hook Shaft	1	55	
018-16225-201	Bracket (F); Hook Shaft	1	55	
018-16229-100	Hook Plate (F); FB; CE	1	3	
018-16239-105	Bracket B; Interlock Switch FB	1	77	
018-16241-100	Bracket; Damper Stopper; CE	1	3	
018-16242-009	Spring; Damper Stopper	1	3	
018-16243-102	Cap; Damper Stopper	1	3	
018-16254-007	Plate Spring; Interlock Switch FB	1	77	
018-16255-208	Balance Weight; FB	7	57	
018-16301-404	Scanner Cover (F); FB	1	81	
018-16302-508	Scanner Cover (R); FB	1	81	
018-16303-504	Scanner Cover (Left); FB	1	81	
018-16304-306	Scanner Cover (Right); FB	1	81	
018-16305-604	Cover B; FB-ADF	1	49	
018-16306-104	ADF Cover (F); FB	1	81	
018-16307-100	ADF Cover (R); FB	1	81	
018-16308-107	ADF Cover (Right); FB	1	81	
018-16309-200	Original Tray; FB	1	81	

Part No.	Part Name	Q'ty	Page	Unit Value
018-16310-101	Original Side Guide	2	81	
018-16312-007	Shaft; Original Tray	2	81	
018-16401-301	Stage Cover; FB	1	83	
018-16403-100	LCD Cover; Digitizer	1	85	
018-16406-206	PCB Cover; Stage Cover	1	83,85	
018-16411-102	Original Holder Cover (Upper); Stage Cover	1	83	
018-16412-508	Original Holder Cover (Lower); Stage Cover	1	83	
018-16413-008	Cover B; Stage Cover	1	83	
018-16415-809	Balance Weight A; Stage Cover	1	83	
018-16416-104	Balance Weight B; Stage Cover	1	83	
018-16417-100	Balance Weight C; Stage Cover	1	83	
018-16418-000	Cord Cap; Stage Cover	1	83	
018-16420-004	Actuator Plate; Stage Cover	1	83,85	
018-16425-006	Stage Pad (W); Stage Cover	1	83,85	
018-16427-203	Stylus Pen III	1	85	
018-16431-006	LCD Filter; Digitizer	1	85	
018-16435-001	LCD Cover; Digitizer; CE	1	85	
018-16502-108	Glass Plate; Image Scanner	1	49	
018-16503-104	Main Gear; FB-ADF	1	51	
018-16504-003	Stepped Screw; M4 x 13	1	51	
018-16506-006	Stopper Plate; FB-ADF	1	51	
018-16507-100	Tension Plate; FB-ADF	1	51	
018-16508-203	Side Frame L; FB-ADF	1	49	
018-16510-003	Tension Pulley B; FB-ADF	1	51	
018-16513-002	Transfer Roller; FB-ADF	1	51	
018-16514-009	Exit Roller (Upper); FB-ADF	1	51	
018-16516-109	Read Roller	1	51	
018-16518-101	Motor Cover; FB-ADF	1	51	
018-16522-001	Bracket; ADF Motor	1	51	
018-16526-007	Spacer; WHG	1	51	
018-16532-007	Open Lever; FB-ADF	1	51	
018-16533-100	Glass Holder R; Image Scanner	1	49	
018-16534-107	Glass Holder L; Image Scanner	1	49	
018-16535-103	Bracket; Original Out Sensor	1	51	
018-16536-002	Bracket; Original Det. Sensor	1	51	
018-16537-009	Bracket; Original Regist. Sensor	1	51	
018-16541-006	Collar; Stripper Roller	1	51	
018-16543-009	Tension Pulley A; FB-ADF	1	51	
018-16544-005	Pulley; Read Roller	1	51	
018-16545-001	Exit Pulley; FB-ADF	1	51	
018-16546-008	Spacer; Main Gear; FB-ADF	1	51	
018-16547-004	Metal; 8P	2	51	
018-16548-000	Metal; 8M	1	49,51	
018-16549-007	Housing; Exit Roller	2	51	
018-16550-102	Housing; Read Roller	2	51	

Part No.	Part Name	Q'ty	Page	Unit Value
018-16551-001	Metal; 6	2	51	
018-16552-008	Spacer; Exit Roller	1	51	
018-16554-000	Metal; Exit Roller	1	49	
018-16555-007	De-electricity Brush A; FB-ADF	2	51	
018-16558-006	Spring R; FB-ADF	1	51	
018-16559-002	Spring L; FB-ADF	1	51	
018-16561-104	ADF Motor; FB	1	51	
018-16563-000	Read Pulse Motor; FB-ADF	1	51	
018-16564-006	Original Det. Sensor	1	51	
018-16565-002	Original Regist. Sensor	1	51	
018-16566-009	Original Out Sensor	1	51	
018-16567-005	Original IN Sensor (Send)	1	51	
018-16568-001	Original IN Sensor (Receive); FB-ADF	1	49	
018-16569-008	Wire Harness; Original IN Sensor	1	49	
018-16570-006	ADF SW; FB	1	49	
018-16571-002	Wire Harness; FB-ADF SW	1	49	
018-16572-009	Belt B; 56	1	51	
018-16575-008	Collar; Pickup Roller; FB-ADF	1	51	
018-16577-000	Bushing; FB-ADF	3	51	
018-16578-201	Free Bushing	1	49	
018-16580-001	Spacer; Stripper; FB-ADF	1	49	
018-16581-008	Bushing (1); ADF Motor	1	51	
018-16582-004	Bushing (2); ADF Motor	1	51	
018-16583-000	Bushing (3); ADF Motor	1	51	
018-16585-003	Belt; 118	1	51	
018-16590-104	Roller Spring II; ADF	2	49	
018-16591-003	Guide Plate; FB-ADF	1	51	
018-16592-000	Original Guide Base (R); FB-ADF	1	49	
018-16593-006	Exit Wheel; ADF; FB	2	49	
018-16598-105	Bracket; ADF SW	1	49	
018-16600-002	Actuator; ADF SW	1	49	
018-26201-602	Bottom Plate; FB-Scanner; CE	1	55	
018-26213-007	Upper Rear Frame; FB; CE	1	3	
018-26216-006	Bracket; Back Cover; CE	1	3	
018-27240-008	Shaft; Damper	1	55	
018-31201-009	Pressure Sensor Disc; B4	1	13	
018-31603-000	Guide Plate (Lower)	1	21	
018-31607-005	Bracket; Stripper Unit (Dial)	1	21,23	
018-31609-008	Fixing Block	2	21,23	
018-31614-001	Ground Spring; Roller System	2	21,23	
018-31615-008	Cover R; Stripper	1	3	
018-31621-105	Scraper Cover	1	7	
018-31622-004	Bracket; Feed Tray Safety SW	1	7	
018-32201-002	Inking Pump Body ϕ19	1	26	
018-32202-009	Bracket; Bottle SW	1	26	

Part No.	Part Name	Q'ty	Page	Unit Value
018-32205-008	PCB Guard	1	26	
018-32306-009	Bracket; Stopper Lever	1	25	
018-32311-002	Drum Holder	1	37	
018-33101-001	Back Stop; P. -Rcv. -T.	1	47	
018-33102-105	Bracket: Cushion	1	47	
018-33103-004	Hook Plate	1	47	
018-33104-000	Stopper; P.-Rcv.-T.	1	47	
018-33105-007	Plate; Fence	1	47	
018-33110-000	Frame; P. -Rcv. -T.	1	47	
018-33120-006	Set Plate F; P. -Rcv. -T.	1	3	
018-33121-002	Set Plate R; P. -Rcv. -T.	1	3	
018-33130-109	Receiving Tray Plate	1	45	
018-33136-000	Catch; Suction Unit	1	45	
018-33150-002	Sound-Proof; Receiving Tray Plate	1	45	
018-33151-106	Fence Cusion	1	47	
018-33152-005	Sheet: Suction Unit	2	45	
018-33153-001	Bracket; JS III	1	89	
018-35001-004	Tenshin Roller; B4	1	59	
018-35002-000	Master Guide Plate	1	59	
018-35003-007	Plate; De-electricity Brush	1	59	
018-35004-003	Bracket; De-electricity Brush	1	59	
018-35005-000	Frame A; M. -M.; CE	1	61	
018-35007-002	Copy Guide Plate III (Lower)	1	61	
018-35009-005	Set Guide Plate III; B4	1	59	
018-35011-000	Base A;Nip Roller	1	61	
018-35012-006	Base B;Nip Roller	1	61	
018-35013-002	Nip Roller	1	61	
018-35014-106	Master Roll Holder III; B4; CE	1	59	
018-35018-004	Cover; Master Roll Holder; CE	1	59	
018-35025-000	Guide Holder D; Master Holder	1	59,63	
018-35026-007	Flange F; Master Roll	1	59,63	
018-35027-003	Flange R; Master Roll	1	59,63	
018-35030-004	Master Roll Holder III; B4; CE	1	59	
018-35031-000	Copy Guide Plate III (Lower)	1	61	
018-35032-007	Set Guide Plate III; A4	1	59	
018-36043-002	Cover Plate; Image Flexible Wire; CE	1	57	
018-36060-209	Back Frame; FB-Scanner; CE	1	55	
018-36207-005	Fulcrum Support Plate; FB; CE	1	3	
018-36227-103	Bracket (R); Hook Shaft; CE	1	55	
018-36253-007	Hinge Bracket; FB-Scanner; CE	2	55	
018-37010-000	Mylar Sheet; Panel SW	1	75	
018-37011-007	Sheet; Panel 1	1	75	
018-37012-003	Door; Panel	1	75	
018-37020-006	Sheet; Panel 2	1	75	
018-37101-006	Front Cover	1	81	

Part No.	Part Name	Q'ty	Page	Unit Value
018-37102-002	Front Right Cover	1	81	
018-37103-009	Front Left Cover	1	81	
018-37106-008	Bottom Plate (Front)	1	3	
018-37110-005	Upper Hinge	1	3	
018-37113-004	Bracket D; Keyboard	1	3	
018-37114-000	Bracket C; Keyboard	1	3	
018-37115-007	Bracket A; Keyboard	1	75	
018-37116-003	Reinforce Plate; Panel	1	75	
018-37117-107	Inner Cover A; CE	1	81	
018-37119-100	Bracket; Counter; En	1	77	
018-37120-108	Bracket; Counter; En; Pic.	1	77	
018-37122-003	Lower Hinge; Front	1	81	
018-37125-002	Switch Box; CE	1	81	
018-37126-009	Cover; Wire Harness	1	37	
018-37128-001	Bracket; Left Cover	1	3	
018-37129-105	Cover; Drum Lock; CE	1	37	
018-37130-006	Sound-Proof Sponge;F	1	81	
018-37131-002	Sound-Proof Sponge;R	1	81	
018-37132-009	Main Ground Plate; Panel	1	75	
018-37143-000	Mole; 2950 UI	1	75	
018-37144-007	Mole; 2950 UP	1	75	
018-37145-003	Mole; 2950 EPA	1	75	
018-37146-000	Mole; 2950 EN	1	75	
018-37147-006	Mole; 2950 AW	1	75	
018-37148-002	Mole; 2950 AN	1	75	
018-37149-009	Mole; 2950 C	1	75	
018-37150-007	Mole; 2950 EPB	1	75	
018-37201-108	Mount II; Connector	1	3	
018-37203-003	Plate; Wire Harness; SC Unit	1	87	
018-37205-006	Connecter Cover	1	79	
018-37207-009	Cover; Inlet	1	79	
018-37301-005	Mole; Sound Absorber (Front)	1	81	
018-37303-008	Mole; Stand	1	81	
018-38105-102	Bracket Plate; SC Unit	1	87	
018-38106-001	Switch Plate	1	87	
018-38107-105	Bracket; SC Unit	1	87	
018-38108-004	Ground Plate; SC Unit	4	87	
018-51000-107	Trimming PCB II	1	79	
018-51004-803	Digitizer PCB III	1	85	
018-51010-200	SC-MAIN-PCB	1	87	
018-51013-004	CN-TRS-PCB	1	79	
018-51014-000	Panel Control PCB	1	75	
018-51015-007	Main SW PCB; Panel	1	75	
018-51016-003	SUB-SW-B4	1	75	
018-51017-107	System PCB 2	1	79	

Part No.	Part Name	Q'ty	Page	Unit Value
018-51018-006	Drum Control PCB2	1	25	
018-51019-002	Bottle SW PCB	1	26	
018-51022-402	Image Processing PCB; IPDF	1	79	
018-55001-108	Wire Harness; FB	1	55	
018-55015-001	Wire Harness; Digitizer III ; CE	1	85,89	
018-55016-008	Wire Harness; Image-Digitizer; CE	1	89	
018-55020-102	Wire Harness;Power Supply; SC Unit	1	87	
018-55022-008	Wire Harness; Panel; SC Unit	1	87	
018-55025-007	Inlet Terminal 1	1	79	
018-55029-100	Wire Harness; Bottle SW	1	26	
018-55031-104	Inlet Terminal 2	1	77	
018-55032-208	Inlet Terminal; SC	1	87	
018-60000-004	Original Det. Sensor; FB	1	57	
018-65000-002	R Pulse Motor; FB	1	55	
018-65001-009	Fan; SC Unit	1	87	
018-70018-009	INF ROM (ST); Digitizer	1	85	
018-70019-005	INF ROM (OP1); Digitizer	1	85	
018-70020-003	INF ROM (OP2); Digitizer	1	85	
018-80002-	System ROM; FR	1	79	
018-80008-	FRPU	1	75	
018-80009-	FRPA	1	75	
018-80010-	FRPE	1	75	
018-91700-101	Unit/Guide Plate		21	
018-91701-108	Unit/Stripper		21,23	
018-92130-007	Drum Holder Ass'y		37	
018-92200-005	Unit/Ink Pump		26	
018-93105-057	Unit/Paper Receiving Tray; FR		47	
018-95000-007	Unit/Master Making; CE		61	
018-95020-008	Copy Guide Plate (Lower) Ass'y		61	
018-95021-004	Copy Guide Plate (Lower); A4	1	61	
018-95035-056	TPH Ass'y; T400FR		61	
018-95070-005	Set Guide Plate Ass'y III; B4		59	
018-95071-001	Set Guide Plate Ass'y III; A4		59	
018-96120-103	Unit/Upper Rear Frame; FB; CE		3	
018-96200-115	Unit/Stage Cover		83	
018-96210-005	Stage Cover Hinge Ass'y	2	83	
018-96230-200	Ass'y/Digitizer Stage Cover; FB; CE	1	85	
018-96600-008	Original Tray Ass'y; FB		81	
018-97200-054	Front Cover Ass'y		81	
018-97205-005	CN-TRS-PCB ASS'Y		79	
018-97220-004	Keyboard Bracket D Ass'y		3	
018-97240-005	Mount Conncector Ass'y		3	
018-97310-054	Unit/Operation Panel; 2950		75	
018-97311-050	Unit/Operation Panel; 2950 US		75	
018-97312-057	Unit/Operation Panel; 2950 Pic.		75	

Part No.	Part Name	Q'ty	Page	Unit Value
018-97315-005	Key Board Cover; 2950	1	75	
018-97316-001	Key Board Cover; 2950 US	1	75	
018-97317-008	Key Board Cover; 2950 Pic.	1	75	
018-97318-004	Sub-Panel Ass'y; 2950	1	75	
018-97319-000	Sub-Panel Ass'y; 2950 US	1	75	
018-97320-009	Sub-Panel Ass'y; 2950 Pic.	1	75	
018-97324-004	SC LCD Ass'y		75	
019-11201-000	Idler Pulley	4	13,17	
019-11209-000	Slide Plate (Base)	1	13,17	
019-11213-008	Base Plate; P. -F. Clutch	1	13,17	
019-11214-004	Bracket; Print Positioning Motor	1	39	
019-11220-209	Bracket; P. -F. Clutch; CE	1	13,17	
019-11222-007	Cover; Paper Feed Clutch; CE	1	14,18	
019-11223-003	Spring ; Pressure Link	1	14,18	
019-11224-000	Face Plate; Pressure Shaft	1	13,17	
019-11225-006	Resting Position Plate; Pressure Lever	1	13,17	
019-11226-002	Hook Lever	1	13	
019-11230-000	Spring; Hook Lever	1	13,17	
019-11231-103	Shaft; Hook Lever	1	13	
019-11235-001	P Disc	1	13	
019-11238-000	Range Adj. Plate; P Disc	1	13	
019-11240-102	Pressure Lever	1	14,18	
019-11245-007	Gear; Pressure Adj. Screw	1	13,17	
019-11246-003	Gear II; Pressure Control Motor	1	39	
019-11247-000	Pressure Link II; Bottom	1	13,17	
019-11250-000	Pressure Adj. Screw	1	13,17	
019-11251-007	Spring; Pressure Link	1	13,17	
019-11252-003	Bracket A II; Pressure Control	1	14,17	
019-11253-000	Bracket B II; Pressure Control	1	14,17	
019-11256-009	Ring; Main Shaft	1	13,17	
019-11501-305	Bracket; Ground Finger	2	4	
019-11502-000	Connector Cover	1	9,11	
019-11520-202	Support Plate R; Feed Board; CE	1	9,11	
019-11521-209	Support Plate L; Feed Board; CE	1	9,11	
019-11522-108	Link Plate; Side Guide; P. -F. -T.	2	9,11	
019-11524-100	Slide Sheet; P. -F. -T.	4	9,11	
019-11702-203	Sheet; Guide Plate	1	21,23	
019-11731-009	Stripper Sheet (SHRT); 80	1	21,23	
019-11733-109	Base; Stripper Sheet	1	21,23	
019-11734-202	Cover (STND); Stripper Sheet	1	21,23	
019-11737-104	Shaft; Stripper (Dial)	1	21,23	
019-11738-003	Spring; Stripper (Dial)	1	21,23	
019-11739-000	Adj. Dial;Stripper	2	21,23	
019-11740-202	Spring Stopper; Stripper (Dial)	1	21,23	
019-11741-101	Bracket; Stripper Shaft (Dial)	1	21,23	

Part No.	Part Name	Q'ty	Page	Unit Value
019-11742-108	Housing; Stripper (Dial)	1	21,23	
019-11748-009	Bracket; Stripper Base (Dial)	1	21,23	
019-11749-200	Actuator Plate II; Stack P.-F.SW	1	21,23	
019-11750-100	Worm Gear Box;Stripper (Dial)	1	21,23	
019-11755-005	Bracket II; Stack Paper Feed SW	1	21,23	
019-11756-001	Spring; Stack Paper Feed SW	1	21,23	
019-11760-106	Cam Plate; Stripper (Dial)	1	21,23	
019-11763-008	Collar; Stripper	1	21,23	
019-11801-104	Holder Plate; Scraper; CE	1	7	
019-11803-000	Upper Arm; Scraper	1	7	
019-11804-006	Spring; Scraper	1	7	
019-11806-106	Rubber Roller; Pickup	2	7	
019-11810-103	Pickup Roller Ass'y	2	7	
019-11811-100	Spring B; P.-F. Pressure Adj.	1	7	
019-11812-106	Lock Ring	4	7	
019-11814-206	Bracket; Upper Limit Sensor	1	7	
019-11831-100	Base F;Stripper Pad	1	21,23	
019-11832-000	Cover F;Stripper Pad	1	21,23	
019-11833-006	Stripper Pad;70	1	21,23	
019-11834-002	Stripper Pad; U	1	21,23	
019-12206-005	Adj. Plate (Front); Squeegee	1	25,29	
019-12207-001	Adj. Plate (Back); Squeegee	1	25,29	
019-12208-008	Spacer; 18 x 10 x 1.8	2	25,29	
019-12210-002	Set Plate; Bottle SW	1	30	
019-12211-009	Spring; Bottle SW	1	30	
019-12214-008	Position C2 Plate	1	33,35	
019-12215-004	Position C1 Plate	1	33,35	
019-12223-104	Bracket A; Connector; Drum	1	37	
019-12301-008	Rail B; Drum	1	37	
019-12302-101	Drum Cover (Upper)	1	26,30	
019-12303-108	Drum Cover (Lower)	1	26,30	
019-12304-007	Guide Block; Drum Holder	1	37	
019-12307-006	Spring; Locking Plate; Drum	1	25,29	
019-12308-002	Drum Catch (R) II	1	37	
019-12314-002	Locking Plate II; Drum	1	25,29	
019-12315-009	Shaft; Locking Plate II; Drum	1	25,29	
019-12401-002	Compensator Plate	1	39	
019-13102-009	Paper Guide F; P. -Rcv. -T.	1	47	
019-13103-005	Paper Guide R; P. -Rcv. -T.	1	47	
019-13112-004	Reinforce Plate; P. -Rcv. -T.	2	47	
019-13115-216	Flap; P. -Rcv. -T.	16	47	
019-13116-115	Flap Cover; P. -Rcv. -T.	4	47	
019-13119-009	Lock Plate; P. -Rcv.-T.	2	3	
019-13125-106	Receiving Tray Plate	1	47	
019-13130-002	Ground Plate; P. -Rcv. -T.	1	47	

Part No.	Part Name	Q'ty	Page	Unit Value
019-13131-203	Slide Rail A; P. -Rcv. -T.	1	47	
019-13132-200	Slide Rail B; P. -Rcv. -T.	2	47	
019-13133-109	Catch Plate; P. -Rcv. -T.	1	47	
019-13137-007	Jump Wing (F); Suction	1	45	
019-13138-003	Jump Wing (R); Suction	1	45	
019-13203-000	Gear Pulley 38; Suction	1	45	
019-13301-109	Separator II	1	41,43	
019-13501-000	Cylinder; Air Pump	1	41,43	
019-13503-003	Cam Pulley; Air Pump	1	41,43	
019-13504-000	Cam Plate; Air Pump	1	41,43	
019-13507-106	Bracket; Air Pump	1	41,43	
019-13511-103	Arm; Air Pump	1	41,43	
019-13512-002	Arm Shaft; Air Pump	1	41,43	
019-13514-005	Air Hose; Separator	1	41,43	
019-13516-105	Piston Head II; Air Pump	1	41,43	
019-13517-004	Cylinder Valve II; Air Pump	1	41,43	
019-13518-000	Cylinder Valve Sheet; Air Pump	1	41,43	
019-13601-200	Gear A; Clutch	1	39	
019-13602-001	Gear B; Clutch	1	39	
019-13603-105	Drive Gear; Clutch	1	39	
019-13604-004	Idler Gear; Clutch	1	39	
019-13610-209	Bracket; Tension Pulley	1	14,18	
019-14231-007	Hinge Reinforcement; Disposal Box	1	73	
019-15125-006	Base Plate; Write Pulse Motor	1	39	
019-15253-004	Damper Gear	1	59,63	
019-15255-007	Guide Flange; Master Holder	1	59,63	
019-15270-006	Damper Case	1	59,63	
019-15273-102	Spring; Master Holder	1	59,63	
019-16002-102	Arm (L); Carriage	1	57	
019-16004-105	Arm (R); Carriage	1	57	
019-16019-005	Rail; FB-Scanner	2	57	
019-16020-003	Ground Spring; Scanner Holder	2	57	
019-16021-000	Base Plate; Ground Spring	2	57	
019-16036-104	Slide Shaft B; FB-Scanner	1	57	
019-16066-003	Cap I; CE	1	55	
019-16067-000	Cap 2; CE	1	3	
019-16070-205	Slide Guide; FB-Scanner	1	57	
019-16072-100	Plate Spring 2K	1	57	
019-16214-100	Shaft; Damper Bottom Bracket	2	55	
019-16215-009	Damper Bottom Bracket	2	55	
019-16236-103	Bracket; Interlock Switch FB	1	77	
019-17236-204	Bracket; Motor Control PCB	1	79	
019-17241-305	Shaft Stopper; Damper; CE	1	55	
019-17242-107	Bracket; Power Supply Fan	1	77	
019-17251-203	Lock Plate; Support Shaft	1	3	

Part No.	Part Name	Q'ty	Page	Unit Value
019-17252-307	Hook Plate (R); FB; CE	1	3	
019-17255-004	Support Shaft Lock	1	55	
019-18051-100	Guide; Motor Wire Harness; CE	1	14,18	
019-18121-001	Cover Plate; Power Supply	1	77	
019-18125-201	Bracket (R); System PCB; CE	1	79	
019-18126-100	Bracket (L); System PCB; CE	1	79	
019-18127-107	Reinforce Plate; System PCB; CE	1	79	
019-18128-006	Reinforce Plate; Image PCB; CE	1	79	
019-18129-002	Bracket E; Option PCB; CE	1	79	
019-18130-000	Bracket F; Option PCB; CE	1	79	
019-21201-105	Cam; Pressure Roller; A3	1	17	
019-21202-004	Spring C; Pressure Link	1	17	
019-21301-002	Shaft; Timing Roller	1	23	
019-21302-009	Bracket; Timing Roller	1	23	
019-21501-001	Shaft B; P. -F. -T.	2	11	
019-21512-100	Slide Rack F; P. -F. -T.; CE	1	11	
019-21513-107	Slide Rack; P. -F. -T.; CE	1	11	
019-21602-002	Spring; Elevator	2	7	
019-21716-008	Guide Plate (Upper)	1	23	
019-21802-206	Bracket; Feed Tray Safety SW; CE	1	7	
019-21805-205	Shaft; Pickup Roller	1	7	
019-22101-201	Drum Body Support (Right); A3	1	35	
019-22102-208	Screen Ass'y; A3	1	35	
019-22106-106	Screen Hanger(Lower)	1	35	
019-22107-102	Spring; Screen	2	35	
019-22108-206	Clamp Plate Base	1	35	
019-22111-002	Clamp Magnet A; A3	1	35	
019-22112-106	Light Absorber Strip; A3	1	35	
019-22113-102	Anti-Wrinkle Strip; Drum	1	35	
019-22203-306	Bracket; Bottle SW	1	30	
019-22206-003	Reverse Rotation Stopper B	1	25,29	
019-23204-004	Bracket F; Suction; A3	1	3	
019-23205-108	Bracket R; Suction; A3	1	3	
019-23301-107	Shaft; Separator II; A3; CE	1	43	
019-23601-208	Bracket; Suction Drive; A3	1	39	
019-23604-304	Shaft; Clutch; A3	1	39	
019-23605-505	Clutch Cover; A3	1	39	
019-24101-004	Stay A; M. -Rmv.	1	71	
019-24104-208	Guide Plate; M. -Rmv.; A3; CE	1	71	
019-24105-000	Vertical Transport Roller (Down); A3	1	71	
019-24107-002	Shaft; M. -Rmv. Hook; A3	1	71	
019-24110-100	Master Guide; M. -Rmv.; A3	1	71	
019-24111-000	Guide Plate; M. -Rmv.; A3	1	71	
019-24119-108	Vertical Transport Roller (UP); A3	1	71	
019-24126-104	Bracket; Aero Guide Sheet; CE	1	63	

Part No.	Part Name	Q'ty	Page	Unit Value
019-24127-100	Aero Guide Sheet; A3	1	63	
019-24132-104	Disposal Box Cover; A3	1	73	
019-24133-003	Disposal Box Cover B; A3	1	73	
019-24134-000	Guide Plate; Disposal Box; A3	1	73	
019-24135-006	Lever Frame; Disposal Box; A3	1	73	
019-24137-009	Guide Shaft; Disposal Box; A3	1	73	
019-24138-005	Shaft; Compression Plate; A3	1	73	
019-25006-307	Bracket; Wire Harness; CE	1	3	
019-25007-001	Shaft; Load Roller	1	65	
019-25101-105	De-electricity Brush	1	63	
019-25102-101	Bracket; De-electricity Brush	1	63	
019-25103-000	Protection Sheet; De-electricity Brush	1	63	
019-25111-003	Stocker	1	63	
019-25112-107	Stocker Cover	1	63	
019-25115-009	Set Sheet Plate; A3	1	67	
019-25116-005	Set Sheet	2	67	
019-25301-309	Cutter Cover	1	67	
019-25305-002	Master Guide Stopper Plate	1	67	
019-25306-009	Master Guide Stopper Cushion	1	67	
019-25307-102	Cutter Guide	1	67	
019-25309-008	Gear; Cutter Motor	1	67	
019-25311-100	Cutter Guide Sheet (A3)	2	67	
019-25312-300	Cutter Center Guide Sheet	1	67	
019-25501-006	Frame A; M. -M.	1	65	
019-25511-001	Spring; TPH Pressure	2	65	
019-25512-105	Bracket; TPH; A3	1	65	
019-25516-100	Set Guide Shaft	1	63	
019-25517-000	Stay R; Set Guide Plate	1	63	
019-25518-006	Stay L; Set Guide Plate	1	63	
019-25519-002	Set Guide Plate; A3	1	63	
019-25526-009	Cover A; M. -M.	1	65	
019-25531-002	Spring (Left); M. -M.	1	65	
019-25532-009	Spring (Right); M. -M.	1	65	
019-25533-005	Actuator Plate; Micro-SW	1	59,63	
019-25539-100	Shaft Flange; Master Holder	1	59,63	
019-25540-001	Holder Stay F	1	59,63	
019-25541-008	Holder Stay R	1	59,63	
019-25601-000	Tension Roller	1	63	
019-25602-007	Base Plate F; Tension Roller	1	63	
019-25603-003	Base Plate R; Tension Roller	1	63	
019-25604-000	Torque Limiter; Tension Roller	1	59,63	
019-25605-006	Copy Guide Plate (Lower)	1	65	
019-25608-005	Base A; Nip Roller	1	65	
019-25609-001	Base B; Nip Roller	1	65	
019-25610-000	Nip Roller	1	65	

Part No.	Part Name	Q'ty	Page	Unit Value
019-25612-002	Bracket; Micro-SW	1	65	
019-26201-006	Fulcrum Shaft; FB	1	3	
019-26202-800	Bottom Plate; FB-Scanner; CE	1	55	
019-26214-000	Hook Shaft; FB; A3	1	55	
019-26217-000	Bracket; Back Cover; CE	1	3	
019-26218-200	Upper Rear Frame; FB; CE	1	3	
019-27240-102	Shaft; Damper	1	55	
019-32201-204	Spring; Bottle SW; A3	1	30	
019-32203-401	Holder; Bottle SW	1	30	
019-32417-606	Clamp Plate Ass'y; II	1	35	
019-35024-109	Master Guide Plate; A3	1	63	
019-35037-006	Actuator Plate; Micro-SW; M.-M.	1	65	
019-36050-200	Main Frame; FB-Scanner; CE	1	55	
019-36501-008	Pickup Roller Frame; FB-ADF	1	51	
019-36502-004	Bracket; Pickup Solenoid	1	52	
019-36503-000	Lever Shutter R	1	51	
019-36504-007	Lever Shutter L	1	51	
019-36505-003	Claw L; FB-ADF	1	52	
019-36506-000	Claw R; FB-ADF	1	52	
019-36507-006	Lever; Pickup	1	52	
019-36508-002	Stripper Roller; ADF	1	49	
019-36509-009	Shaft; Stripper Roller	1	49	
019-36510-007	Link; Pickup Solenoid	1	52	
019-36511-003	Lever; Hook Plate	1	51	
019-36512-000	Plate; Hook Plate	1	51	
019-36514-002	Spring; Pickup Solenoid	1	52	
019-36515-009	Guide; Belt	1	49	
019-36516-005	Sheet; Original Guide Base	1	49	
019-36517-001	Spring Plate; FB-ADF	1	49	
019-36518-008	Stripper Tray; FB-ADF	1	49	
019-36519-004	Tray Spring; FB-ADF	1	49	
019-36520-002	Stripper Pad; FB-ADF	1	49	
019-36521-009	Sheet Guide; FB-ADF	3	51	
019-36522-005	Spacer; Transfer Roller	1	52	
019-36523-001	Collar; Transfer Roller	1	52	
019-36524-008	Tray Push; FB-ADF	1	49	
019-36526-000	Original Guide Base (F);FB-ADF	1	49	
019-36527-007	Original Guide (F); FB-ADF	1	51	
019-36528-003	Hook Plate; FB-ADF	1	51	
019-36529-000	Upper Frame; FB-ADF	1	51	
019-36530-008	Side Frame R; FB-ADF	1	49	
019-36531-004	Pickup Roller (Upper); FB-ADF	1	51	
019-36532-000	Shaft; Stripper Roller; FB-ADF	1	51	
019-36533-007	Frame B; FB-Original Guide	1	49	
019-36534-003	Stripper Arm; FB-ADF	1	49	

Part No.	Part Name	Q'ty	Page	Unit Value
019-36535-000	Spring; Stripper Arm	1	49	
019-36536-006	Stripper Roller; FB-ADF	1	51	
019-36537-002	Stripper Shaft; FB-ADF	1	49	
019-36538-009	Pickup Solenoid; FB-ADF	1	52	
019-36539-005	Pulley; Transfer Roller	1	51	
019-36540-003	Spring; Open Lever	1	51	
019-41226-007	Hook Lever	1	17	
019-41231-000	Shaft; Hook Lever	1	17	
019-41234-000	Stopper; Pressure Hook	1	17	
019-41237-009	Stopper; Cushion	1	17	
019-41519-004	Feed Board; CE	1	11	
019-41601-002	Guide Plate (Lower)	1	23	
019-41604-001	Bracket;Guide Plate	1	23	
019-41611-008	Scraper Cover;A3	1	7	
019-41701-007	Paper Feed Tray; CE	1	11	
019-41702-003	Paper Feed Tray; US; CE	1	11	
019-41707-005	Cover; Wire Harness; P.-F.-T.	1	11	
019-41708-001	Stopper; P.-F.-T.	1	11	
019-41711-002	Bracket; P. -F. -T.; CE	1	11	
019-41712-009	Bracket; Drive ; P.-F.-T.	1	11	
019-41717-000	Gear Cover	1	11	
019-41720-001	Bracket; Motor; P.-F.-T.	1	11	
019-41726-000	Rack; Drive; P.-F.-T.	1	11	
019-41727-006	Cover F; P.-F.-T.	1	11	
019-41728-002	Cover R; P.-F.-T.	1	11	
019-41729-009	Shaft; Cover; P.-F.-T.	2	11	
019-41730-007	Spring; Cover; P.-F.-T.	2	11	
019-41731-003	Bracket; Size VR; P. -F. -T.; CE	1	11	
019-41732-000	Actuater Plate; P. -F. -T.; CE	1	11	
019-41801-109	Cover; Pickup Roller; CE	1	7	
019-42201-008	Inking Pump Body ϕ19; A3	1	26	
019-43101-007	Set Plate F; P. -Rcv.-T.; A3	1	3	
019-43102-003	Set Plate R; P. -Rcv.-T.; A3	1	3	
019-43111-002	Receiving Tray Plate; A3	1	45	
019-43113-005	Sound-Proof; Receiving Tray Plate; A3	1	45	
019-43201-206	Cover Plate II; Suction; CE	1	45	
019-44102-007	Stay B; M. -Rmv.; CE	1	71	
019-44103-003	Base Plate; M. -Rmv; A3; CE	1	71	
019-44108-102	Upper Stay; M. -Rmv.; CE	1	71	
019-44112-002	Upper Holder B; V. - Transport Roller; A3; CE	1	71	
019-44116-105	Upper Holder A; V. - Transport Roller; A3; CE	1	71	
019-44131-104	Disposal Box; A3; CE	1	73	
019-45501-002	Master Roll Holder; A3; CE	1	63	
019-45505-008	Bracket; Micro-SW; M.-M.	1	63	
019-45506-004	Cover; Master Roll Holder	1	63	

Part No.	Part Name	Q'ty	Page	Unit Value
019-46205-008	Fulcrum Support Plate; FB; CE	1	3	
019-47003-000	Mylar Sheet; Panel SW; A3	1	75	
019-47004-006	Door; Panel; A3	1	75	
019-47105-007	Mole; 3950 UI	1	75	
019-47106-003	Mole; 3950 UP	1	75	
019-47107-000	Mole; 3950 EP	1	75	
019-47108-006	Mole; 3950 EN	1	75	
019-47109-002	Mole; 3950 AW	1	75	
019-47110-000	Mole; 3950 AN	1	75	
019-47111-007	Mole; 3950 C	1	75	
019-47112-003	Mole; 3950 UI-α	1	75	
019-47113-000	Mole; 3950 UP-α	1	75	
019-47114-006	Mole; 3950 EP-α	1	75	
019-47115-002	Mole; 3950 EN-α	1	75	
019-47116-009	Mole; 3950 AW-α	1	75	
019-47117-005	Mole; 3950 AN-α	1	75	
019-47118-001	Mole; 3950 C-α	1	75	
019-51005-106	Drum Control PCB2	1	29	
019-51023-309	Power Supply PCB VI N200; CE	1	77	
019-51031-000	Sub-Power Supply PCB; CE	1	65	
019-51038-306	Power Supply PCB VI 100	1	77	
019-51040-408	Motor Control PCB2	1	79	
019-51047-003	Option PCB A III	1	79	
019-51050-004	Panel Control PCB; A3	1	75	
019-51051-000	Main SW PCB; Panel; A3	1	75	
019-51052-007	SUB-SW-A3	1	75	
019-51053-003	System PCB 4	1	79	
019-55004-104	Wire Harness; Master Loading Unit SW	1	63	
019-55005-003	Wire Harness; M. -Rmv.	1	69,71	
019-55007-103	Wire Harness; Panel - Power	1	77	
019-55010-104	Wire Harness; Drum Inner	1	26,30	
019-55011-003	Wire Harness; Image	1	55,79	
019-55014-509	Wire Harness; CN9	1	79	
019-55015-009	Wire Harness J; Guide Plate	1	21	
019-55016-307	Wire Harness II; P. -F. -T.	1	9	
019-55024-105	Wire Harness; Disposal Box Master Sensor	1	55	
019-55027-007	Wire Harness; TPH Power	1	65	
019-55028-100	Wire Harness; CN15	1	37,79	
019-55032-000	Wire Harness; Feed Tray Safety SW	1	7	
019-55036-103	Wire Harness; Suction	1	45	
019-55060-101	Wire Harness; Power; CE	1	77,79	
019-55063-305	Wire Harness; TPH Signal T	1	61,79	
019-55065-006	Wire Harness; M. -M. -Image; CE	1	61,65	
019-55066-207	Wire Harness; CN7; CE	1	79	
019-55074-102	Wire Harness II; Counter III; CE	1	89	

Part No.	Part Name	Q'ty	Page	Unit Value
019-55076-105	Wire Harness; ADF (FB)	1	52,55	
019-55076-105	Wire Harness; ADF (FB); CE	1	79	
019-55078-108	Wire Harness; CN14; CE	1	79	
019-55080-200	Wire Harness; TPH Power A3; CE	1	65,77	
019-55103-005	Image Flexible Wire; CE3	1	57	
019-55104-001	Wire Harness; Master Loading Unit SW	1	59	
019-55105-008	Wire Harness II; CN9	1	79	
019-55107-000	Wire Harness J; Guide Plate	1	23	
019-55108-007	Wire Harness ;P.-F.-T.	1	11	
019-55109-003	Wire Harness II;P.-F.-T.	1	11	
019-55111-008	Wire Harness; Panel LCD		75	
019-60000-001	Disposal Box Master Sensor	1	55	
019-60001-008	Disposal Box Master Sensor (Rcv.)	1	69,71	
019-60010-309	Bottle Set SW	1	30	
019-60012-204	Paper Receiving Sensor (Send) IV	1	45	
019-60013-200	Paper Receiving Sensor IV (Receive)	1	41,43	
019-60014-100	Switch A; CE	1	3	
019-60015-106	Master End Sensor (Send)	1	59,63	
019-60018-105	Image Scanner 401-CE	1	57	
019-60019-101	Master Positioning Sensor II	1	67	
019-60020-002	Micro SW Ass'y 4 (Stack)	1	21,23	
019-60022-005	Master End Sensor (Receive)	1	61,65	
019-65002-100	Write Pulse Motor	1	39	
019-65003-106	Fan; Power Supply	1	77	
019-65006-008	Separation Fan	1	43	
019-65007-101	Suction Clutch	1	39	
019-65008-302	Cutter Motor Ass'y; CE	1	67	
019-65010-102	Suction Fan Ass'y; CE	1	45	
019-65012-008	Pressure Solenoid	1	13,17	
019-65014-000	Lock Solenoid	1	37	
019-65015-007	Master Removal Solenoid; T	1	69,71	
019-65016-100	Thermal Pressure Motor III Ass'y	1	65	
019-65020-000	Fan; Power Supply;II	1	77	
019-65021-104	P. -F. Clutch	1	13,17	
019-65022-003	Pulse Motor	1	11	
019-80038-	System ROM; FR	1	79	
019-80040-	FRDU	1	75	
019-80041-	FRDE	1	75	
019-80042-	FRDA	1	75	
019-91211-000	Unit/Main Motor; T		13,17	
019-91212-007	Main Motor Ass'y; T	1	13,17	
019-91220-107	Unit/Drive; CE		13,17	
019-91225-001	Main Shaft Ass'y	1	13	
019-91226-008	Main Shaft Ass'y;A4	1	13	
019-91227-004	Main Shaft Ass'y;A3	1	17	

Part No.	Part Name	Q'ty	Page	Unit Value
019-91228-000	Main Pulley; Main Shaft	1	13,17	
019-91231-001	P Disc Ass'y		13	
019-91232-008	Pressure Link Ass'y		17	
019-91310-009	Timing Roller Ass'y; A3		23	
019-91510-008	Unit/Paper-Feed Tray; A3; CE		11	
019-91511-004	Unit/Paper-Feed Tray; A3; US; CE		11	
019-91600-007	Shaft; Elevator	1	7	
019-91730-105	Unit/Guide Plate; A3		23	
019-91740-003	Unit/Stripper Pad; 70		21,23	
019-91800-200	Feed Tray Safety SW Ass'y; A3; CE		7	
019-91811-458	Scraper Ass'y; CE		7	
019-91830-002	P.-F. Pressure Adj. Lever Ass'y		7	
019-92105-000	Unit/Drum Screen; A3		35	
019-92110-003	Drum Body Ass'y; A3	1	35	
019-92200-002	Unit/Squeegee; A3		25,29	
019-92220-003	Unit/Ink Pump; A3		30	
019-92231-102	Bottle Set SW Ass'y		30	
019-92320-008	Drum Set SW Ass'y		37	
019-92420-002	Unit/Ink Pump		26	
019-93200-200	Suction Unit W; A3; CE		45	
019-93201-207	Paper Receiving Sensor IV (Receive) Ass'y		41,43	
019-93300-108	Separator Ass'y; A3; CE		43	
019-93310-006	Separation Fan Ass'y		43	
019-93320-109	Air Pump Ass'y		41,43	
019-93602-104	Unit/Clutch; A3		39	
019-94100-102	Unit/Master Removal; A3; CE		71	
019-94115-207	Holder Ass'y; V. - Transport Roller; A3; CE		71	
019-94130-109	Unit/Master Disposal Box; A3; CE		73	
019-95003-003	Unit/Master Making; A3; CE		65	
019-95030-051	TPH Ass'y; K400A3		65	
019-95040-103	Unit/Write Pulse Motor		39	
019-95050-052	Copy Guide Plate (Lower) Ass'y		65	
019-95070-100	Set Guide Plate Ass'y; A3		63	
019-95095-005	Stocker Ass'y;A3		63	
019-95100-009	Set Sheet Plate Ass'y; A3		67	
019-95211-005	Guide Flange Ass'y		59,63	
019-95300-202	Unit/Cutter ; A3; CE		67	
019-96051-109	Flat Bed PCB II	1	55	
019-96105-101	Interlock Switch; FB		77	
019-96110-113	Unit/Upper Rear Frame; FB; CE		3	
019-96220-008	Ass'y/Digitizer Stage Cover; FB	1	85	
019-97090-000	LCD; Panel	1	75	
019-97309-053	Unit/Operation Panel; 3950		75	
019-97310-051	Unit/Operation Panel; 3950 US		75	
019-97311-058	Unit/Operation Panel; 3950 Pic.		75	

Part No.	Part Name	Q'ty	Page	Unit Value
019-97314-006	Key Board Cover; 3950	1	75	
019-97315-002	Key Board Cover; 3950 US	1	75	
019-97316-009	Key Board Cover; 3950 Pic.	1	75	
019-97317-005	Sub-Panel Ass'y; 3950	1	75	
019-97318-001	Sub-Panel Ass'y; 3950 US	1	75	
019-97319-008	Sub-Panel Ass'y; 3950 Pic.	1	75	
019-97322-050	Unit/Operation Panel; 3950		75	
019-97323-056	Unit/Operation Panel; 3950 US		75	
019-97324-001	Unit/Operation Panel; 3950 Pic.		75	
019-97333-000	Unit/SC Panel		75	
019-97334-007	Unit/SC Panel; Pic.		75	
025-55001-102	Wire Harness; TM-I/F	1	89	
026-55040-008	Wire Harness; GR-TM2500	1	89	
101-51001-004	Power Supply PCB	1	87	
101-51015-005	32MB SIMM RAM	1	87	
101-55000-002	SCII Cable (Video Cable); 10M	1	89	
408-02300-001	Battery	1	85	
408-02301-008	Battery; CR-2450	1	79	
435-00018-004	TDK Core; HF70SH40 x 1.3 x 8	1	57	
435-00020-009	Core; TR-23-11-14	1	83	
435-00025-000	Core; SFC-6	1	14,18,45	
435-00027-003	Ferrite Core; SFC-10	1	85	
443-00120-609	Micro-SW; E21-91N	1	37	
443-00121-109	Micro-SW; 21-52N	1	69,71	
443-00210-004	Micro-SW; DDIL-AIAA	2	77	
443-02000-708	Micro-SW; AM50630A331	2	7,9,11	
443-02004-002	Micro-SW; AM50039C331F1SW	1	3	
443-02006-005	Micro-SW; ABV1236413	2	45	
443-02007-001	Micro-SW; AM50036C331	2	61,65	
443-02008-008	Micro-SW; AM50030C331	1	59,63	
443-02017-007	Mcro-SW; AM50610C431F1	2	11	
443-10802-007	Power-SW; AJ921100B3	1	87	
443-11108-007	Power Switch; RS31-AJAJ	1	77	
443-30002-007	Sensor K; PS-R11LB	1	9,11	
443-30005-006	Sensor; GP1A71A	2	14,17,69,71	
443-31003-007	Sensor; OJ-620331	8	7,11,13,17,55	
443-32001-008	Sensor S; GP2A20L	1	9,11	
481-30004-000	Gasket; 80	1	55	
481-30006-003	Gasket; 38	1	57	
481-30007-000	Ground Finger	2	4	
481-30009-002	Gaslet; PCB1	1	85	
481-30010-000	Gasket; PCB2	2	85	
481-30011-007	Gaslet; PCB3	1	85	
481-30012-003	Gasket; LCDF	1	85	
481-30013-000	Gasket; LCDR	1	85	

Part No.	Part Name	Q'ty	Page	Unit Value
484-00000-800	Pilot Lamp	1	26,30	
485-00001-600	Fuse 10A 125V 6.3 CES6	1	77	
485-00001-804	Fuse 8A 125V5.2 ULTSC	1	77	
485-00003-203	3.15A 250V 5.2 MM DIA.SET FUSE	8	77	
485-00003-300	5A 250V 5.2 MM DIA.SET FUSE	1	77	
485-00003-408	Fuse 3.15A 125 V ULTSC	8	77	
485-02520-000	6.3A 250V 5.2MM DIA.FUSE	1	77	
488-00013-103	Power Cord; 100V	1	79	
488-00014-100	Power Cord; US	1	79	
488-00015-106	Power Cord; 200V	1	79	
488-00033-007	Power Cord; Ch	1	79	
488-90019-105	Ground Wire; R4-440-R4	1	83	
488-90021-002	Ground Wire; U3-1000-R4	1	3,79	
488-90026-004	Ground Wire; P. -F. -T.	1	9	
488-90027-000	Ground Wire; RS3-100-RS3	1	61	
505-00350-005	Cap Spacer	1	65	
550-20059-108	Seal; P. -F. -T. Down	1	69,71	
550-20118-104	TPH Seal	1	61,65	
550-20228-104	TPH Seal; Pic.	1	61,65	
550-20590-105	Seal; P. -F. -T.	1	9	
550-20670-001	Seal; M. -M.; CH	1	61,65	
550-20671-105	Seal; M. -M.	1	61,65	
550-20672-101	Seal; M. -M.; Pic.	1	61,65	
550-20682-204	Seal; Original Size	1	81	
550-20687-001	Seal; P.-Feed Pressure	1	7	
550-20688-008	Seal; P.-Feed Pressure; Pic.	1	7	
550-20690-002	Seal; Master Disposal	1	73	
550-20691-009	Seal; Master Disposal; Pic.	1	73	
550-20693-001	Seal; Set Disposal Box	1	73	
550-20694-008	Seal; Set Disposal Box; Pic.	1	73	
550-20713-002	TPH Seal; CH	1	61,65	
550-20760-000	Seal; Image Scanner	1	49	
550-20764-006	Digitizer Seal; Ja, US	1	85	
550-20861-001	Digitizer Seal; Gr	1	85	
550-20862-008	Digitizer Seal; Fr	1	85	
550-20863-004	Digitizer Seal; It	1	85	
550-20864-000	Digitizer Seal; Sp	1	85	
550-20865-007	Digitizer Seal; In	1	85	
550-20866-003	Digitizer Seal; Ch	1	85	
550-20867-000	Digitizer Seal; Kr	1	85	
550-20965-001	Seal; Setting Master; Pic.	1	63	
550-20987-005	Seal; Setting Master	1	59,63	
550-20988-109	Seal; Setting Master;Pic.	1	59	
550-21073-007	Seal; P. -Rcv. -T.; Caution	1	59,63	
550-21121-001	Seal; P. -F. -T.; US	1	9	

Part No.	Part Name	Q'ty	Page	Unit Value
550-21140-006	Seal; Paper Guide Set; CH	1	63	
550-21141-002	Seal; Paper Guide Set	1	59,63	
550-21142-009	Seal; Paper Guide Set; Pic.	1	59,63	
550-21292-108	Seal; Paper Side Guide	1	9,11	
550-21293-104	Color Seal Set		30	
550-21296-103	Seal; P. -Rcv. -T.; US	1	47	
550-21298-114	Seal; P. -Rcv. -T.; Pic.	1	47	
550-21299-102	Seal; P. -Rcv. -T.	1	47	
550-21300-003	Seal; Master Cut; Pic.	1	3	
550-21305-005	Seal; Master Cut	1	3	
550-21306-109	Seal; Master Cut; Pic.	1	3	
550-21505-004	Seal; Paper Side Guide; Ch	1	9,11	
550-21527-008	Seal; P. -Rcv. -T.; CH	1	47	
550-21736-006	Seal; Ink (Black);Pic.	1	26	
550-21737-002	Seal; Drum Holder; Pic.	1	37	
550-21742-006	Seal; Ink (Black)	1	26	
550-21743-002	Seal; Ink (Black); CH	1	26	
550-21744-009	Seal; Drum Holder	1	37	
550-21745-005	Seal; Drum Holder; CH	1	37	
600-06105-001	Bearing; DDLF-1060ZZH	2	59,63	
600-06172-205	Bearing; F-606ZZ1	1	57	
600-08168-000	Bearing NMB; LNR-1680HH	2	45	
600-08168-108	Bearing; SC866ZZNR/1K	2	39	
600-08242-006	Bearing; 628ZZ	6	13,17	
600-20061-009	Bearing; 608ZZ	1	13,17	
600-50046-004	Bearing; FLAWBC6-12ZZA	4	45,57	
600-50059-017	Bearing; FLW688ZZ	3	21,23,59,63	
601-10192-005	Bearing; 6800ZZ	2	25,29	
607-05001-009	Metal; S6 x 10 x 6	1	63	
607-09001-003	Metal; S14 x 18 x 4.5	2	3	
607-10000-010	Metal; F3 x 5 x 3; 8 x 1.4	1	25,29	
607-11000-200	Metal; F4 x 7 x 6; 10 x 1.5	4	61,65	
607-11001-002	Metal; F4 x 6 x 2.2; 8 x 1	1	14,17	
607-11003-005	Metal; F4 x 6 / 5.6 x 5.9; 9 x 1	2	45	
607-12001-006	Metal; F5 x 10/9 x 4; 12 x 1.5	1	7	
607-13000-003	Metal; F6 x 10/9 x 4; 12 x 1.5	6	13,17,45,71	
607-13000-020	Metal; F6 x 10/9 x 4; 12 x 1.5	2	69	
607-13000-402	Metal; F6 x 10/9 x 6; 12 x 1.5	4	21,23,69,71	
607-13000-607	Metal; F6 x 9 x 7; 11 x 1	2	65	
607-13003-002	Metal; F6 x 8 x 3; 10 x 1	2	61,65	
607-15000-000	Metal; F8 x 13/12 x 5; 16 x 2	4	7,21,23,41,43	
607-15000-809	Metal; F8 x 16 x 6; 18 x 2	2	59,63	
607-15002-003	Metal; F8 x 12 x 5; 16 x 2	2	13,17	
607-15006-009	Metal; F8x16x5; 18x1.1	2	9	
607-16000-403	Metal; F10 x 15/14 x 5.5; 20 x 2.5	1	7	

Part No.	Part Name	Q'ty	Page	Unit Value
607-16000-802	Metal; F10 x 18/16 x 5; 22 x 1.5	2	7	
607-17000-105	Metal; F12 x 18 x 10; 24 x 2.5	2	21,23	
607-50806-409	Liner; R-MLC0806M	2	59	
607-71420-004	Washer; 14X20X0.8	1	13,17	
610-00007-004	HG Damper; 2G50-E	1	59,63	
610-00010-005	Damper; FB	2	55	
611-01420-000	Pulley; ϕ 14 x 8	1	57	
611-30090-000	Pulley; P63/20-2M-6; HTD	1	57	
611-42100-001	Pulley; P21-3M060 (HTD)	1	7	
611-42600-004	Pulley; P26-3M060 (HTD)	1	7	
612-03103-009	Gear B; 1.25 x 14	2	69,71	
612-12307-008	Gear;m1x35x9	1	11	
612-80601-003	Gear;m0.5x63+m0.8x14	1	11	
612-81300-007	Gear;m0.8x36+m0.8x14	1	11	
612-81400-001	Gear;m0.8x49+m1x14	1	11	
620-20714-005	Belt; B71M x L4.8	1	39	
620-21209-002	Squeegee Belt; B120M x L-9.5	1	25,29	
620-21429-002	Belt; B142 M x L-9.5	1	39	
620-21909-004	Belt; B190 M x L-9.5	1	39	
620-22394-008	Belt; 239-M x L-4.8	1	45	
620-31776-002	Belt; 177-3M-6	1	7	
620-32916-002	Belt; 291-3M-6	1	69,71	
620-62256-007	Belt; B60S3M225	1	45	
620-73758-004	Belt; 375-5GT-8	1	41,43	
620-78309-003	Belt; 830-5GT-11	1	13,17	
620-82006-007	Belt; 106100 x 6 HTD	1	57	
620-89996-002	Belt; 106614 x 6 HTD	1	57	
620-97506-006	Belt; 750-3GT-6	2	13,17,39	
634-05020-000	Collar; ϕ 5.1 x 2.5	1	39	
635-11307-106	Stepped Screw; 3 x 7	10	83	
635-17523-005	Stepped Screw; ϕ5x2; M3x3	1	21,23	
635-17613-004	Stepped Screw; M3 x 4	3	7	
635-17614-000	Stepped Screw;M4 x 4.5	2	61,65	
635-17624-006	Stepped Screw; ϕ6x2.2; M4x2.5	1	21,23	
635-17634-206	Stepped Screw; 6x3.1; M4x4	2	37	
638-90000-012	Washer; 18 x 10.4 x 0.4	1	7	
638-90000-020	Washer; 18 x 10.2 x 0.2	3	25,29	
638-90616-005	Washer; 6.1 x 12 x 1.6	3	9,11,13,17	
638-90804-006	Washer; 8 x 15 x 0.4	1	13,17	
639-00405-008	Washer; 4 x 6.5 x 0.5	1	49	
640-60080-010	O Ring; P8-1.9	2	25,29	
640-60100-100	O Ring; P10A-2.4	1	26,30	
640-60140-004	O Ring; P14-2.4	3	25,26,29,30	
640-60220-016	O Ring; P22-2.4	1	26,30	
640-67340-009	O Ring; 34-3.6	1	41,43	

Part No.	Part Name	Q'ty	Page	Unit Value
640-70030-100	V Ring; VRY2.7 x 3.5 x 4.1	1	25,29	
660-01000-200	Rubber Foot K-45	4	3	
660-05000-018	Magnet Catch SM50P	2	3,4	
660-05000-301	Magnet Catch; SM-41	1	7	
660-05500-100	Magnet TDK REC 18 D5 x 2	1	35	
660-05500-606	Magnet TDK REC 22 D5 x 2.2	1	33	
665-02025-504	Wire Saddle; WS-4W	1	77	
665-02031-008	Clamp; CP2311	2	45	
665-02043-006	Wire Saddle; LWS-1316	6	59,61,77,79	
665-02045-009	Wire Saddle; LWSS-1N	1	77	
665-02901-002	Power Band T10	2	41,43	
665-04014-003	Snap Bushing; SB-2000-26	3	65,79	
665-04037-003	Free Bushing; NJ-23	1	79	
665-04950-205	Nut; E-632	4	39	
665-04951-104	Clip; Stylus Pen Holder	1	85	
665-09004-006	Stylus Pen Holder	1	85	

Part No.	Part Name	Q'ty	Page	Unit Value
X-500	PIN;2X8	10		
X-510	PIN;2X10	10		
X-520	PIN;2X12	10		
X-530	PIN;2X14	10		
X-540	PIN;2.5X8	10		
X-600	JUNCTION CONNECTOR;2P	5		
X-610	JUNCTION CONNECTOR;3P	5		
X-620	JUNCTION CONNECTOR;4P	5		
X-630	JUNCTION CONNECTOR;5P	5		
X-640	JUNCTION CONNECTOR;6P	5		
X-650	PLASTIC E RING	10		
X-000) numbered Parts are available only by				
of tens or fives as indicated.				

Part No.	Part Name	Q'ty	Page	Unit Value